



Epson Projector Content Manager Operation Guide

Introduction to the Epson Projector Content Manager Software 3

Epson Projector Content Manager Features4

Setting Up the Software for the First Time 5

Installing the Software6

System Requirements 6

Installing the Epson Projector Content Manager Software (Windows/Mac)6

Supported Projectors7

Editing and Exporting Playlists 8

Playlist Editing 9

Supported File Types for Playlists9

Creating a New Project11

Opening an Existing Project11

Creating Playlists 12

Adding Effects to a Playlist 17

 Customizing Shape Effect Filters for a Playlist21

Scheduling Playlists 23

Exporting a Project to an External Storage Device26

Exporting a Project to an External Storage Device on Computer 26

Exporting a Project to an External Storage Device on Networked Projector 26

Solving Problems 28

Solving Epson Projector Content Manager Problems 29

Screen Summary 30

Main Screen31

Project Screen 32

Project Screen - Playlists Tab32

 Preview Screen34

 Effect Settings Screen 34

Project Screen - Shape Filter Tab 35

Project Screen - Time Table Tab36

Register Projector for Synchronized Playback Screen/Export Network Projector

Screen 37

Appendix 39

Uninstalling the Software 40

Uninstalling the Epson Projector Content Manager Software (Windows 10/

Windows 11) 40

Uninstalling the Epson Projector Content Manager Software (Mac)40

Notices 41

Copyright Notice 41

About Notations41

General Notice 41

Copyright Attribution 42

Introduction to the Epson Projector Content Manager Software

See the information here to learn more about the Epson Projector Content Manager software.

▶▶ Related Links

- "Epson Projector Content Manager Features" [p.4](#)

The Epson Projector Content Manager software allows you to combine images and movies as a playlist on your computer and play them back from projectors. You can use one of the following methods to play back the playlist from the projector.

- Save the playlist to an external storage device and insert the device into the projector
- Save the playlist to the projector via a network (an external storage device for saving the playlist must be inserted into the projector)



Depending on the projector, the supported storage devices differ. See your projector *User's Guide* for details.

- Simultaneous playback

You can play the same playlist at the same time on multiple projectors.



This function is available only for supported models. See your projector *User's Guide* for details.

► Related Links

- "Creating Playlists" [p.12](#)
- "Preview Screen" [p.34](#)
- "Adding Effects to a Playlist" [p.17](#)
- "Scheduling Playlists" [p.23](#)

You can use a variety of playlist control functions as necessary.

- Adding effects to a playlist

You can add effects such as intervals, transitions, loop playback, brightness, and color and shape effect filters to a playlist. You can also customize the shape effect filters.

- Scheduling playlists

You can specify when each playlist starts and finishes. Scheduled playlists begin automatically. This feature is useful when you want to periodically repeat the same playlist.

- Previewing a playlist

You can preview the playlist on the computer screen.

Setting Up the Software for the First Time

Follow these instructions to install the Epson Projector Content Manager software.

►► Related Links

- "Installing the Software" [p.6](#)

Check the system requirements necessary to run the software, and then install the software.



If the language selected for the installation differs from the language of the operating system being used, the screens may not display correctly.

►► Related Links

- "System Requirements" [p.6](#)
- "Installing the Epson Projector Content Manager Software (Windows/Mac)" [p.6](#)
- "Supported Projectors" [p.7](#)

System Requirements

Your computer must meet the following system requirements to use the Epson Projector Content Manager software.

Requirement	Windows	Mac
Operating system	Windows 10 • Windows 10 Home (32- and 64-bit) • Windows 10 Pro (32- and 64-bit) • Windows 10 Enterprise (32- and 64-bit)	macOS • macOS 11 (BigSur) • macOS 12 (Monterey) • macOS 13 (Ventura) • macOS 14 (Sonoma) • macOS 15 (Sequoia) • macOS 26 (Tahoe)
	Windows 11 • Windows 11 Home (64-bit) • Windows 11 Pro (64-bit) • Windows 11 Enterprise (64-bit)	
CPU	Intel Core i5 or faster (Intel Core i7 or faster recommended)	• Intel Core i5 or faster (Intel Core i7 or faster recommended) • Apple M1 or later (Apple Silicon)
Memory	2 GB or more (16 GB or more recommended)	8 GB or more (16 GB or more recommended)
Hard disk space	2 GB or more	
Display	Resolution between 1280 × 800 or 1366 × 768 (WXGA) and 1920 × 1200 (WUXGA) 32-bit color or greater	

Installing the Epson Projector Content Manager Software (Windows/Mac)

Download and install the Epson Projector Content Manager software on your computer.

Visit [epson.sn](https://www.epson.sn) to download the latest version of the Epson Projector Content Manager software for Windows.

You can download the latest version of the Epson Projector Content Manager software for Mac for free from the App Store.



- You need administrator authority to install the Epson Projector Content Manager software (Windows).
- You need to install Microsoft .NET Framework 4.8 before installing the Epson Projector Content Manager software (Windows).

1 Download the latest version of the Epson Projector Content Manager software.

2 Follow the on-screen instructions.

Supported Projectors

To use the Epson Projector Content Manager software, your projector must support the Content Playback function.



The movie file type that the projector supports varies depending on your projector.

Editing and Exporting Playlists


Follow these instructions to edit playlists and export them to an external storage device.

►► Related Links

- "Playlist Editing" [p.9](#)
- "Exporting a Project to an External Storage Device" [p.26](#)

You can create playlists that contain images, movies, or both. You can also add effects to the playlists and schedule when they should play. Multiple scheduled playlists can be saved in one project.

Project

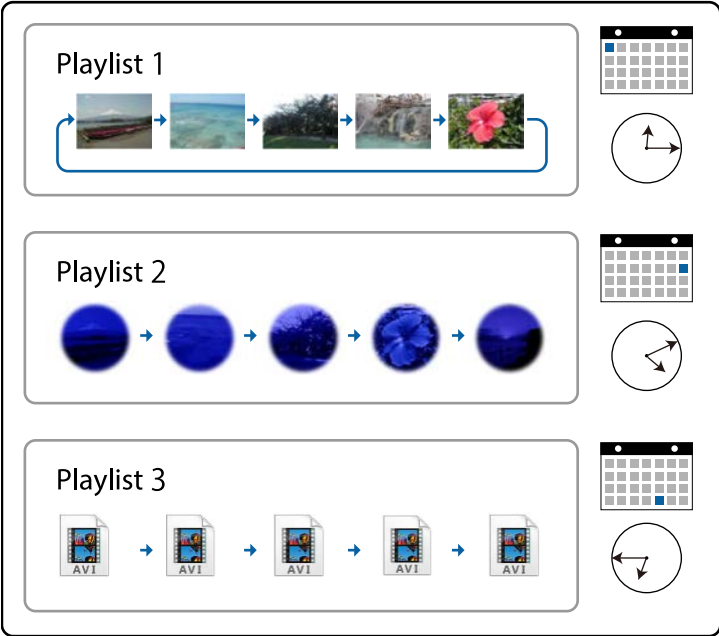

▶▶ Related Links

- "Supported File Types for Playlists" [p.9](#)
- "Creating a New Project" [p.11](#)
- "Opening an Existing Project" [p.11](#)
- "Creating Playlists" [p.12](#)
- "Adding Effects to a Playlist" [p.17](#)
- "Scheduling Playlists" [p.23](#)

Supported File Types for Playlists

You can use these types of files for playlists.

Image file type (extension)	Details
.jpg	Make sure the file is not: • Highly compressed • Above 8192 × 8192 resolution
.bmp	Make sure the file is not: • Above 8192 × 8192 resolution
.gif	Make sure the file is not: • Above 8192 × 8192 resolution • Animated
.png	Make sure the file is not: • Above 8192 × 8192 resolution

Movie file type (extension)	Details
.avi (Motion JPEG)	Supports only AVI 1.0. - Resolution: 1280 × 800 or less - Resolution: 320 × 240 or more - Size: 2 GB or less - Frame Rate: up to 30 fps - Audio Codec: LPCM - Audio Channel: up to 2ch (channel 2) - Audio Bit: 8 bits or 16 bits - Audio Sampling Rate: 11.025 kHz, 16 kHz, 22.05 kHz, 24 kHz, 32 kHz, 44.1 kHz, 48 kHz
.mp4 (MPEG-4 ASP, H.264/MPEG-4 AVC *)	Converted to AVI or MP4 file format when added to the playlist depending on the movie file format setting of the project. You can check the setting of a movie file format on the Settings tab of the main screen. - Movie Codec: MPEG-4 ASP, H.264/MPEG-4 AVC - Resolution: 4096 × 2160 or less - Resolution: 320 × 240 or more - Frame Rate: up to 30 fps - Audio Codec: MPEG-4 AAC-LC, LPCM - Audio Channel: up to 2ch (channel 2) - Audio Bit: 8 bits, 16 bits or 24 bits - Audio Sampling Rate: 11.025 kHz, 16 kHz, 22.05 kHz, 24 kHz, 32 kHz, 44.1 kHz, 48 kHz

Movie file type (extension)	Details
.wmv (WMV9) (Windows only)	Converted to AVI file format when added to the playlist. - Movie Codec: WMV9 - Resolution: 4096 × 2160 or less - Resolution: 320 × 240 or more - Frame Rate: up to 30 fps - Audio Codec: WMA9 - Audio Channel: up to 2ch (channel 2) - Audio Bit: 8 bits, 16 bits or 24 bits - Audio Sampling Rate: 11.025 kHz, 16 kHz, 22.05 kHz, 24 kHz, 32 kHz, 44.1 kHz, 48 kHz

* High Profile version or earlier is supported.



- Files that Windows Media Player or QuickTime cannot play are not supported.
- If the file resolution is above 1280 × 800, the file is resized to fit the resolution when converted.
- After converted, if the file size is larger than 2 GB, the file is split into multiple files.

► Related Links

- "Creating Playlists" [p.12](#)

Creating a New Project


You need to create a project to combine and save playlists before creating playlists.

- 1 Start the Epson Projector Content Manager software.
 - Windows: Select **Start**, **EPSON Projector**, and then select **Epson Projector Content Manager Ver.X.XX**.
 - Mac: Double-click **Epson Projector Content Manager** from the **Applications** folder.

The main screen is displayed.

- 2 Select the **Create project** tab.

- 3 Enter a project name and specify the resolution and the location in which to save it, and click the **Create** button.

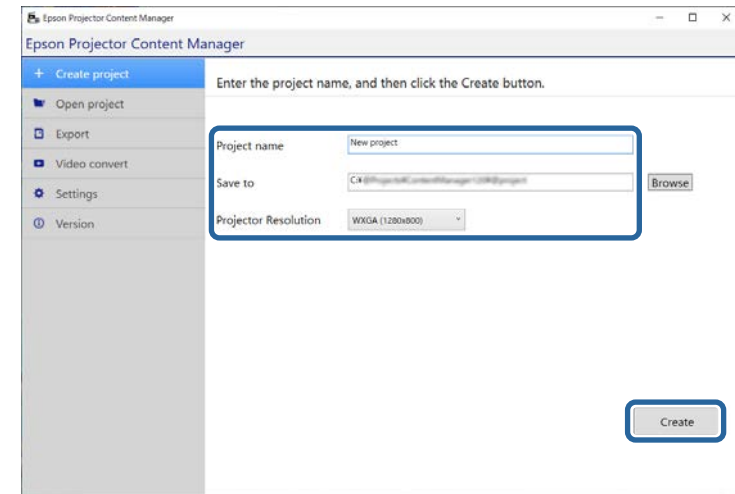

The project screen is displayed and now you can create playlists.

» Related Links

- "Creating Playlists" [p.12](#)

Opening an Existing Project


You can open the project that you have created previously so that you can add or edit playlists.

- 1 Start the Epson Projector Content Manager software.

- Windows: Select **Start**, **EPSON Projector**, and then select **Epson Projector Content Manager Ver.X.XX**.
- Mac: Double-click **Epson Projector Content Manager** from the **Applications** folder.

The main screen is displayed.

- 2 Select the **Open project** tab and select the project by browsing the folders or external storage device (SD/USB memory), or using the recently used project list.

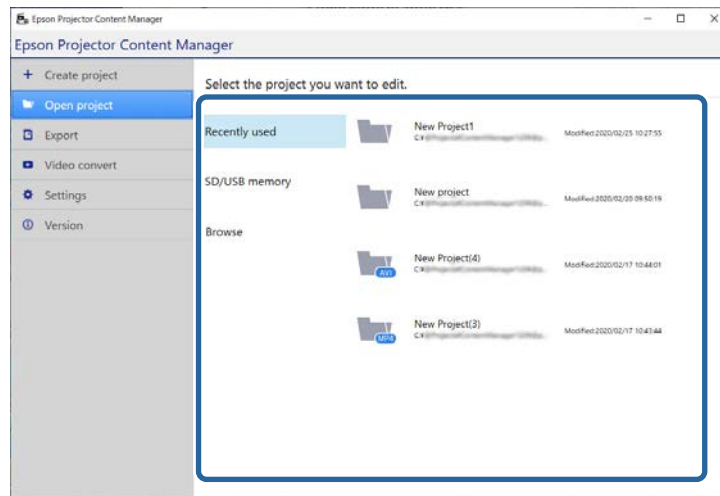

If you select the project that was created by Epson Projector Content Manager Ver.1.10 or earlier, the conversion window is displayed and the project format will be converted into the format of Ver.1.20 or later on opening the project.

The project screen is displayed and now you can create playlists.


► Related Links

- "Creating Playlists" [p.12](#)

Creating Playlists


You can create playlists and save them to a project that you can export to an external storage device.

- 1 Open the project screen.

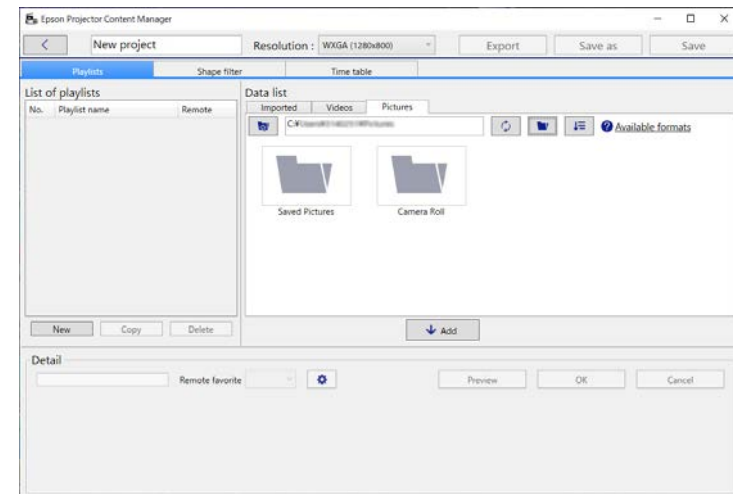




If you open an existing project and want to add a new playlist, click the New button.

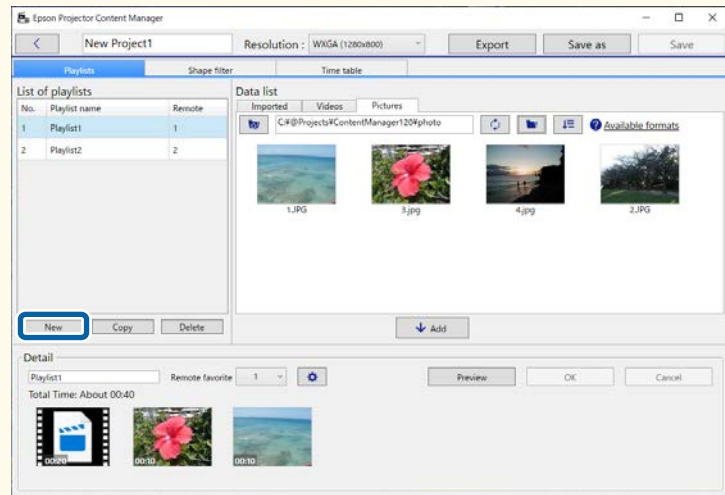

- To add movies, switch to the **Videos** tab, click  and select the folder.

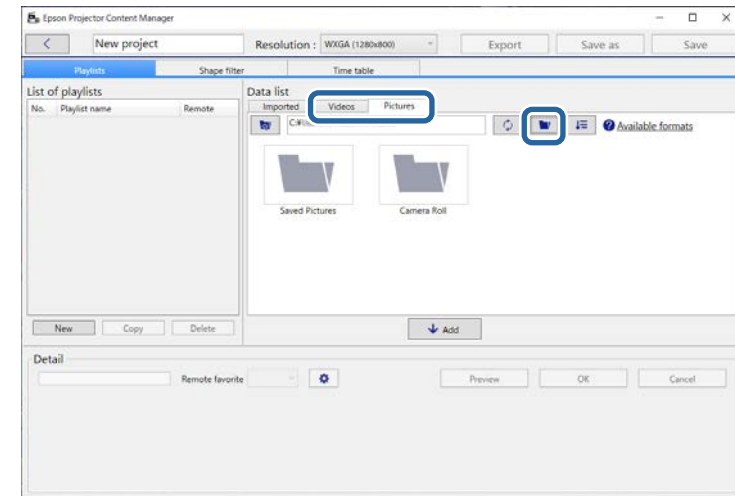

2 Select the folder containing the images or movie files you want to add to the playlist.


- To add images, click  in the **Pictures** tab in the **Data list** area and select the folder.



- On the folder selection screen displayed after clicking , although you can see any files in the folders, note that you can select folders only.
- To view information about the supported file types, click **Available formats**.

All images or movies stored in the folder are displayed in the **Data list** area.

- 3** In the **Data list** area, select images in the **Pictures** tab or movies in the **Videos** tab and click the **Add** button to add them to the playlist.

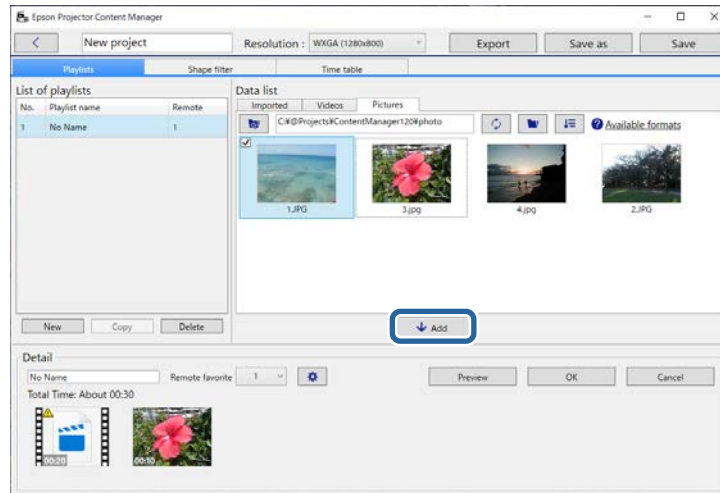


The files are added to the **Detail** area.




- Each selected file is marked with  in the **Data list** area.
- Any file with  in the **Detail** area will be converted to the file format that the projector supports when added to the playlist.
- If a file you selected in the **Videos** tab cannot be converted, the file is not added to the **Detail** area.
- You cannot add the files to the **Detail** area if there are more than 20 movie files that need to be converted.
- The selected files will be listed in the **Imported** tab of the **Data list** area after you click the **OK** button.
- You can also add files to the playlist by dragging and dropping them from the **Data list** area or directly from a folder.

- 4** To change the display order of files in the playlist, drag and drop them into the desired order in the **Detail** area.

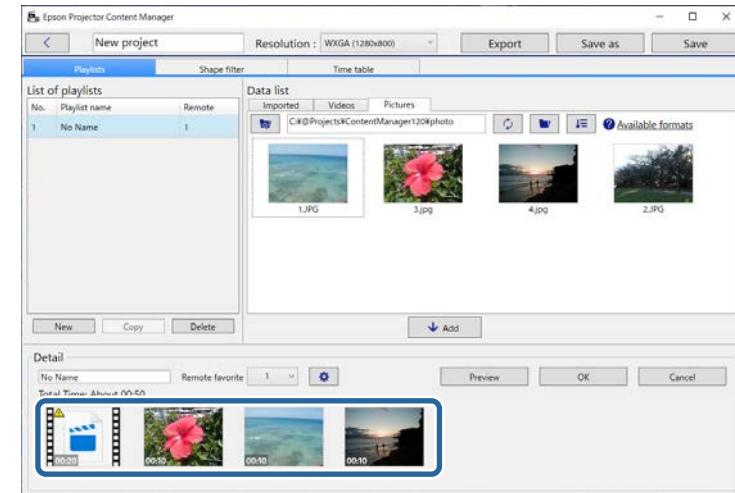


- 5** To delete a file from the playlist, hover the mouse pointer over the file and click  displayed on the file.


- 6** Edit the playlist name in the **Detail** area if necessary.

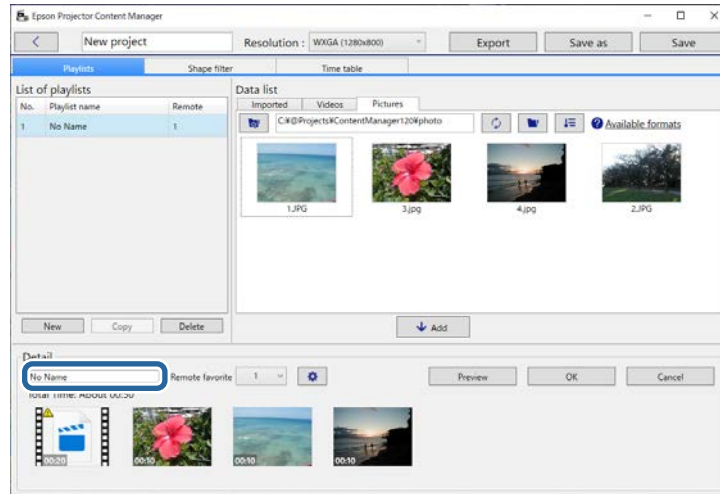

- 7** If you want to assign a specific number to the playlist, you can select it as the **Remote favorite** setting. This lets you start the playlist directly by pressing the corresponding numeric button on the projector's remote control.

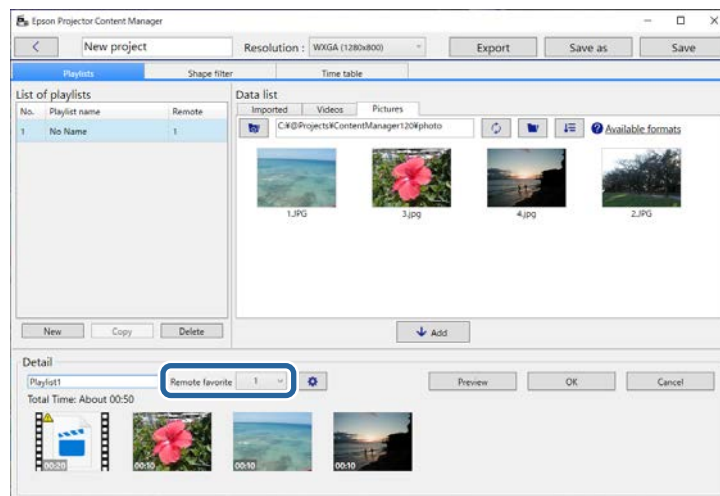


- 8** Click the OK button to save the playlist.

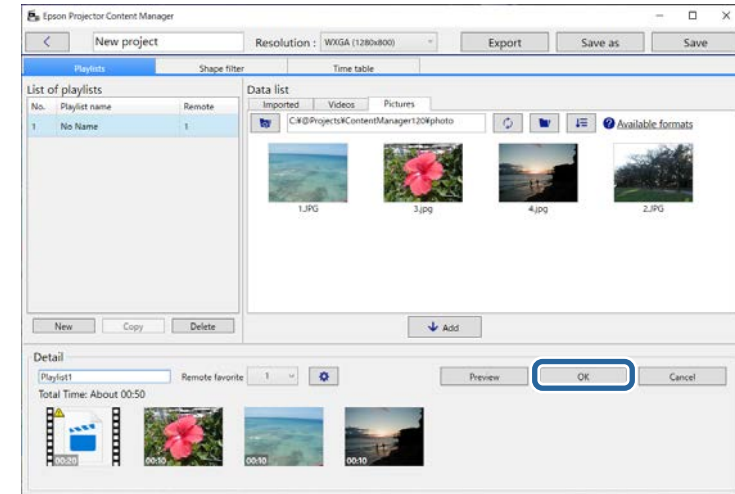


If there are some movie files that need to be converted in the **Detail** area, the conversion starts. You can confirm the conversion status in the **Conversion progress** screen displayed.

- 9** Click the **Preview** button to preview the playlist.

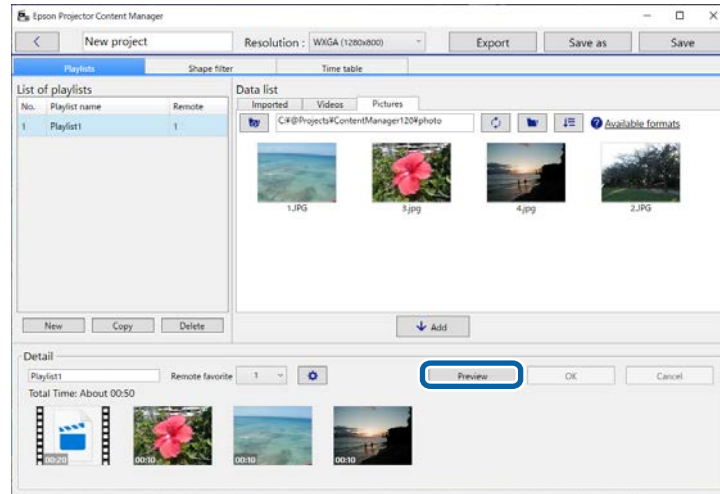


You can also add effects to the playlist in the **Effect settings** screen. See the section in this guide covering adding effects to the playlist.

- 10** If you want to create multiple playlists and add them to the same project, click the **New** button to add a new playlist. Repeat steps 2 through 10 for each playlist you create.

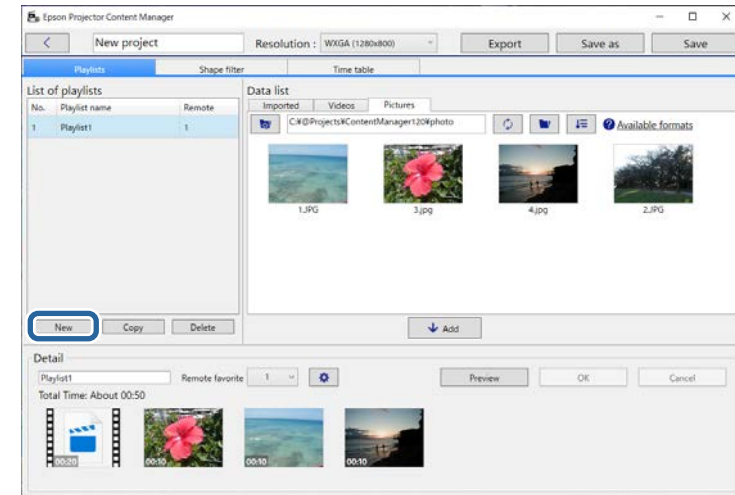

You can reorder playlists in the project by dragging and dropping them in the **List of playlists** area.

- 11** When you finish adding and editing all the playlists in your project, click the Save button to save the project.

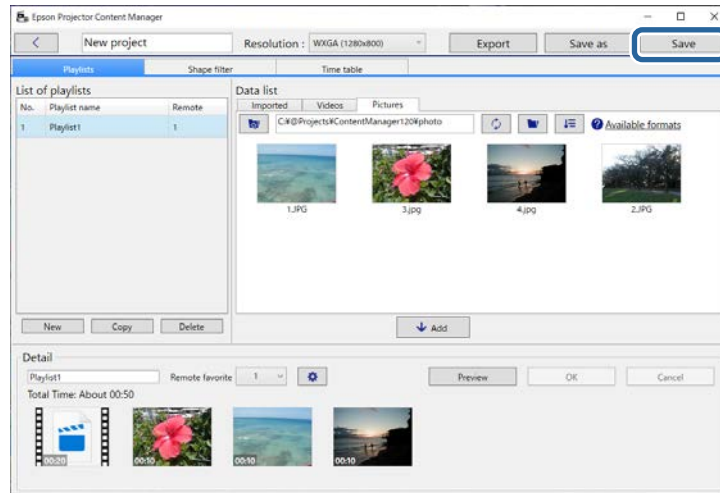

The project is saved to the computer.



You can also schedule playlists in the **Time table** tab. See the section in this guide covering scheduling playlists.


► Related Links

- "Supported File Types for Playlists" [p.9](#)
- "Adding Effects to a Playlist" [p.17](#)
- "Scheduling Playlists" [p.23](#)
- "Project Screen" [p.32](#)
- "Effect Settings Screen" [p.34](#)
- "Exporting a Project to an External Storage Device" [p.26](#)


Adding Effects to a Playlist

You can select effects for a playlist.

- 1** Open the project screen.

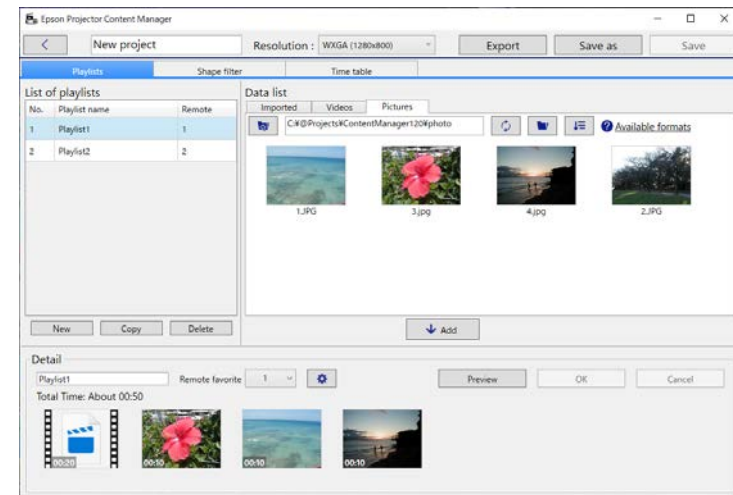


- 2** Select the playlist name that you want to add effects to from the List of playlists.

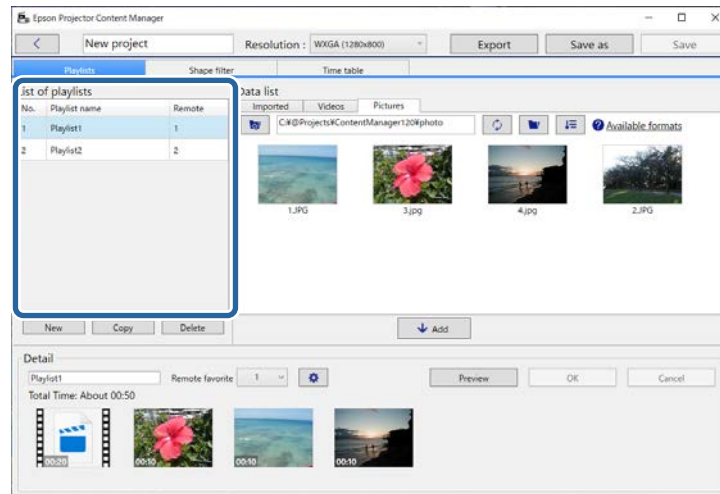


If there are not any playlists in the project, create a playlist before setting the effect.


- 3** Click the **Preview** button to open the **Preview** screen.

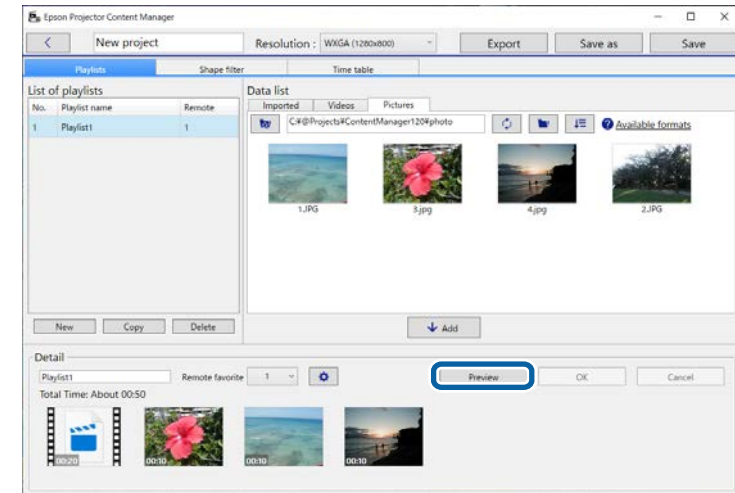

- 4** Click  to open the Effect settings screen.

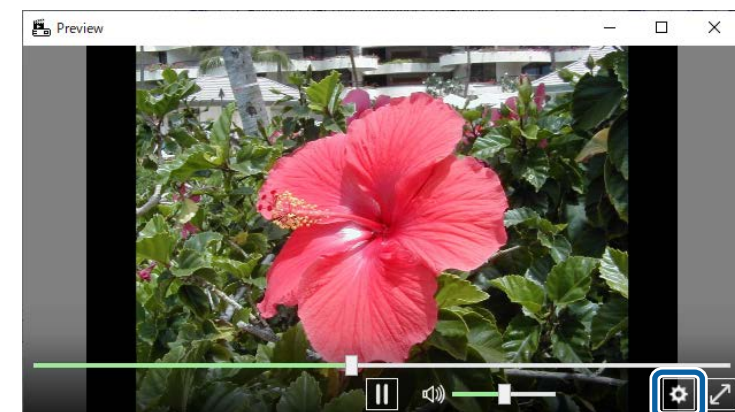


- 5** Select the **Duration (secs.)**, **Transition**, **Repeat**, and **Overlay Effect** settings while checking the preview in the **Preview** screen.

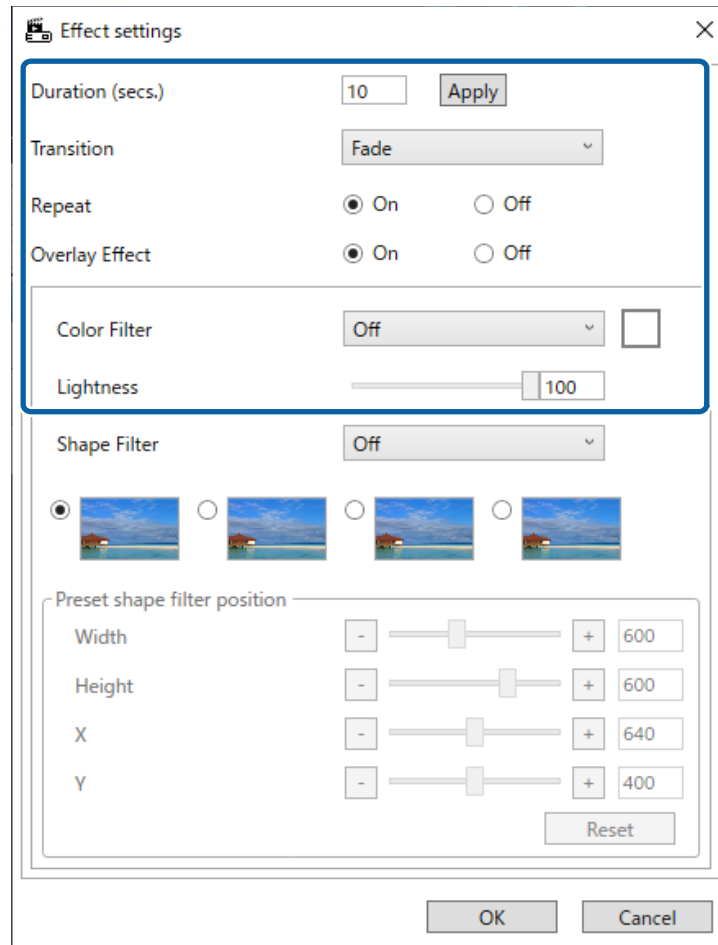


- 6** When you want to use a shape effect filter, select the target filter name as the **Shape Filter** setting.

- **Circle 1 to Circle 3 or Rectangle 1 to Rectangle 3:** These are standard filters. You can change the size and position of the shape effect filter by adjusting **Preset shape filter position** value.
- **Custom 1 to Custom 4:** You can customize these filters in the **Shape Filter** tab from the project screen.

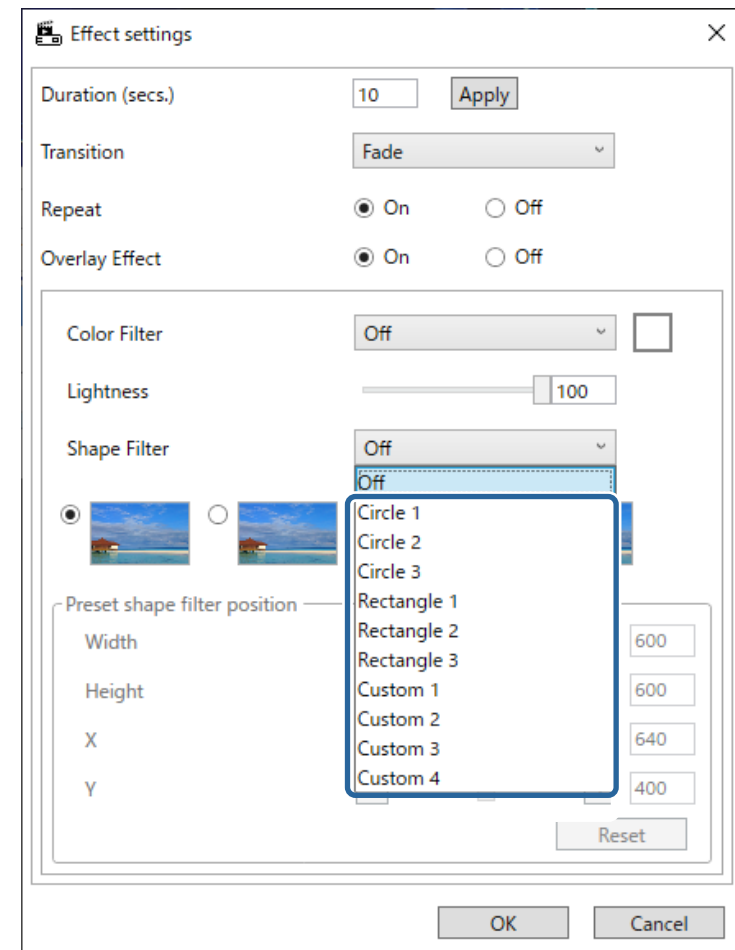

If you select the filter name other than **Off**, four types of image effects are displayed.


- 7 Select the image effect you want to use.

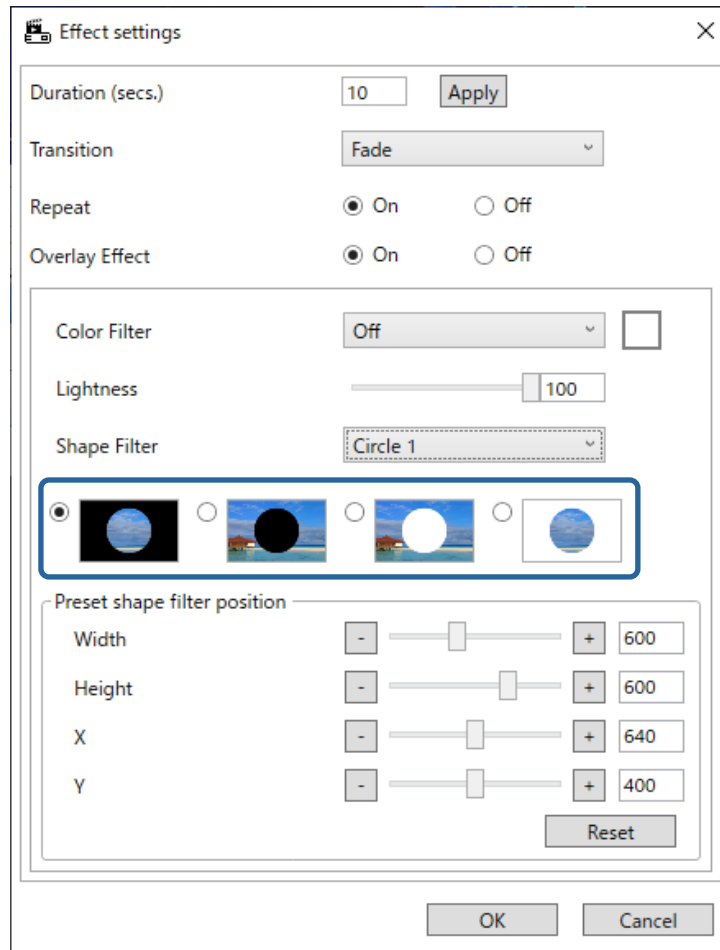

- 8 Click the OK button to close the **Effect settings** screen.


- 9 Close the **Preview** screen.

- 10 Click the OK button to apply the settings to your playlist.

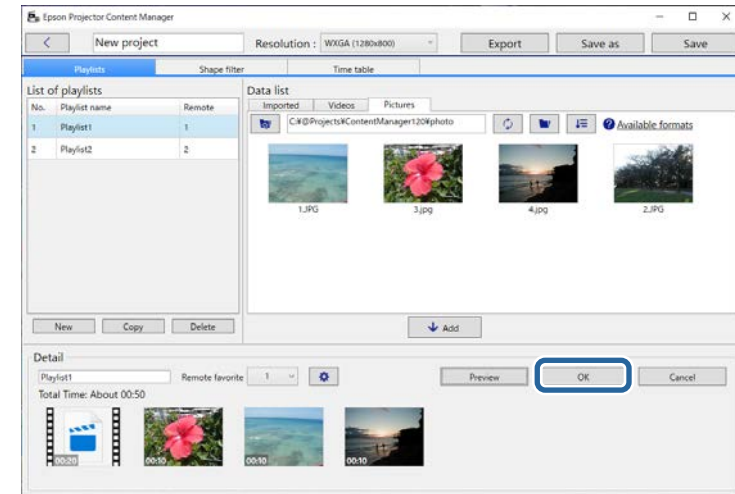


- 11 Repeat steps 2 through 10 if you want to make effect settings to any other playlists.

- 12** Click the **Save** button to save the project.

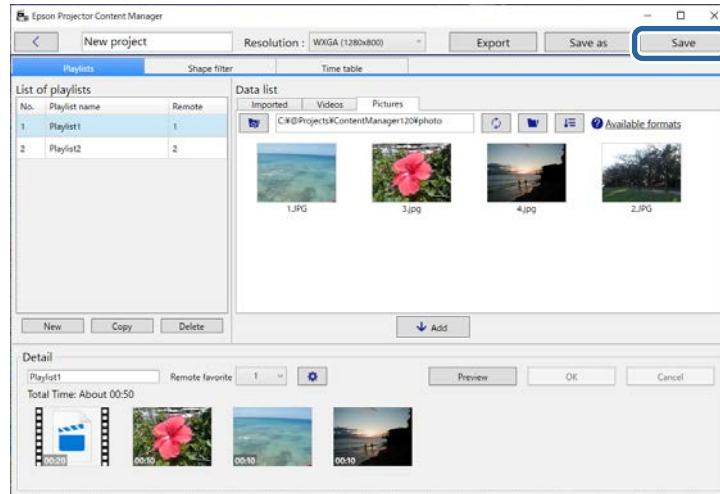

- 1** Open the project screen.

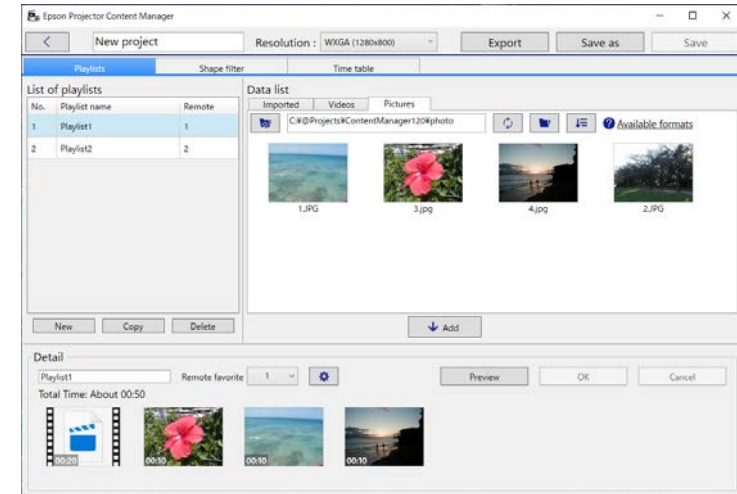


► Related Links

- "Customizing Shape Effect Filters for a Playlist" [p.21](#)
- "Effect Settings Screen" [p.34](#)

Customizing Shape Effect Filters for a Playlist

You can use your images as shape effect filters named **Custom 1** to **Custom 4** and add them to your playlists.


- 2** Select the **Shape filter** tab.

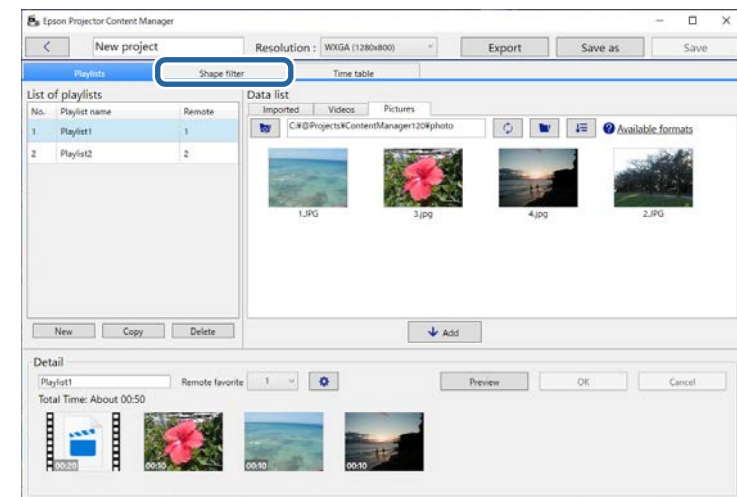


- 3 Select one of the filters named **Custom 1** to **Custom 4** in the **Filter list** area.



You cannot edit standard filters such as **Circle 1** to **Circle 3** and **Rectangle 1** to **Rectangle 3**.

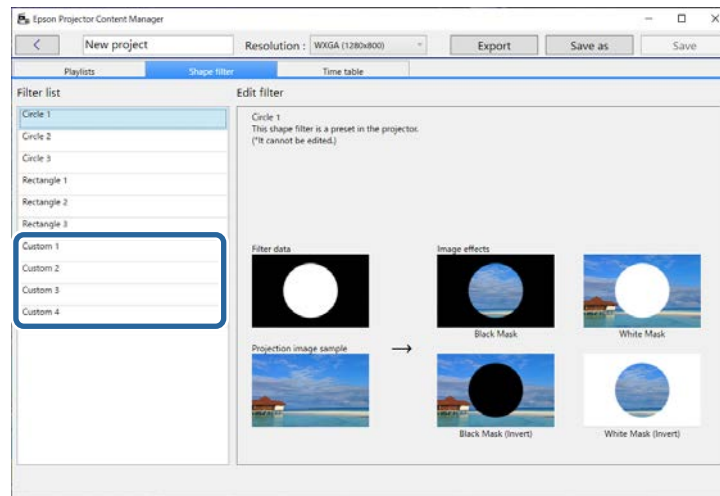

- 4 Click the **Browse** button and select the image file which you want to use as a shape effect filter.

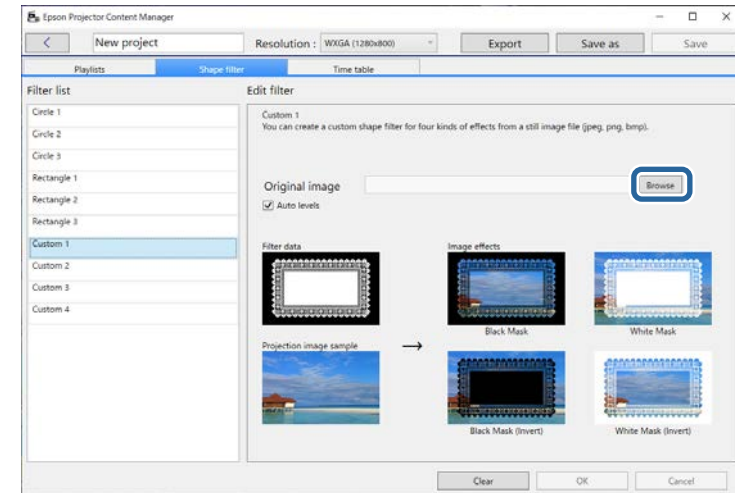


The sample effects images are displayed.



- You can use jpeg, png, or bmp file format.
- Images exceeding 8192×8192 pixels cannot be used. If the width of the image is larger than 1280 pixels or the height is larger than 800 pixels, it will be resized to fit in 1280×800 pixels while maintaining the aspect ratio.
- You can use the **Sample filters** button on the file selection screen if you want to access the prepared sample filters quickly.
On Mac, the **Sample filters** button is displayed below the **Browse** button.

- 5 Click the OK button to save the shape effect filter settings as the Custom filter in the **Filter list**.

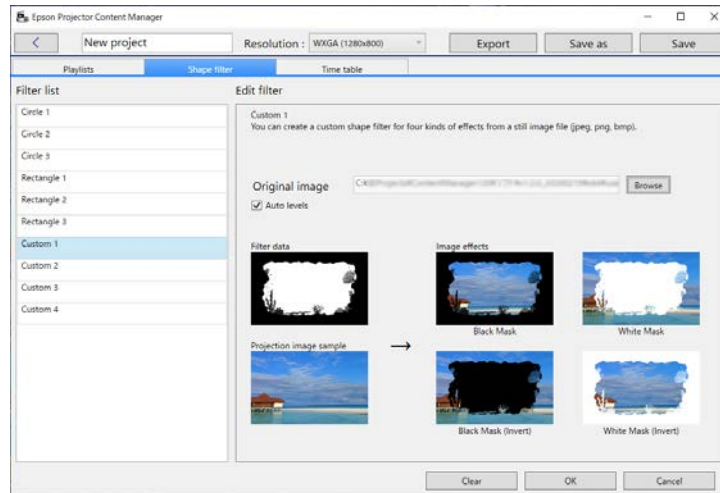

Now you can use customized shape effect filters on the **Effect settings** screen.

► Related Links


- "Effect Settings Screen" [p.34](#)
- "Project Screen - Shape Filter Tab" [p.35](#)

Scheduling Playlists


You can specify when each playlist starts and finishes. Scheduling events allows you to:

- periodically repeat the same playlist
- play the same playlist at the same time on multiple projectors (supported models only)


- 1 Open the project screen.

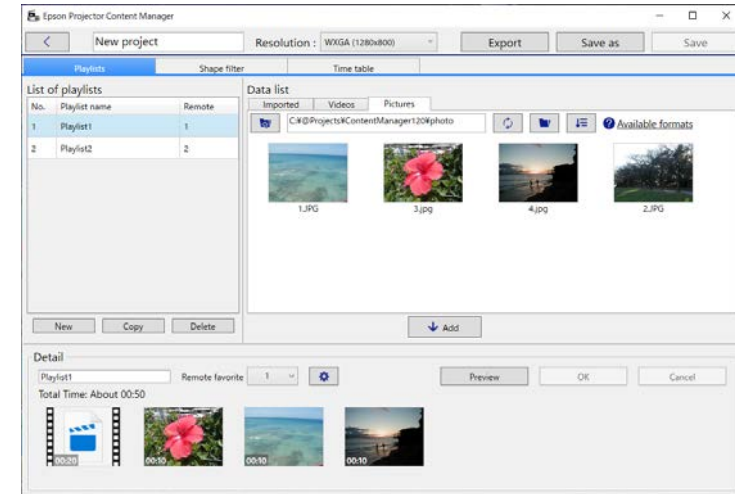

- 2 Select the **Time table** tab.

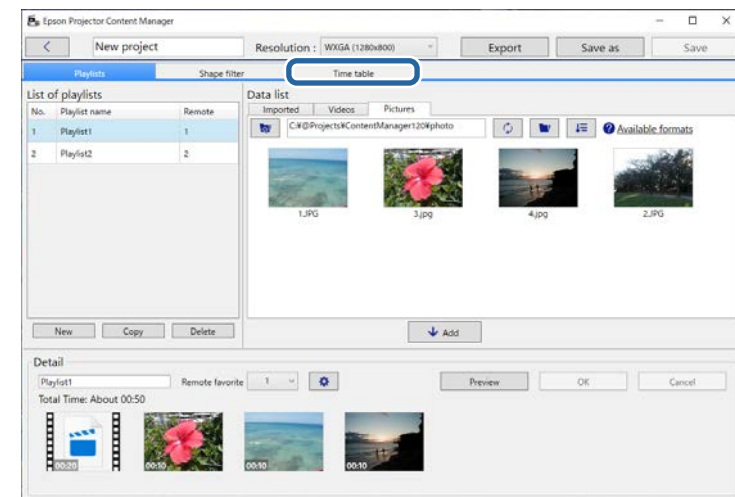

- 3** Double-click the date that you want to schedule events in the calendar.

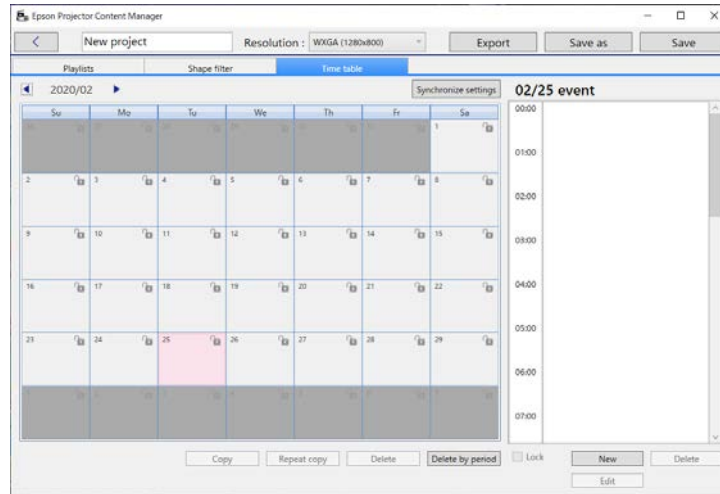

The New event screen is displayed.

- 4** Select the **Playlist** and **Time** settings, and then click the **OK** button.




- If you want to copy the event to another day, select the original date and click the **Copy** button. The **Copy** screen is displayed and you can set the target date.
- If you want to repeat the same event over a certain period of time, select the original date and click the **Repeat copy** button. The **Repeat copy** screen is displayed and you can set the target period in which you want to repeat the event and the day(s) within that period.
- If you want to repeat all events in a week over a certain period of time, select the original first date and click the **Repeat copy** button. The **Repeat copy** screen is displayed and you can set the target period in which you want to repeat the event and the day(s) within that period.

- 5** Repeat step 3 and 4 to schedule any other playlists as necessary.

- 6** When you are using multiple projectors, click the **Synchronize settings** button to share the scheduled events with the other projectors (supported models only).



The **Synchronize settings** setting applies to the entire project, not to individual playlists.

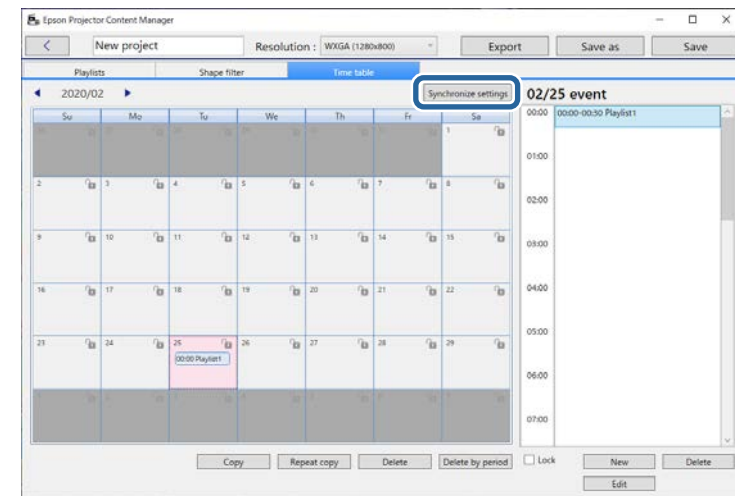

The **Register projector for synchronized playback** screen is displayed.

- 7** From the automatically searched projectors list, select the name of the projector to use and click the **OK** button (supported models only).



- You can also select the projectors from the **History**, **IP search**, or **Enter projector name** tab.
- Make sure the projectors are connected to your network.

- 8** Click the **Save** button to save the project.



Scheduled events start playing on the timetable you selected. See your projector *User's Guide* for details.

►► Related Links

- "Register Projector for Synchronized Playback Screen/Export Network Projector Screen" [p.37](#)

You can export a project that contains playlists to an external storage device.



- Depending on the projector, the supported storage devices differ. See your projector *User's Guide* for details.
- You can export only one project at a time to the same external storage device. If you export an additional project to the same device, the existing project is overwritten.
- Do not remove the external storage device from a computer or projector while exporting a project.

► Related Links

- "Exporting a Project to an External Storage Device on Computer" [p.26](#)
- "Exporting a Project to an External Storage Device on Networked Projector" [p.26](#)

Exporting a Project to an External Storage Device on Computer

You can export a project to an external storage device connected to a computer.

- 1** Make sure that an external storage device is inserted into your computer.
- 2** Do one of the following:
 - Select the **Export** tab in the main screen, then select the project by browsing the folders or using the recently used project list.



If you select the project that was created by Epson Projector Content Manager Ver.1.10 or earlier, the conversion window is displayed and the project format will be converted into the format of Ver.1.20 or later on opening the project.

- Click the **Export** button on the project screen.
The **Export** screen is displayed.

- 3** Select the drive in which you inserted your external storage device as the **Export drive** setting and click the **Export** button.
The export starts.
- 4** When the export is complete, click **Close** on the **Export progress** screen.
- 5** Remove the external storage device from your computer.

You can insert the device containing a project into the projector so you can project playlists from the device.

Exporting a Project to an External Storage Device on Networked Projector

You can export a project to an external storage device inserted into the networked projector.

- 1** Make sure that an external storage device is inserted to the projector.
- 2** Make sure that your computer and projector are connected to the network.



You need to make projector menu settings according to how you want to connect. See your projector *User's Guide* for details.

3 Do one of the following:

- Select the **Export** tab in the main screen, then select the project by browsing the folders or using the recently used project list.



If you select the project that was created by Epson Projector Content Manager Ver.1.10 or earlier, the conversion window is displayed and the project format will be converted into the format of Ver.1.20 or later on opening the project.

- Click the **Export** button on the project screen.
The **Export** screen is displayed.

4 Select the **Export network projector** and click the **Next** button.

5 From the automatically searched projectors list, select the name of the projector to connect, and confirm that the selected projector is added to the **List of export network projector** area.



You can also select the projectors from the **History** or **IP search** tab.

6 Click the **Export** button. The export starts.

7 If the user authentication window is displayed, enter the user name and password set for the projector and click the **Authentication** button.



If you do not have the user name or password for the projector, contact your projector administrator.

8 When the export is complete, click **Close** on the **Export progress** screen.

You can project playlists from the projector.

►► Related Links

- "Register Projector for Synchronized Playback Screen/Export Network Projector Screen" [p.37](#)

Solving Problems

See the following section to check for solutions to problems you may have using the Epson Projector Content Manager software.

►► Related Links

- "Solving Epson Projector Content Manager Problems" [p.29](#)

Try these solutions if you experience any of these problems.

- If you cannot import images, try the following solutions:
 - Check the supported file types.
 - If you are viewing the **Videos** tab, try clicking the **Pictures** tab.
- If you cannot import movies, try the following solutions:
 - Check the supported file types.
 - If you are viewing the **Pictures** tab, try clicking the **Videos** tab.
- If you cannot delete a playlist in the **List of playlists** area of the project screen, make sure the playlist is not scheduled in the **Time table** tab.
- If you cannot register another projector when using **Synchronize settings**, try the following solutions:
 - Make sure the projector supports this function. See your projector *User's Guide* for details.
 - Make sure the projector is connected to your network. See your projector *User's Guide* for details.
 - Make sure the projector name is correct. See your projector *User's Guide* for details.
- If you cannot export a project to an external storage device, try the following solutions:
 - Make sure the external storage device is not locked.
 - Make sure that your projector supports content playback function. Also, depending on the model you are using, you may need to enable content playback mode in advance. See your projector *User's Guide* for details.
 - For exporting via a network, make sure that you connect an external storage device to the projector in advance, and turn on the projector.
 - For exporting via a network, make sure the computer and projector are connected to the network.

- If projectors are not displayed in the **Register projector for synchronized playback** screen or **Export network projector** screen, make sure the computer and projector are connected to the same network.

►► Related Links

- "Creating Playlists" [p.12](#)
- "Customizing Shape Effect Filters for a Playlist" [p.21](#)
- "Scheduling Playlists" [p.23](#)
- "Supported File Types for Playlists" [p.9](#)
- "Supported Projectors" [p.7](#)


Screen Summary

See these sections for more information about the Epson Projector Content Manager screens.

►► Related Links

- "Main Screen" [p.31](#)
- "Project Screen" [p.32](#)

When you start the Epson Projector Content Manager software, the main screen is displayed.

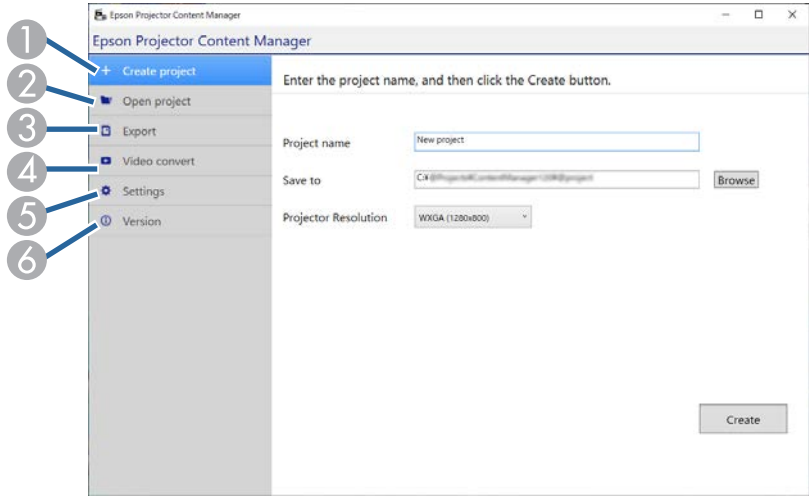


1	Create project	Creates a new project on your computer.
2	Open project	Opens an existing project.
3	Export	Exports the project to an external storage device.
4	Video convert	Converts a movie file type to a type that the projector supports.  You can check the supported file types by clicking Convertible formats in the Video convert tab.

5	Settings	Sets the movie file format for the project. Select the file format supported by your projector. When you do not know which movie file format is supported by the projector, select Auto Select or AVI Format . If you select Auto Select , the format suitable for the projector is automatically selected. The AVI format is supported on any model that has the content playback function. If you select Auto Select and save a project to an external storage device connected to computer, both MP4 format and AVI format will be saved, so more free space is required.
6	Version	Displays the software version.

» Related Links

- "Creating Playlists" [p.12](#)
- "Exporting a Project to an External Storage Device" [p.26](#)

When you create or open a project, the project screen is displayed.

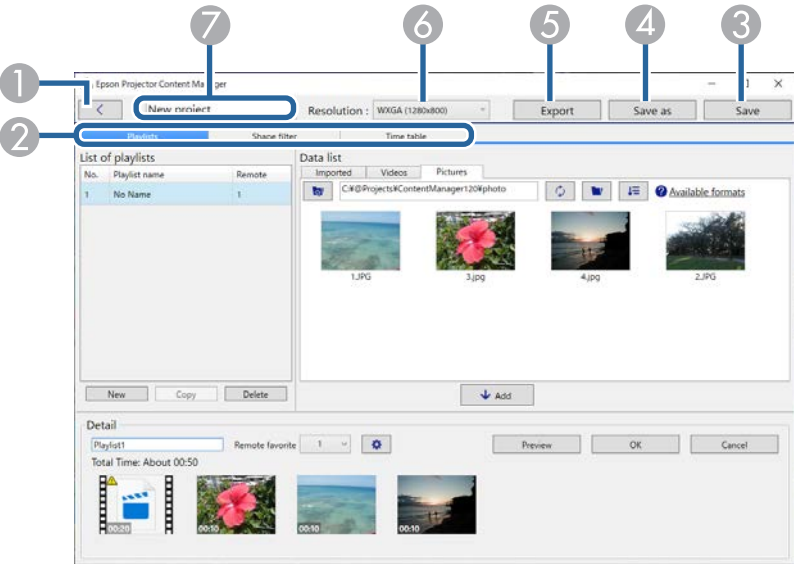

1		Returns to the main screen.
2	Playlists, Shape filter, and Time table tabs	Switch to different project screen tabs.
3	Save	Saves the project to your computer.
4	Save as	Duplicates and saves the project with a different name.
5	Export	Exports the project to an external storage device.
6	Resolution	Sets the resolution for the project. Select the resolution according to the resolution of the projector.
7	Project name	Displays the project name. You can edit this name.


➤ **Related Links**

- "Project Screen - Playlists Tab" [p.32](#)

- "Project Screen - Shape Filter Tab" [p.35](#)
- "Project Screen - Time Table Tab" [p.36](#)
- "Register Projector for Synchronized Playback Screen/Export Network Projector Screen" [p.37](#)

Project Screen - Playlists Tab

When you click the **Playlists** tab in the project screen, the following screen is displayed.

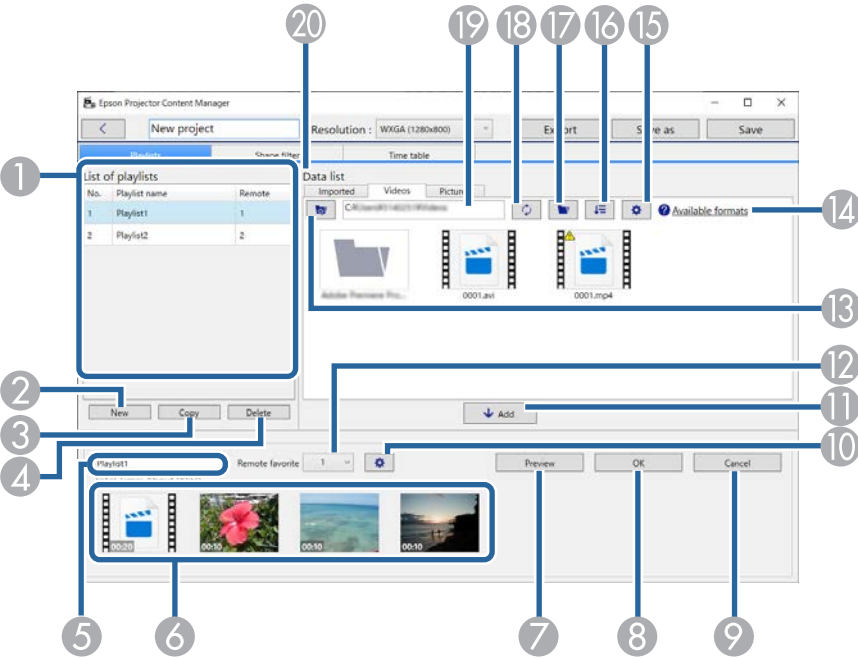

1	List of playlists	Displays the list of playlists in the project. Select the playlist name to edit the playlist. You can add up to 50 playlists to the project. Remote is the remote control shortcut key assigned to the playlist.
---	-------------------	---

2	New	Creates a new playlist.
3	Copy	Copies the selected playlist.
4	Delete	Deletes the selected playlist.
5	Playlist name	Lets you edit the playlist name.
6	Time line area	Displays the images or movies added to the playlist in playback order. The total playback time of the file registered to the playlist is also displayed. You can add up to 100 files to the playlist.
7	Preview	Opens the Preview screen and starts previewing playlists. The content you were editing is automatically saved to the playlist before previewing.
8	OK	Saves the changes to the playlist.
9	Cancel	Discards any unsaved changes you made to the playlist.
10		Opens the Effect settings screen. You can add effects settings to the playlist.
11	Add	Adds any selected images or movies in the Data list to the playlist.
12	Remote favorite	Assigns a remote control shortcut key to the playlist. See your projector <i>User's Guide</i> to play back the playlist using the shortcut key.
13		Displays the folders or files one level higher than the path displayed in the folder path.
14	Available formats	Displays the supported file types when you click this text.
15	 (Videos tab only)	Sets the image quality for video conversions.


16		Sorts the order of the files in Data list by update dates or names.
17		Browses for folders.
18		Updates the displayed files to reflect their current state in the selected folder.
19	Folder path	Displays the selected folder path.
20	Data list	Displays the images or movies in the selected folder. The files can be listed up to 1000 in this area. Pictures tab: You can display image files. Videos tab: You can display movie files. Imported tab: You can display the files you previously imported to playlists. Any files used in the playlist are marked with .

►► Related Links

- "Preview Screen" [p.34](#)
- "Effect Settings Screen" [p.34](#)

Preview Screen


When you click the **Preview** button in the **Detail** area in the **Playlists** tab, the **Preview** screen is displayed.

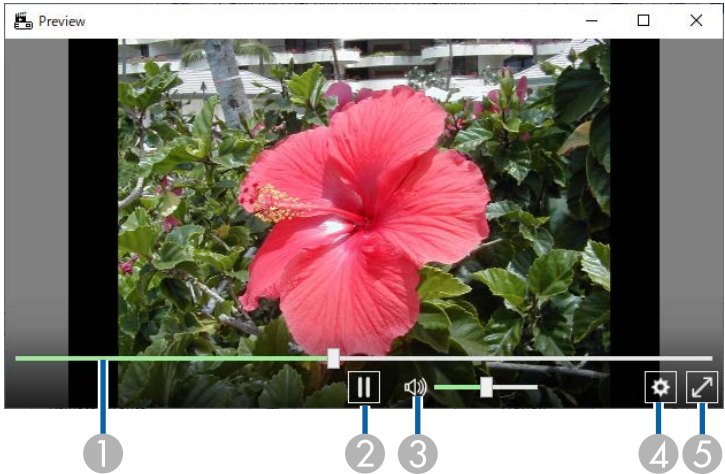

①	Seek bar	Shows the progress of the Preview screen.
②	Play/Stop	Plays back or stops the preview.
③	Volume gauge	Adjusts volume for the audio of the playlist.
④		Displays the Effect settings screen.
⑤	Full screen/Exit full screen (Windows only)	Displays the preview at the full screen or exit the full screen.



You can also open the **Effect settings** screen from  in the **Detail** area of the project screen.

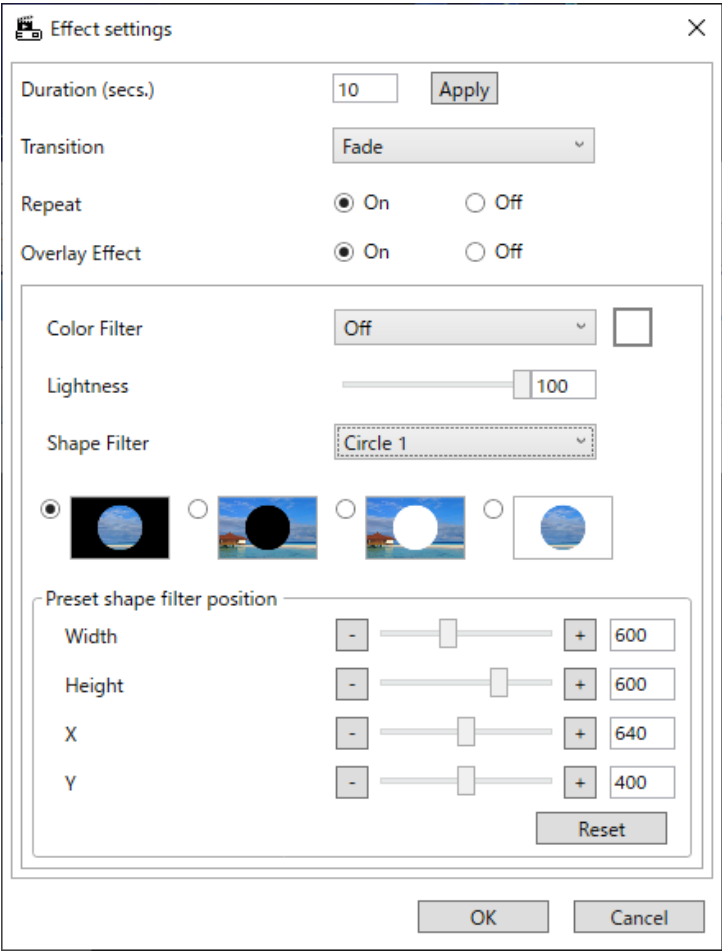

Duration (secs.)	Selects the time that each file is displayed before switching to the next file automatically. You can enter 1 to 60.
------------------	--

Apply	(Only displayed when the Effect settings screen is opened in the Preview screen) Applies the value set in Duration (secs.) to the Preview screen.
Transition	Selects a transition effect from a list of available transitions.
Repeat	Selects whether to enable loop playback or not.
Overlay Effect	Selects whether to enable an overlay effect or not. Select On if you want to apply Color Filter , Lightness , and Shape Filter settings.  You can also select the Overlay Effect setting in your projector's menu so that you can adjust the settings while projecting images from the projector. See your projector <i>User's Guide</i> for details.
Color Filter	Applies a color effect from the list of available effects to the playlist. You can also select a Custom color filter.
Lightness	Lightens or darkens the filter effect.
Shape Filter	Selects a standard or customized shape effect filter, and a black or white mask or inverted mask setting. (The standard shape effect filters are Circle 1 to Circle 3 and Rectangle 1 to Rectangle 3 .)  You can customize the shape effect filters in the Shape filter tab.

Preset shape filter position

(Available only when the **Effect settings** screen is opened in the **Preview** screen)

You can set this item when **Overlay Effect** is set to **On** and **Shape filter** is set to **Circle** or **Rectangle**.

Changes the **Width** and **Height** value to adjust the size of the shape effect filter.


Changes the **X** value to adjust horizontal position of the shape effect filter, **Y** value to adjust vertical position.

You can adjust the value while checking it in the **Preview** screen.

Click the **Reset** button to reset to default.


Project Screen - Shape Filter Tab

When you click the **Shape filter** tab in the project screen, the following screen is displayed.

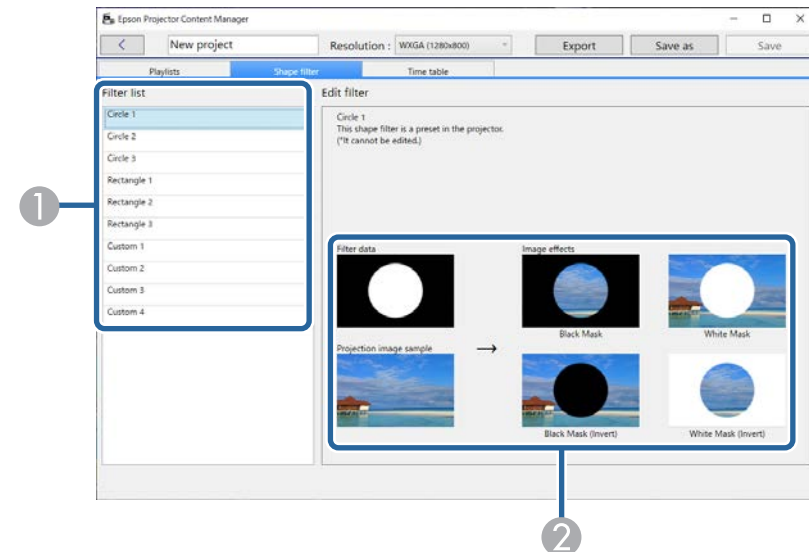

❶	Filter list	Displays the list of the shape effect filters. When you click a filter name, images using that shape effect filter are displayed in the Edit filter area. You can edit only the Custom 1 to Custom 4 shape effect filters.
❷	Edit filter	Displays four types of the selected shape effect filter on a sample image.

When you select a **Custom 1** to **Custom 4** shape effect filter in the **Filter list**, the following functions are available.

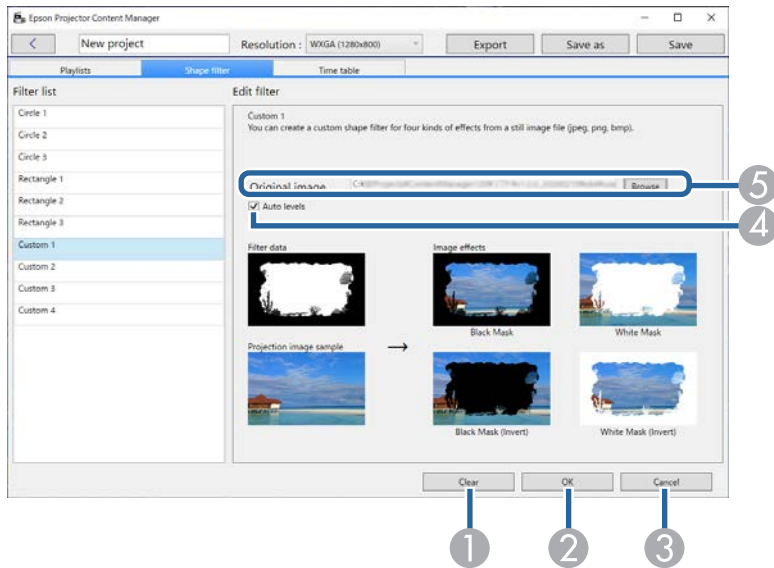

❶	Clear	Clears the settings for the selected shape effect filter.
❷	OK	Saves the settings for the selected shape effect filter to the project.
❸	Cancel	Discards the changes for the selected shape effect filter.
❹	Auto levels	Automatically adjusts the intensity levels of the image tones to emphasize black and white.


❺	Original image	Displays the file path for the image you are using as the shape effect. Click the Browse button to select the file. You can use the Sample filters button on the file selection screen if you want to display the prepared sample filters quickly. On Mac, the Sample filters button is displayed below the Browse button.
---	----------------	---

► Related Links

- "Customizing Shape Effect Filters for a Playlist" [p.21](#)

Project Screen - Time Table Tab


When you click the **Time table** tab in the project screen, the following screen is displayed.

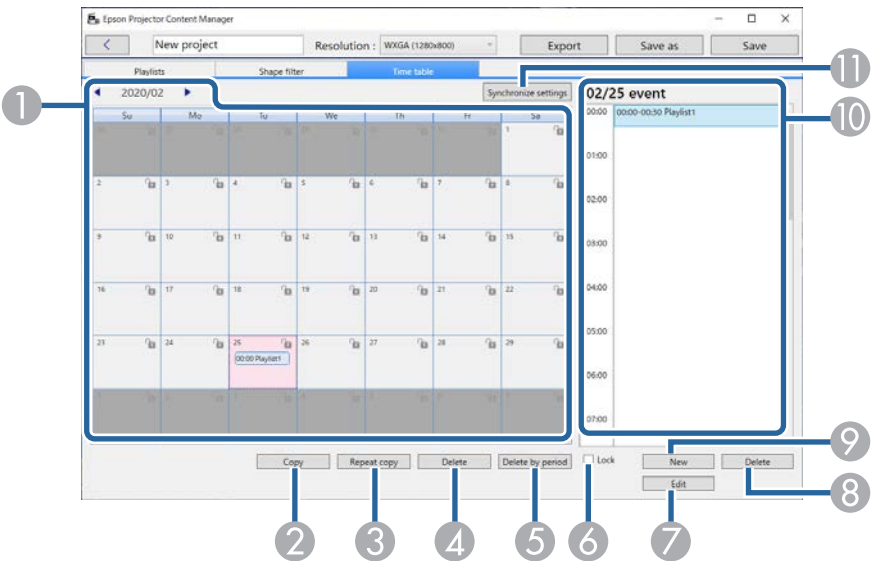

1	Calendar	Select  to move to the previous month or select  to the next month. To add a new event, double-click the day. To lock or unlock all events for the day, click the key icon.
2	Copy	Copies the all events in the selected day to another day.
3	Repeat copy	Repeats all events in the selected day or one week starting from the selected date to a particular day and time.
4	Delete	Deletes all events in the selected day.
5	Delete by period	Deletes all events in the selected period.
6	Lock	Prevents adding to or editing events in the selected day. You can still delete events from a locked day in the calendar after confirming the operation at the prompt. You cannot copy an event to a locked day.
7	Edit	Changes the playlist or schedule for the selected event.
8	Delete	Deletes the selected event.
9	New	Adds a new event to the selected day.
10	Event schedule	Displays the event schedule for the selected day.
11	Synchronize settings (supported models only)	Click this button to open the Register projector for synchronized playback screen to share the scheduled events with other selected projectors.

Register Projector for Synchronized Playback Screen/ Export Network Projector Screen

The following screen is displayed when selecting projectors for synchronized playback or selecting network projectors for exporting playlists (supported models only).

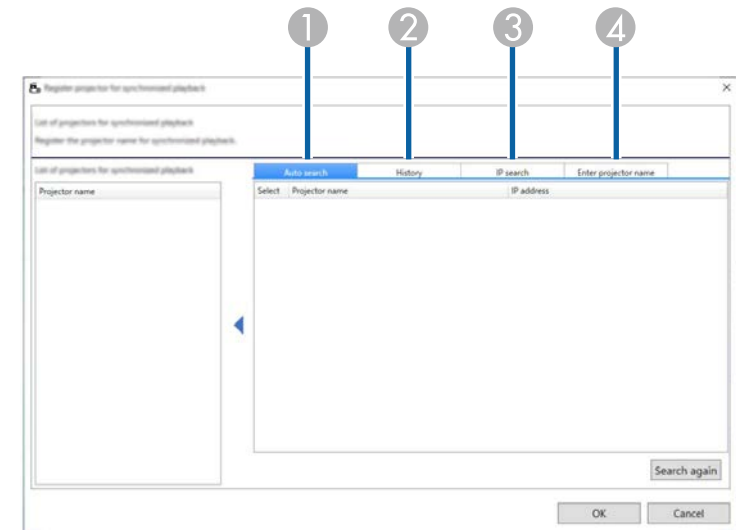

①	Auto search	Displays a list of available projectors on the same network as the search source device. Select ☐ of the target projector to select the projector. You can remove the projector name from the list by clearing the check box. If you want to update the list, click the Search again button. On the Export network projector screen, an icon indicating the status of the projector is displayed next to the projector name. ✓: You can upload the project to the projector. ⚠: You cannot upload the project to the projector.
②	History	Displays a list of connection history. Select ☐ of the target projector to select the projector. You can remove the projector name from the list by clearing the check box. On the Export network projector screen, an icon indicating the status of the projector is displayed next to the projector name. ?: The status of the projector has not been checked. ✗: The projector was not detected. ✓: You can upload the project to the projector. ⚠: You cannot upload the project to the projector.
③	IP search	Allows you to enter an IP address for the target projector. Searching projectors starts by clicking the Search button. When the search result is displayed, you can use the Add button to select the projector.

④	Enter projector name	(Only displayed when selecting projectors to share the scheduled events.) Allows you to enter a projector name for the target projector. You can use the Add button to select the projector.
---	----------------------	--

Appendix

See these sections to learn more about the Epson Projector Content Manager software.

►► Related Links

- "Uninstalling the Software" [p.40](#)
- "Notices" [p.41](#)

Follow these instructions to uninstall the Epson Projector Content Manager software.

► Related Links

- "Uninstalling the Epson Projector Content Manager Software (Windows 10/Windows 11)" [p.40](#)
- "Uninstalling the Epson Projector Content Manager Software (Mac)" [p.40](#)

Uninstalling the Epson Projector Content Manager Software (Windows)

Follow the instructions below to uninstall the Epson Projector Content Manager software.



You need administrator authority to uninstall the software.

- 1** Turn on your computer.
- 2** Make sure all running applications are closed.
- 3** Press the key on the keyboard to display all apps.
- 4** Right-click (press and hold) **Epson Projector Content Manager Ver.X.XX**, and then select **Uninstall**.
- 5** Follow the on-screen instructions.

Uninstalling the Epson Projector Content Manager Software (Mac)

For Mac, follow the instructions below to uninstall the Epson Projector Content Manager software.

- 1** Turn on your computer.
- 2** Make sure all running applications are closed.
- 3** Open the **Launchpad** to display applications, or type the software name to search in the search field at the top of the screen to display the Epson Projector Content Manager software.
- 4** Click and hold the Epson Projector Content Manager software icon until the icon jiggles.
- 5** Click the X button displayed on the icon to uninstall the software.



If the X button is not displayed, use the Finder to uninstall the software instead.

Check these sections for important notices about your software.

► Related Links

- "Copyright Notice" [p.41](#)
- "About Notations" [p.41](#)
- "General Notice" [p.41](#)
- "Copyright Attribution" [p.42](#)

Copyright Notice

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. No patent liability is assumed with respect to the use of the information contained herein. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

The contents of this guide may be changed or updated without further notice. Illustrations in this guide and the actual projector may differ.

About Notations

- Microsoft® Windows® 10 operating system
- Microsoft® Windows® 11 operating system

In this guide, the operating systems above are referred to as "Windows 10" and "Windows 11". Furthermore, the collective term "Windows" is used to refer to them all.

- macOS 11 (BigSur)
- macOS 12 (Monterey)
- macOS 13 (Ventura)
- macOS 14 (Sonoma)
- macOS 15 (Sequoia)
- macOS 26 (Tahoe)

In this guide, the collective term "Mac" is used to refer to all of the operating systems above.

General Notice

Mac, macOS, and QuickTime are trademarks or registered trademarks of Apple Inc.

Microsoft, Windows, and Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

Intel® is a registered trademark of the Intel Corporation in the U.S. and/or other countries.

Other product names used herein are also for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

Software Copyright: This product uses free software as well as software to which this company holds the rights.

Copyright Attribution

This information is subject to change without notice.

© 2024 Seiko Epson Corporation

2025.11 Ver.1.31 EN