

NOKIA 6600 to Epson PictureMate via Bluetooth

Notes:

6600 resolution rated as **VGA**. Camera resolution can be set in Camera – Options – Settings – Image – Image Quality. Settings are **High**, **Normal** and **Basic**. (refer page 52 of Nokia 6600 User's Guide).


Camera phone Bluetooth can be set via Menu – Connectivity – Bluetooth (refer page 162 of Nokia 6600 User's Guide).

PictureMate Configuration of the Bluetooth option is from the front panel (refer OnLine Reference Guide – Using the Bluetooth Photo Print Adapter).

1. At the Nokia 6600 **Menu** – choose **Camera**. Then choose **Options**.



2. **Open – Select**

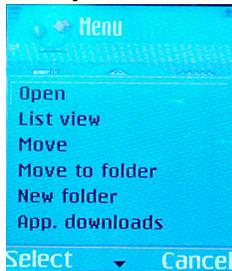


Then choose **Options**




3. Go to **Gallery – Select**



Choose image. Then choose **Options**

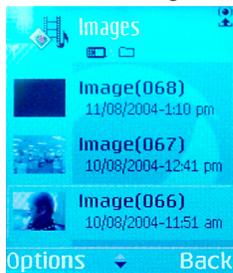

4. **Send**

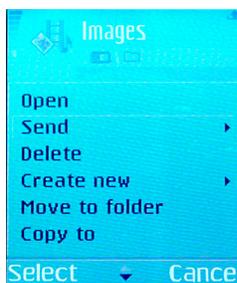

via **Bluetooth – Select.**



5. Choose **PictureMate – Select**

