



## NOKIA 7610 to Epson PictureMate via Bluetooth

### Notes:

7610 resolution rated as **1 megapixel**. Camera resolution can be set in Camera – Options – Settings – Image – Image Quality. Settings are **High**, **Normal** and **Basic**. (refer page 39 of Nokia 7610 User's Guide).

Camera phone Bluetooth can be set via Menu – Connectivity – Bluetooth (refer page 121 of Nokia 7610 User's Guide).

PictureMate Configuration of the Bluetooth option is from the front panel (refer OnLine Reference Guide – Using the Bluetooth Photo Print Adapter).

1. At the Nokia 7610 **Menu** – choose **Camera**. Then choose **Options**.



2. **Open – Select**



Then choose **Options**



3. Go to **Gallery – Select**



Choose image. Then choose **Options**



4. **Send – via Bluetooth – Select.**



5. Choose **PictureMate – Select**

