



Multimedia Projector

PC Free Operation Guide

PC Free Summary

What You Can Do Using PC Free	4
PC Free Examples	4
Specifications for Files that can be Projected Using PC Free	4
Supported movie data	5

Using PC Free

PC Free Operating Procedure	7
Starting and Closing PC Free	7
Starting PC Free	7
Closing PC Free	9
PC Free Basic Operations	9
Rotating the Image	9
Projecting Files Created with PowerPoint	11
Playing a Scenario	11
Operations While Playing Back Scenarios	11
Projecting Image and Movie Files	12
Projecting Movies and Images	12
Projecting Image Files in a Folder in Sequence (Slideshow)	13
Operation setting for slideshow	14

Appendix

Troubleshooting	16
Other functions	17
Basic Scenario (SIT file) Editing	17
Registering a Digital Certificate to the Projector	19
Digital certificates that can be registered	19
Registering a Client Certificate	19
Registering a CA Certificate	20

General Notes	21
General Notice:	21
Index	22




PC Free Summary

You can use PC Free to directly project files stored on USB storage devices and digital cameras that are connected to the projector.

PC Free Examples

Projecting images and movies stored on a USB storage device

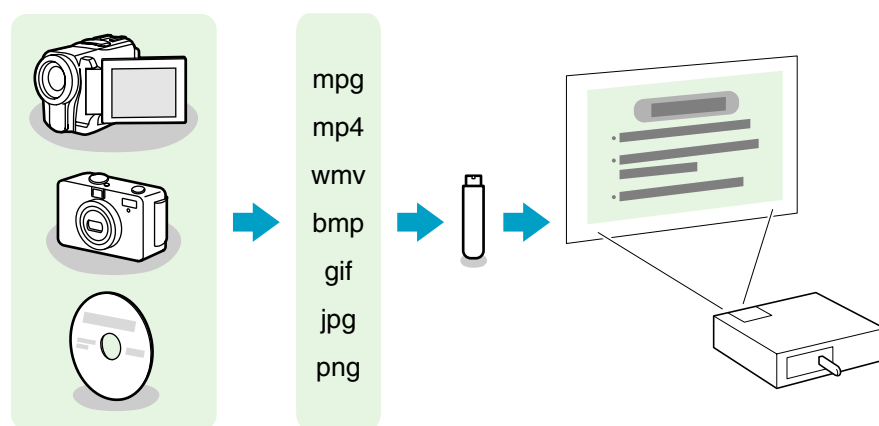


You can use PC Free to project individual movie or image files or to continuously project slide shows using more than one file.

☛ "Projecting Image and Movie Files" [p.12](#)

☛ "Projecting Image Files in a Folder in Sequence (Slideshow)" [p.13](#)

Projecting a PowerPoint slide show without connecting to a computer

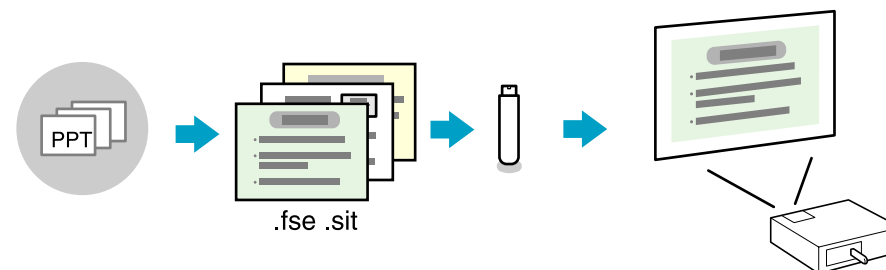

If you convert your PowerPoint file into a file format that can be projected by PC Free and store the file on a USB storage device, you can project a PowerPoint slide show without connecting a computer.

☛ "Projecting Files Created with PowerPoint" [p.11](#)

The supplied EasyMP Slide Converter application software makes it easy to convert PowerPoint files.

☛ [EasyMP Slide Converter Operation Guide](#)

Specifications for Files that can be Projected Using PC Free

Type	File Type (Ex-tension)	Notes
Scenario file	.fse .sit*	This is the file format that can be played using PC Free. EasyMP Slide Converter can be used to convert PowerPoint files to this format. In this Guide these files are known as scenarios.

Type	File Type (Extension)	Notes
Image	.jpg	The following cannot be projected. • Images with a resolution greater than 8192 x 8192 • Images with a file size greater than 12 MB • Files with the extension ".jpeg" • CMYK color mode formats • Progressive formats Normally, the image may not be projected clearly if compression is set too high.
	.bmp	Cannot project images with a resolution greater than 1280x800.
	.gif	• Cannot project images with a resolution greater than 1280 x 800. • Cannot project animated GIFs.
	.png	Cannot project images with a resolution greater than 1280 x 800.

* You can also project scenarios (SIT files) created using the EMP SlideMaker/EMP SlideMaker2 supplied for other projectors.

Supported movie data

File Type (Extension)	Movie Codec	Audio Codec	Recording Quality
.mpg*	MPEG-2	MPEG-1 Layer1/2 MPEG contents with no sound can be played back. Linear PCM and AC-3 audio cannot be played back.	Highest frame rate: 30 fps Maximum resolution: 720 x 480 (NTSC) 720 x 576 (PAL)

File Type (Extension)	Movie Codec	Audio Codec	Recording Quality
.mp4*	MPEG-4 ASP MPEG-4 AVC	MPEG-4 AAC-LC	
.wmv	WMV8	WMA	
.asf	WMV9		

* Files with the extension .mpeg cannot be projected.



- USB storage devices that incorporate security functions sometimes cannot be used.
- Files to which DRM (Digital Rights Management) is applied cannot be projected.
- If you use a USB storage device with a slow access speed when playing back movies (when transmitting at higher bit rates), the movie files may not play back correctly or the sound may skip or not be output.
- The projector does not support media formatted on some file systems. If you have trouble when projecting, use media formatted under Windows.
- Format the media using the FAT16/32 file system.




Using PC Free

Starting and Closing PC Free

Starting PC Free

Procedure


- 1
- Switch the projected image to USB.
☞ *User's Guide "Switch to the Target Image by Remote Control"*
- 2
- Connect the USB storage device or digital camera to the USB (type A) port on the projector.
When connecting a digital camera, use the USB cable provided with your digital camera, or the specified USB cable.

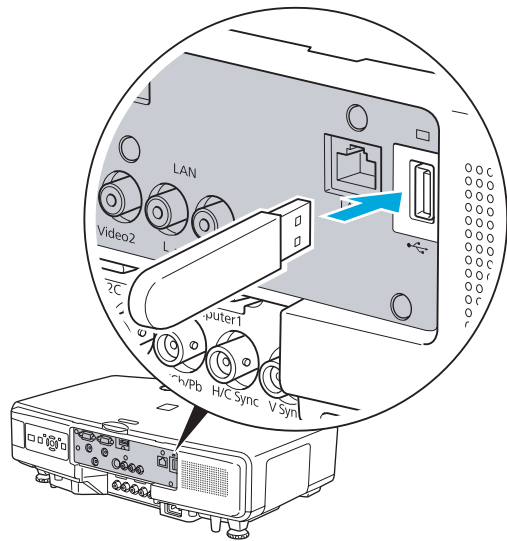

Attention

- If you use a USB hub, the connection do not operate correctly. Devices such as digital cameras and USB storage devices should be connected to the projector directly.
- When connecting and using a USB-compatible hard disk, make sure you connect the AC adaptor supplied with the hard disk.
- When connecting a digital camera or hard disk, use the USB cable provided with the device, or the specified USB cable.
- Use a USB cable that is less than 3 m in length. If the cable exceeds 3 m, PC Free may not function correctly.

- 3
- PC Free starts and the file list screen is displayed.

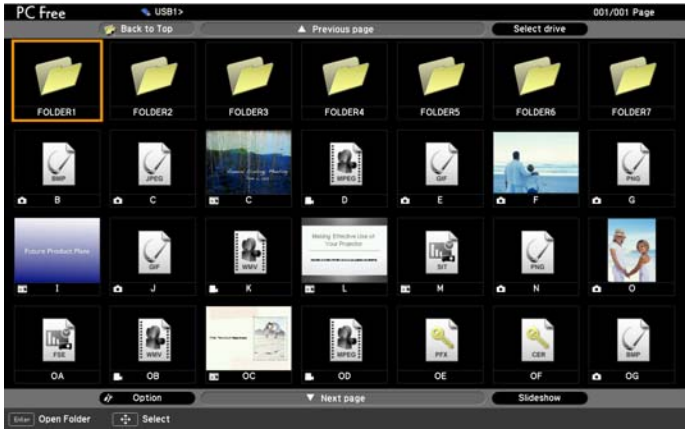

JPEG files and MPEG files are displayed as thumbnails (file contents are displayed as small images). Scenarios (FSE files and SIT files) are displayed as thumbnails as the first image in the slide. Other files or folders are displayed as icons as shown in the following table.


Icon	File	Icon	File
	FSE files*		SIT files*

Icon	File	Icon	File
	JPEG files*		MPEG files
	BMP files		WMV files
	GIF files		PFX files (client certificate)
	PNG files		CER files (CA certificate)

* When it cannot be displayed as a thumbnail, it is displayed as an icon.



- When AutoRun is set for a scenario, it is automatically played back with the highest priority over other input sources. If you want to stop it from playing back, press the [Esc] button on the remote control. [p.11](#)
- You can also connect a memory card to the projector by loading it in a USB card reader. However, some card readers may not be compatible.
- When the following screen (Select Drive screen) is displayed, press the [⊙] button on the remote control or [Z/▲], [X/▼], [Y/◀] and [D/▶] buttons on the control panel to select the drive you want to use, and then press the [Enter] button.

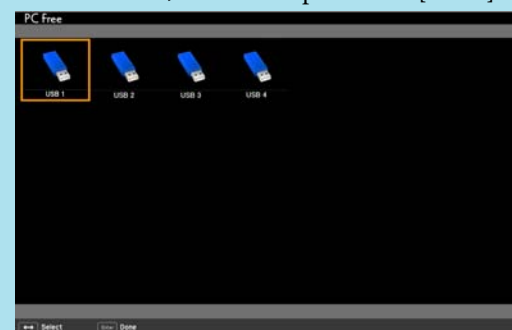

- To display the Select Drive screen, position the cursor on **Select Drive** in the top half of the file list screen, and then press the [Enter] button.
- The projector can recognize up to eight media at a time.

Closing PC Free

Procedure

- 1 If you are playing back a file, end the playback.

Ending movie or image playback  p.12

Ending scenario playback  p.11

Ending Slideshow  p.13

- 2 Remove the USB device from the projector.

For digital cameras, hard disks, and so on, turn off the power to the device and then disconnect.

Attention

Do not disconnect the USB device from the projector while it is being accessed.

PC Free Basic Operations

The following describes the procedures for playing images, movies, and scenarios, using PC Free, and projection operations.

Procedure

- 1 Press the  button on the remote control or , ,  and  buttons on the control panel to position the cursor on the file or folder you want to access.



- 1 Cursor



If all files and folders cannot be displayed at the same time in the current screen, press the [Page] () button or position the cursor on **Next page** at the bottom of the screen and press the [Enter] button. To return to the previous screen, press the [Page] () button or position the cursor on **Previous page** at the top of the screen and press the [Enter] button.

- 2

Press [Enter].

The selected image is displayed.

When a folder is selected, the files in the selected folder are displayed. Select **Back to Top** on the screen that opened and press the [Enter] button to return to the previous screen.


Rotating the Image

You can rotate the image in 90° increments when projecting an image file with PC Free.



Procedure

Press the [⊙] button on the remote control or the [↶/↷] and [↵/↴] buttons on the control panel to rotate the image.

Using the remote control

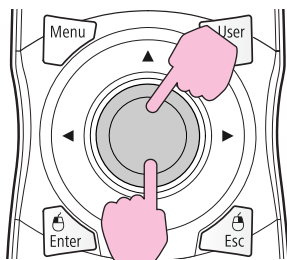

Using the control panel

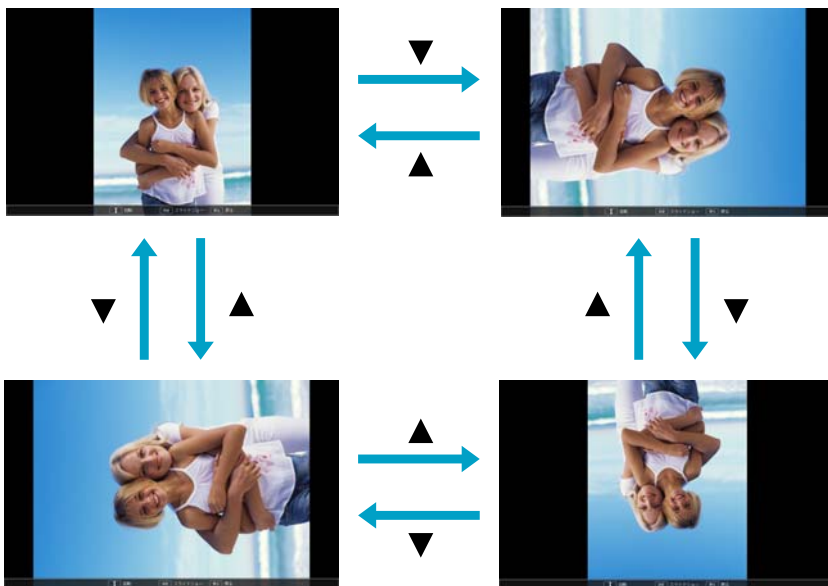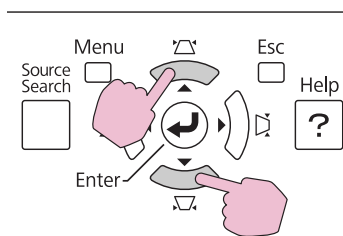

To project a PowerPoint file with PC Free, convert it to a FSE or SIT file by using the supplied EasyMP Slide Converter application software.

☞ [EasyMP Slide Converter Operation Guide](#)

In this Guide converted files are known as scenarios.

This section describes the method for playing scenarios stored in a USB storage device, and the operations during scenario playback.


Playing a Scenario

Procedure

- 1 Start PC Free.** ☞ [p.7](#)
The file list screen is displayed.
- 2 Press the [⊙] button on the remote control or [△/▲], [▽/▼], [↶/◀] and [↷/▶] buttons on the control panel to position the cursor on the target scenario.**
- 3 Press the [Enter] button.**
Starts playback.

Operations While Playing Back Scenarios

The following operations are possible using the remote control while playing a scenario.

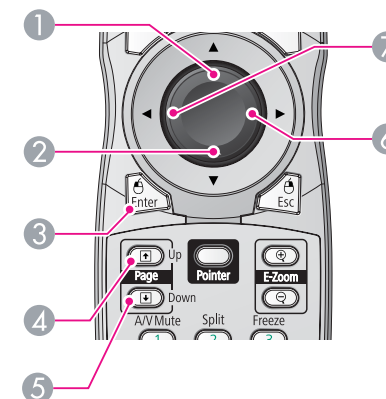

- ① Displays the previous slide for an FSE file.
- ② Displays the next slide for an FSE file.
- ③ Displays the next object or slide.
- ④ Displays the previous slide.
- ⑤ Displays the next slide.
- ⑥ Displays the next object or slide.
- ⑦ Displays the previous object or slide.

To end playing back a scenario, press the [Esc] button. On the screen that is displayed, select Exit, and then press the [Enter] button.



You can use the following function when projecting a scenario or image file.

Freeze ☞ [User's Guide "Freezing the Image \(Freeze\)"](#)

A/V Mute ☞ [User's Guide "Hiding the Image and Sound Temporarily \(A/V Mute\)"](#)

E-zoom ☞ [User's Guide "Enlarging Part of the Image \(E-Zoom\)"](#)

Image and movie files stored on a USB storage device and image files on a digital camera can be projected using PC Free by either of the following two methods.

- Projecting selected image and movie files
This is a function for projecting single files.
- Projecting all image and movie files in a folder in sequence (Slideshow)
This is a function for projecting the file contents of a folder in order, one file at a time.

Attention

The USB storage device is accessed frequently when playing back movie files. Do not disconnect the USB storage device at this time. PC Free may not operate correctly.

Projecting Movies and Images

Procedure

- 1 Start PC Free.**  **p.7**
The file list screen is displayed.
- 2 Press the  button on the remote control or , ,  and  buttons on the control panel to position the cursor on the image file or movie file to be projected.**

**3**

Press [Enter].

The image or movie starts to play back.

**4**

Perform one of the following procedures to end playback.

When playback has been ended, the file list will be displayed.

- While projecting still images: Press the [Esc] button.
- While projecting movies: Press the [Esc] button. On the screen that is displayed, select **Exit**, and then press the [Enter] button.



- Images can be rotated while projecting image files.  [p.9](#)
- You can make the following operations using the remote control while playing movie files.
Fast-forward: Press the [⏭] button in the [▶] direction.
Rewind: Press the [⏮] button in the [◀] direction.
Freeze (pause): Press the [⏸] button in the [▼] direction.
Three fast-forward/rewind speeds are available, and the speed changes each time the button is pressed.
To return to normal playback, press the [Enter] button.
Audio is not output while fast-forwarding, rewinding, or pausing are in progress.

Projecting Image Files in a Folder in Sequence (Slideshow)

You can project the image and movie files in a folder in sequence, one at a time. This function is called Slideshow. Perform the Slideshow by the following procedure.



You can set display conditions, such as projecting repeatedly and adding display effects while files are being switched. To change movie and image files automatically when you run Slideshow, set the **Screen Switching Time** in the PC Free Option menu to anything other than **No**. The default setting is **No**.  "Operation setting for slideshow" [p.14](#)

Procedure

1

Start PC Free.  [p.7](#)

The file list screen is displayed.

2

Press the [⏭] button on the remote control or [△/▲], [▽/▼], [◀/◄] and [▶/►] buttons on the control panel to position the cursor over the folder for the Slideshow, and then press the [Enter] button.

3

Select Slideshow from the file list screen, and then press the [Enter] button.

The Slideshow starts and the image and movie files in the folder are automatically projected in sequence, one at a time.

When the last file is projected, the file list screen is automatically displayed again. If you set **Continuous Play** to **On** in the Option menu, projection will start from the beginning again when the end is reached.  "Operation setting for slideshow" [p.14](#)

Just as with a scenario, you can proceed to the next screen, return to the previous screen, or stop playback during projection of a Slideshow.  "Operations While Playing Back Scenarios" [p.11](#)



- If the **Screen Switching Time** setting in the Option menu is set to **No**, files do not change automatically when you start a Slideshow. Press the [Enter] button or the [Page] (⏴) button on the remote control to continue to the next file.
- To end playing back Slideshow, press the [Esc] button. On the message window that is displayed, select **Exit**, and then press the [Enter] button.

Operation setting for slideshow

You can set the file display order and slideshow operation in the Option menu.

Procedure

- 1
- Position the cursor on "Option" at the bottom of the file list screen, and then press the [Enter] button.
- 2
- When the Option menu is displayed, set each of the items.
Enable settings by positioning the cursor on the target item and pressing the [Enter] button.
Details of the items are given below.



Display order	You can set the order of the files to be displayed. You can select sorting of the files into either Name order or Date order .
Continuous Play	You can determine whether to repeat the Slideshow.

Screen switching time	You can set the time for a single file to be displayed in Slideshow. You can set a time between No (0) and 60 Seconds. When you set No , auto play is disabled.
Effect	You can set the screen effects when changing slides.

- 3
- Press the [⏏] button on the remote control or [⏏/▲], [⏏/▼], [⏏/◀] and [⏏/▶] buttons on the control panel to position the cursor over "OK", and then press [Enter] button.
The settings are applied.
If you do not want to apply the settings, position the cursor on **Cancel** and press the [Enter] button.



Appendix

Refer to the following Guide if you have problems while playing back a scenario.  [EasyMP Slide Converter Operation Guide](#)

Cannot play back or display files in PC Free

Check	Remedy
Are you trying to play back a file in a format that is not supported by PC Free?	For information on files that can be played back in PC Free  "Specifications for Files that can be Projected Using PC Free" p.4
Are you using a USB storage device that incorporates security functions?	USB storage devices that incorporate security and some other USB storage devices sometimes cannot be used with this projector. Try saving the file in a different USB storage device.
Are you using a USB hard disk or USB card reader?	Some commercially available USB hard disks or USB card readers may not be compatible.

The slide cannot be changed.

Check	Remedy
Is the operation setting for Slideshow set correctly? Only when performing Slideshow	If the Screen Switching Time setting in the Option menu is set to No , the slides must be changed manually one at a time. If you want to change the slides automatically, change the setting to anything other than No .  p.14
Is the file set to automatically change the slides on PowerPoint? Only when projecting scenarios	To change the slides automatically, set the PowerPoint file to automatically change the slides before converting the file to a scenario.  EasyMP Slide Converter Operation Guide

Hiding the menus at the top and bottom of the screen

Check	Remedy
Are you displaying an individual image or movie file?	The menus will not be displayed if a Slideshow is performed.  p.13 If you do not want the slides to change automatically, set the Screen Switching Time setting in the Option menu to No .  p.14

Basic Scenario (SIT file) Editing


For SIT files converted via **Perform simplified conversion** on EasyMP Slide Converter, it is possible to change the order in which images are projected, and set whether or not to display individual images.



Basic editing cannot be performed for FSE files.

Procedure

- 1 Press the [⏏] button on the remote control or [⏏/▲], [⏏/▼], [⏏/◀] and [⏏/▶] buttons on the control panel to position the cursor over the SIT file you want to edit, and then press [Esc] button.
- 2 Select "Edit Scenario" from the menu displayed, then press the [Enter] button.

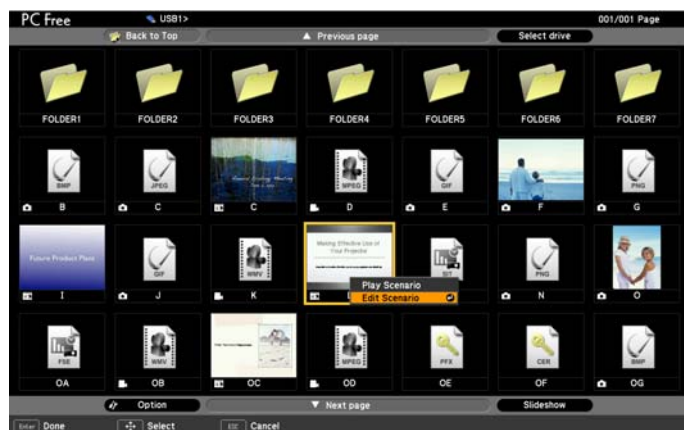


- 3 Position the cursor on the desired slide, and then press the [Esc] button.

The sub menu is displayed.


Select **Move Files** to change the order of the slides, and **Show/Hide** to show or to hide files, then press the [Enter] button.

Go to step 4 when you select **Move Files**.

Go to step 5 when you select **Show/Hide**.

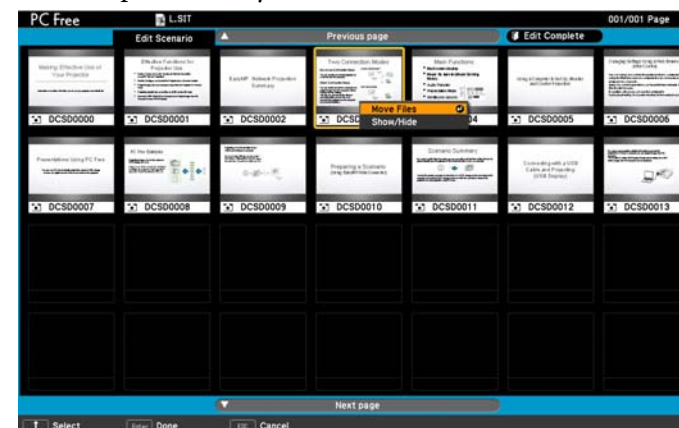

- 4 Move the cursor to the desired position, and then press the [Enter] button.

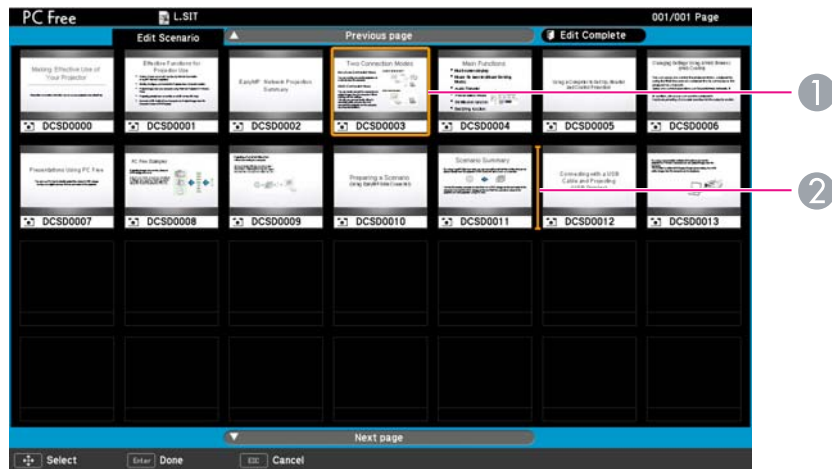

- ① The slide to move
- ② Cursor at the target destination

5

Once you have completed editing, position the cursor on "Edit Complete" at the top of screen, and then press the [Enter] button.

The edited content can only be accessed while the USB storage device is connected to the projector.

Registering a Digital Certificate to the Projector

When Security is set to EAP-TLS from the projector's Network menu, you need to register the client certificate and the CA certificate in the projector for authentication.

This section describes the method for using PC Free to register a digital certificate that has been saved in a USB storage device, to the projector.

Digital certificates that can be registered

Only one set of client certificate and CA certificate can be registered in the projector. If another digital certificate is registered, it overwrites the previous certificate.


Type	Extension	Notes
Client certificate	.pfx	Certificates without passwords (NULL) cannot be used.
CA certificate	.cer	Certificates encoded in binary format (DER). Certificates encoded in base64 cannot be used.

Registering a Client Certificate

Procedure

- 1 **Connect the USB storage device on which the digital certificate is stored to the projector and start PC Free.**  [p.7](#)
The file list screen is displayed.
- 2 **Press the  button on the remote control or , ,  and  buttons on the control panel to position the**

cursor over the client certificate (PFX file) icon, and then press the [Esc] button.

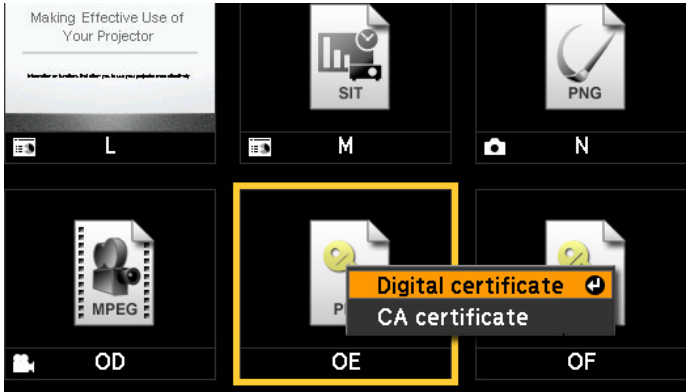

- 3 **Select "Digital certificate" from the menu displayed, then press the [Enter] button. The following screen is displayed.**



- 4 **Enter the password using the soft keyboard. (you can enter up to 32 single-byte alphanumeric characters)**  [User's Guide "Soft Keyboard Operations"](#)

- 5 When information on the certificate is displayed, check that the content is correct, and then position the cursor over "OK" and press the [Enter] button.

When the message "Digital certificate imported." is displayed, registration is complete.

- 4 When information on the certificate is displayed, check that the content is correct, and then position the cursor over "OK" and press the [Enter] button.

"CA certificate obtained. Restart." is displayed, registration is complete. After you press the [Enter] button to restart the projector, the certificate is authenticated. If authentication is successful, the IP address will be displayed on the LAN standby screen when the input source is switch to LAN.


Registering a CA Certificate

Procedure

- 1 Connect the USB storage device on which the digital certificate is stored to the projector and start PC Free.  p.7

The file list screen is displayed.

- 2 Press the [⊙] button on the remote control or [↖/▲], [↘/▼], [↵/◀] and [↵/▶] buttons on the control panel to position the cursor over the CA certificate (CER file) icon, and then press the [Esc] button.

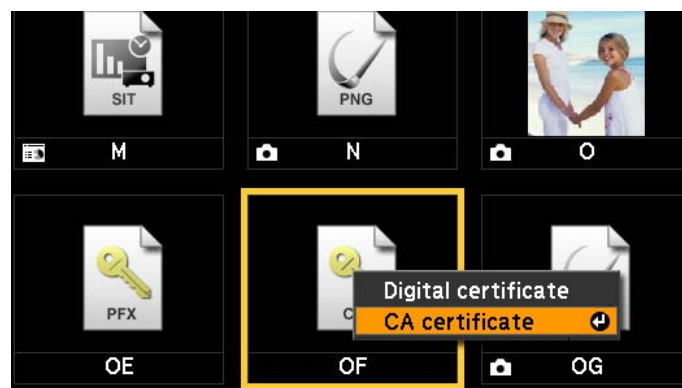

- 3 Select "CA certificate" from the menu displayed, then press the [Enter] button.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. No patent liability is assumed with respect to the use of the information contained herein. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

The contents of this guide may be changed or updated without further notice.

Illustrations in this guide and the actual projector may differ.

©SEIKO EPSON CORPORATION 2010. All rights reserved.

General Notice:

Microsoft, Windows, Windows NT, Windows Vista, Windows 7, PowerPoint, and Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

Other product names used herein are also for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

Software Copyright:

This product uses free software as well as software to which this company holds the rights.

A		M	
asf	5	Move Files	17
B		mp4	5
Back to Top	9	mpg	5
bmp	5	O	
C		Option	14
CA certificate	20	P	
Client certificate	19	png	5
Continuous Play	14	S	
D		Screen switching time	14
Digital certificate	19	Select Drive	8
Display order	14	sit	4
E		Slideshow	13
Edit Complete	18	W	
Edit Scenario	17	wmv	5
Effect	14		
F			
File list screen	7		
fse	4		
G			
gif	5		
J			
jpg	5		