



User's Guide

Home Cinema

EH-TW9200W

EH-TW9200

EH-TW8200W

EH-TW8200

EH-TW7200

FULL HD
3D
GLASSES



Full HD
1080p

HDMI™
HIGH DEFINITION MULTIMEDIA INTERFACE



MHL
Mobile High-Definition Link



Using Each Guide

The guides for this projector are organized as shown below.

Safety Instructions/Support and Service Guide

Contains information on using the projector safely, as well as a support and service guide, troubleshooting check lists, and so on. Make sure you read this guide before using the projector.




User's Guide (this guide)

Contains information on setting up and basic operations before using the projector, using the Configuration menu, and handling problems and performing routine maintenance.



Quick Start Guide

Contains information on the procedures for setting up the projector. Read this first.

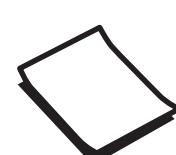

3D Glasses User's Guide

Contains information on handling the 3D Glasses and warnings and so on.



WirelessHD Transmitter User's Guide (EH-TW9200W/EH-TW8200W only)

Contains information on handling the WirelessHD Transmitter and warnings and so on.





Notations Used in This Guide

Safety Indications

The documentation and the projector use graphical symbols to show how to use the projector safely. The following shows the symbols and their meanings. Please understand and respect these caution symbols in order to avoid injury to persons or property.

Warning

This symbol indicates information that, if ignored, could possibly result in personal injury or even death due to incorrect handling.

Caution

This symbol indicates information that, if ignored, could possibly result in personal injury or physical damage due to incorrect handling.

General Information Indications

Attention

Indicates procedures which may result in damage or malfunctions to occur.

	Indicates additional information and points which may be useful to know regarding a topic.
	Indicates a page where detailed information regarding a topic can be found.
Menu Name	Indicates Configuration menu items. Example: Image - Color Mode
Button Name	Indicates the buttons on the remote control or the control panel. Example:  button

About the Use of "This Product" or "This Projector"

As well as the main projector unit, supplied items or optional extras may be referred to using the phrase "this product" or "this projector".

Organization of the Guide and Notations in the Guide

Using Each Guide	1
Notations Used in This Guide	2
Safety Indications	2
General Information Indications	2
About the Use of "This Product" or "This Projector"	2

Introduction

Projector Features	6
Dynamic 3D Display	6
Adjusting Images to Suit your Surroundings (Color Mode)	6
Absolute Color Adjustment	6
Conforms to Wireless Transmissions for the WirelessHD Standards (EH-TW9200W/EH-TW8200W Only)	7
Other Useful Functions	7

Part Names and Functions	8
Front/Top	8
Control Panel	9
Remote Control	11
Rear	14
Base	15
Appearance	16

Preparing

Installing	17
Various Projection Methods	17
Adjusting the Projection Size	18

Connecting a Device	19
Connecting Video Equipment	19
Connecting a Computer	20
Connecting External Devices	20
Connecting to the Trigger out port	20
Connecting WirelessHD devices (EH-TW9200W/EH-TW8200W only)	20
Connecting smartphones or tablets (EH-TW9200W/EH-TW8200W only)	21
Removing the Interface Cover	21

Connecting an HDMI Cable Clamp (EH-TW9200W/EH-TW9200/EH-TW8200W/EH-TW8200 only)	22
---	----

Preparing the Remote Control

Installing the Remote Control Batteries	23
Remote Control Operating Range	24
Operating range (left to right)	24
Operating range (top to bottom)	24

Basic Operations

Starting and Ending Projection	25
Turning on the Projector and Projecting	25
If the Target Image is not Projected	26
Turning Off	26

Adjusting the Projected Screen

Displaying the Test Pattern	27
Adjusting the Focus	27
Adjusting the Projection Size (Zoom Adjustment)	28
Adjusting the Projector's Tilt	28
Adjusting the Position of the Projected Image (Lens Shift)	28
Correcting Keystone Distortion	29
Hiding the Image Temporarily	29

Adjusting the Image

Adjusting the Image	30
Selecting the Projection Quality (Color Mode)	30
Switching the Screen Between Full and Zoom (Aspect)	31

Absolute Color Adjustments

Adjusting Hue, Saturation, and Brightness	33
Adjusting the Gamma	34
Select and adjust the correction value	34
Adjust while viewing the image (EH-TW9200W/EH-TW9200/EH-TW8200W/EH-TW8200 only)	34
Adjust using the gamma adjustment graph (EH-TW9200W/EH-TW9200/EH-TW8200W/EH-TW8200 only)	35
Adjusting the RGB (Offset/Gain)	35
Color Temp.	35

Skin Tone	36
Detailed Image Adjustments	37
Adjusting the Sharpness	37
Setting Auto Iris	38
Frame Interpolation (EH-TW9200W/EH-TW9200/EH-TW8200W/EH-TW8200 only)	38
Super-resolution	39
Panel Alignment	39
Image Processing	40
Selecting the Color Gamut (EH-TW9200W/EH-TW9200 Only)	41
Viewing the Image at the Saved Image Quality (Memory Function)	42
Saving Function	42
Saving a Memory	42
Loading a Memory	43
Deleting a Saved Memory	43
Renaming a Memory	43
Useful Functions	
Enjoying 3D Images	45
Setting 3D Images	45
When the projector detects a 3D format	45
When the projector cannot detect a 3D format	45
If the 3D image cannot be viewed	45
Using 3D Glasses	46
Charging the 3D Glasses	46
Pairing 3D Glasses	46
Wearing the 3D Glasses	47
Range for Viewing 3D Images	47
Warnings Regarding Viewing 3D Images	48
Converting 2D Images to 3D and Viewing	50
Connecting with WirelessHD (EH-TW9200W/EH-TW8200W Only)	52
Installing the WirelessHD Transmitter	52
WirelessHD Transmitter part names	52
Setting the WirelessHD Transmitter	53
Projecting Images	54
WirelessHD Settings Menu	56
WirelessHD Transmission Range	56

Useful Functions of the WirelessHD Transmitter	57
Switching the target image	58
Switching the image source	59
Remote control operating range	60
Using the HDMI Link Function	61
HDMI Link Function	61
HDMI Link Settings	61
Device Connections	62
Projecting Two Different Images Using Picture in Picture	63
Types of Screen that can be Displayed Simultaneously	63
Projecting on a Picture in Picture	63
Starting Picture in Picture	63
Changing the Picture in Picture settings	64
Configuration Menu	
Configuration Menu Functions	65
Configuration Menu Operations	65
Configuration Menu Table	66
Image menu	66
Signal menu	68
Settings menu	70
Extended menu	73
Memory menu	75
Info menu	75
Reset menu	75
Picture in Picture menu	76
Troubleshooting	
Problem Solving	77
Reading the Indicators	77
Indicator status during an error/warning	77
Indicator status during normal operation	79
When the Indicators Provide No Help	80
Check the problem	80
Problems relating to images	80
Problems when projection starts	85
Problems with the remote control	85

Contents

Problems with the control panel	85
Problems with 3D	86
Problems with HDMI	86
Problems with WirelessHD (EH-TW9200W/ EH-TW8200W only)	87

Maintenance

Maintenance	89
Cleaning the Parts	89
Cleaning the air filter	89
Cleaning the main unit	90
Cleaning the lens	91
Cleaning the 3D Glasses	91
Replacement Periods for Consumables	91
Air filter replacement period	91
Lamp replacement period	91
Replacing Consumables	92
Replacing the air filter	92
Replacing the lamp	93
Resetting lamp hours	94

Appendix

Optional Accessories and Consumables	96
Optional Items	96
Consumables	96
Supported Resolutions	97
Component Video	97
Composite Video	97
Computer Signals (Analog RGB)	97
HDMI1/HDMI2 Input Signal	97
3D Input Signal	98
WirelessHD Input Signal	98
3D Input Signal MHL (via a WirelessHD Transmitter*)	98

Specifications	100
Glossary	103
General Notes	105
General Notice	106




Projector Features

Dynamic 3D Display


Enjoy 3D contents on Blu-ray and images filmed with a 3D camera through a stunning projection display. [p.45](#)

You can also convert standard 2D images into 3D images. [p.50](#)

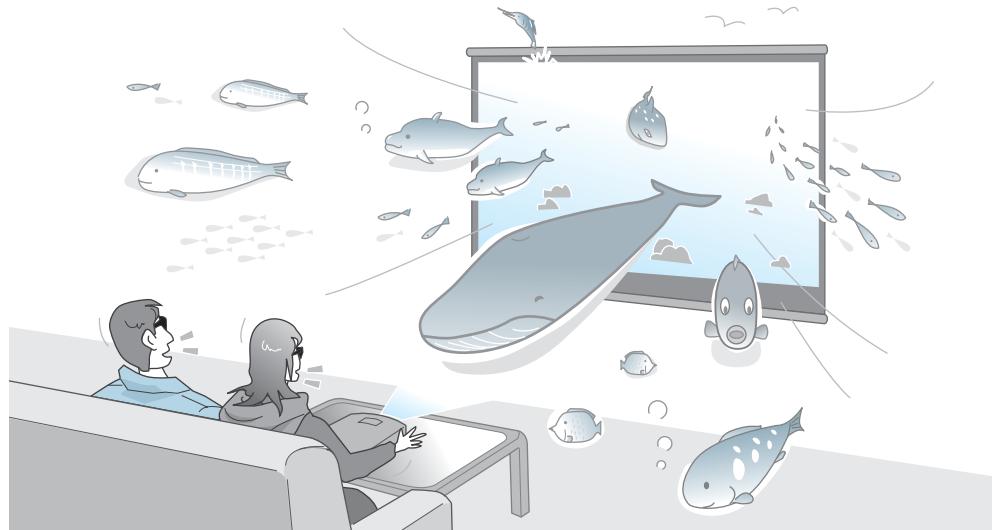


Adjusting Images to Suit your Surroundings (Color Mode)

By simply selecting the **Color Mode**, you can project the optimum image to suit your surroundings. [p.30](#)
Setting Example

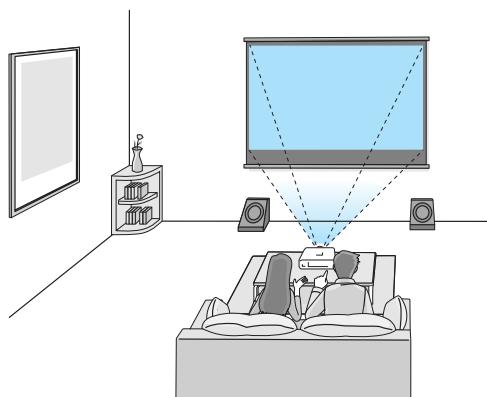

Living Room
For use in a bright room

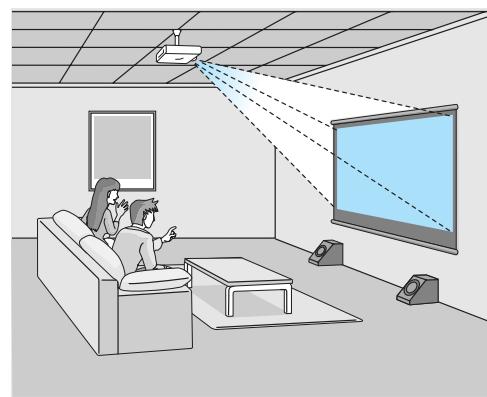

Cinema
For movies and concerts in a dark room

Absolute Color Adjustment

As well as using Color Mode, you can also adjust the color temperature of the image and skin tones to suit your taste. [p.35](#)


What's more, you can obtain colors that match the image and achieve the colors you want through a combination of gamma adjustment, RGB offset or gain adjustment for each color, and hue, saturation, and brightness adjustment for each RGBCMY color. [p.33](#)

Conforms to Wireless Transmissions for the WirelessHD Standards (EH-TW9200W/EH-TW8200W Only)

The projector can wirelessly receive data for images from WirelessHD compatible AV devices. You do not need to connect a cable directly to the main projector unit.

You can connect up to five AV devices to the WirelessHD Transmitter at the same time, and switch images using the remote control.

You can also connect other output devices such as televisions, and switch the device. This allows other output devices to project images from the connected AV device, even if the projector is off.  [p.52](#)

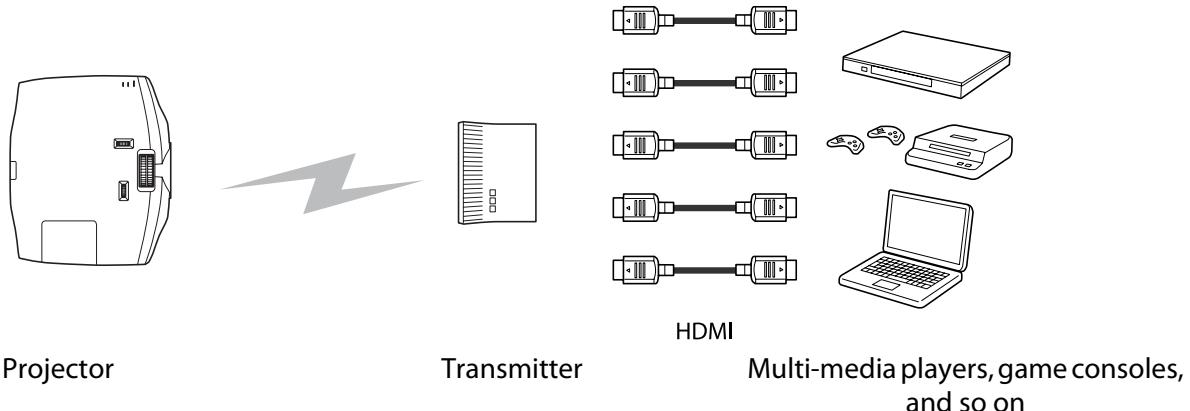

You can also connect MHL compatible smartphones or tablets with an MHL compatible cable.  [p.21](#)

Other Useful Functions


In addition, the following useful functions are provided.

- The remote control contains a backlight function allowing for easy use even in dark rooms. Operations are also simplified by only pressing the  button.  [p.11](#)
- Lens shift allows you to adjust the projection position when the projector cannot be setup directly in front of the screen. The ability to move the projection position up, down, left, and right from in front of the screen without changing the projection range, gives you more freedom to place the projector where you want.  [p.28](#)
- The **Frame Interpolation** function creates an intermediary image between one frame and the next rendering a smoother, cleaner viewing experience, and removing jarring movements such as frame skipping. (EH-TW9200W/EH-TW9200/EH-TW8200W/EH-TW8200 only)  [p.38](#)
- The **Super-resolution** function allows you to enjoy DVDs in high resolution. Also, low resolution areas (parts that are blurred) of full hi-vision images become smoother and sharper.  [p.39](#)




Part Names and Functions

Front/Top

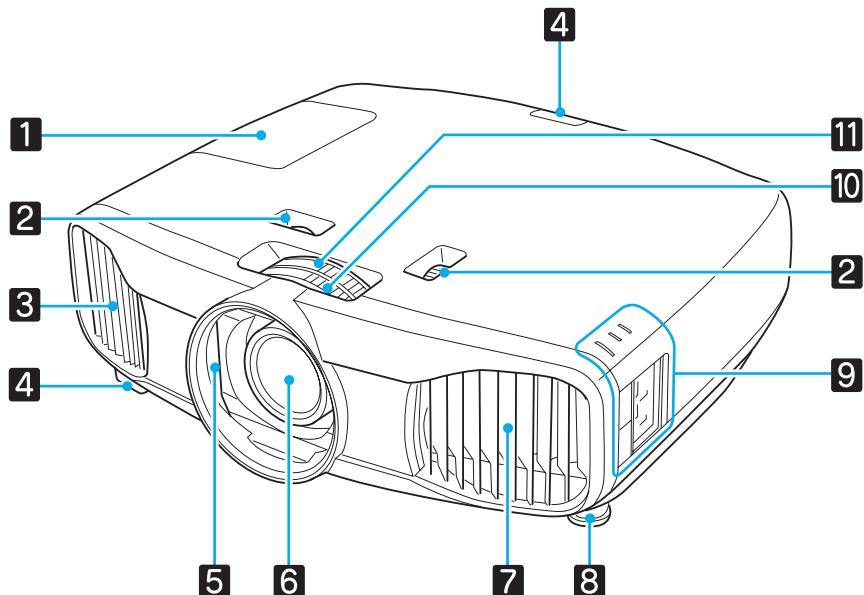

Name		Function
1	Lamp cover	Open when replacing the projector's lamp.  p.93
2	Lens shift dial	Adjusts the position of the projected image.  p.28
3	Air exhaust vent	Exhaust vent for air used to cool the projector internally.
		<p> Caution</p> <p>While projecting, do not put your face or hands near the air exhaust vent, and do not place objects that may become warped or damaged by heat near the vent. Hot air from the air exhaust vent could cause burns, warping, or accidents to occur.</p>
4	Remote receiver	Receives signals from the remote control.  p.24
5	Lens shutter	Closes automatically when the projector is turned off to protect the lens from being scratched or soiled.  p.25
6	Projector's lens	Images are projected from here.
7	Air filter cover	When cleaning or replacing the air filter, open this cover and remove the air filter.  p.89 , p.92
	Air intake vent	Intake vent for air used to cool the projector internally.
8	Front adjustable foot	When setup on a surface such as a table, extend the foot to adjust the horizontal tilt.  p.28
9	Control panel	Control panel on the projector. Open the control panel cover to perform operations.  p.9
10	Focus ring	Adjusts the image focus.  p.27
11	Zoom ring	Adjusts the image size.  p.28


Control Panel

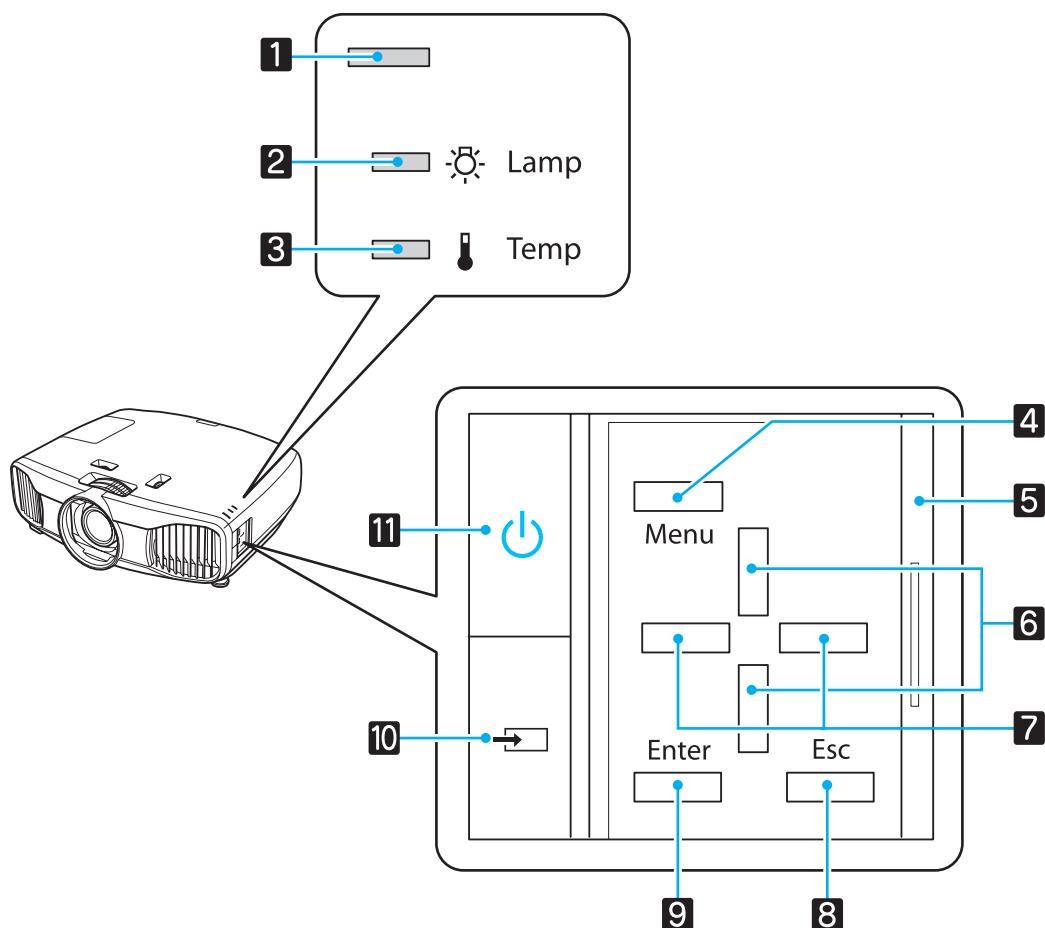


Buttons/Indicators		Function
1		Flashes to indicate warm-up in progress or cool-down in progress. Shows the projector's status through a combination of other indicators lit and flashing. p.77
2		Flashes orange when it is time to replace the lamp. Shows the projector's errors through a combination of other indicators lit and flashing. p.77
3		Flashes orange if the internal temperature is too high. Shows the projector's errors through a combination of other indicators lit and flashing. p.77
4	Menu	Displays and closes the Configuration menu. On the Configuration menu, you can make adjustments and settings for Signal, Image, Input Signal, and so on. p.65
5	Control panel cover	Cover for the control panel. When you want to use the control panel, grip the knob and slide the cover open.
6		Selects the adjustment value for the keystone correction and for menu items. p.29
7		Selects adjustment values for menu items. p.65
8	Esc	Returns to the previous menu level when a menu is displayed. p.65
9	Enter	Selects functions and settings when a menu is displayed. p.65

Buttons/Indicators		Function
10		Changes to the image from each input port.  p.26
11		Turns the projector power on or off.  p.25 Lit when the projector is on. Shows the projector's errors through a combination of other indicators lit and flashing.  p.77


Remote Control

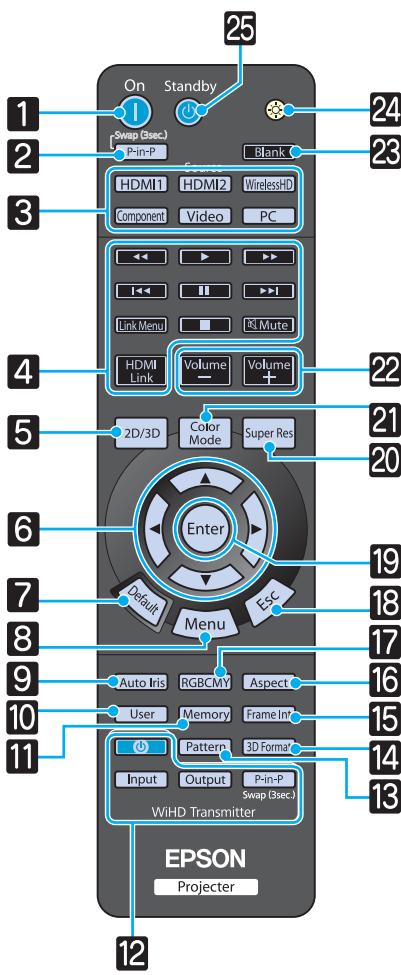

Button	Function
1 On	Turns the projector on. (p.25)
2 P-in-P	Allows you to simultaneously project two image sources, one in the main screen and the other in the sub screen. (Picture in Picture) (p.63)
3 HDMI1 HDMI2 WirelessHD Component Video PC	Press and hold the button to swap the main or sub screen image sources.
4 HDMI Link	Changes to the image from each input port. (p.26) WirelessHD button is only available for EH-TW9200W/EH-TW8200W.
5 2D/3D	This button displays the settings menu for HDMI Link. With the other buttons, you can then start or stop playback, and so on for connected devices that meets the HDMI CEC standards. (p.61)
6	Changes between 2D and 3D. (p.45)
7 Default	Selects menu items and adjustment values. (p.65)
8 Menu	The adjustment value returns to its default value when pressed while the menu's adjustment screen is displayed. (p.65)
9 Auto Iris	Displays and closes the Configuration menu. On the Configuration menu, you can make adjustments and settings for Signal, Image, Input Signal, and so on. (p.65)
10 User	Sets Auto Iris. (p.38)
11 Memory	Performs the function assigned to the user button. (p.70)
12	Saves, loads, or erases a memory. (p.42)

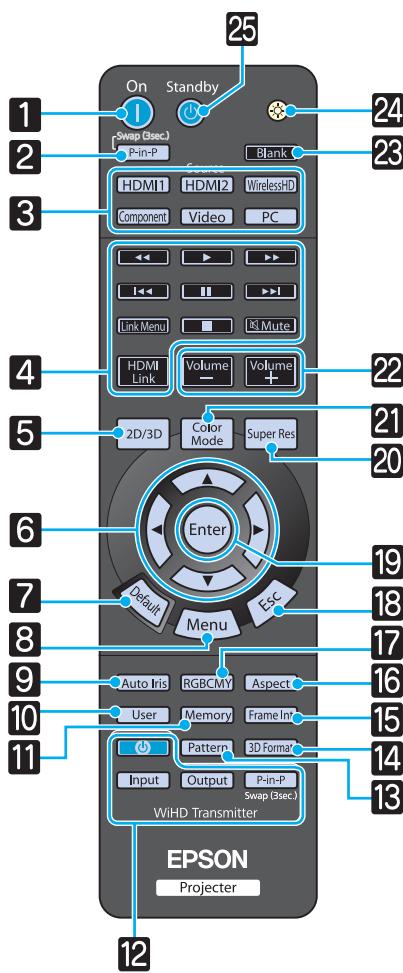


Button	Function
12	(Only available for EH-TW9200W/EH-TW8200W) Input Output P-in-P
13	WiHD Transmitter control Turns on the WirelessHD Transmitter, or switches the input and output. Make sure you point the remote control at the WirelessHD Transmitter when performing operations. (p.52)
14	Pattern
15	3D Format
16	Changes the 3D format. This projector supports the following 3D formats. <ul style="list-style-type: none">• Frame Packing• Side by Side• Top and Bottom (p.45)
17	Frame Int
18	(Only available for EH-TW9200W/EH-TW9200/EH-TW8200W/EH-TW8200) Reduces the jarring effect caused by quick movements by interpolating frames, and adjusts to render a smoother, clearer image. (p.38)
19	Aspect
20	RGBCMY
21	Aspect
22	Esc
23	Frame Int
24	Enter
25	Super Res
26	When a menu is displayed, it accepts and enters the current selection and moves to the next level. (p.65)
27	Color Mode
28	Pattern
29	3D Format
30	Input
31	Output
32	P-in-P
33	Swap (3sec)
34	Blank
35	WiHD Transmitter
36	EPSON Projector
37	On
38	Standby
39	Blank
40	Swap (3sec)
41	P-in-P
42	Blank
43	Blank
44	Blank
45	Blank
46	Blank
47	Blank
48	Blank
49	Blank
50	Blank
51	Blank
52	Blank
53	Blank
54	Blank
55	Blank
56	Blank
57	Blank
58	Blank
59	Blank
60	Blank
61	Blank
62	Blank
63	Blank
64	Blank
65	Blank
66	Blank
67	Blank
68	Blank
69	Blank
70	Blank
71	Blank
72	Blank
73	Blank
74	Blank
75	Blank
76	Blank
77	Blank
78	Blank
79	Blank
80	Blank
81	Blank
82	Blank
83	Blank
84	Blank
85	Blank
86	Blank
87	Blank
88	Blank
89	Blank
90	Blank
91	Blank
92	Blank
93	Blank
94	Blank
95	Blank
96	Blank
97	Blank
98	Blank
99	Blank
100	Blank
101	Blank
102	Blank
103	Blank
104	Blank
105	Blank
106	Blank
107	Blank
108	Blank
109	Blank
110	Blank
111	Blank
112	Blank
113	Blank
114	Blank
115	Blank
116	Blank
117	Blank
118	Blank
119	Blank
120	Blank
121	Blank
122	Blank
123	Blank
124	Blank
125	Blank
126	Blank
127	Blank
128	Blank
129	Blank
130	Blank
131	Blank
132	Blank
133	Blank
134	Blank
135	Blank
136	Blank
137	Blank
138	Blank
139	Blank
140	Blank
141	Blank
142	Blank
143	Blank
144	Blank
145	Blank
146	Blank
147	Blank
148	Blank
149	Blank
150	Blank
151	Blank
152	Blank
153	Blank
154	Blank
155	Blank
156	Blank
157	Blank
158	Blank
159	Blank
160	Blank
161	Blank
162	Blank
163	Blank
164	Blank
165	Blank
166	Blank
167	Blank
168	Blank
169	Blank
170	Blank
171	Blank
172	Blank
173	Blank
174	Blank
175	Blank
176	Blank
177	Blank
178	Blank
179	Blank
180	Blank
181	Blank
182	Blank
183	Blank
184	Blank
185	Blank
186	Blank
187	Blank
188	Blank
189	Blank
190	Blank
191	Blank
192	Blank
193	Blank
194	Blank
195	Blank
196	Blank
197	Blank
198	Blank
199	Blank
200	Blank
201	Blank
202	Blank
203	Blank
204	Blank
205	Blank
206	Blank
207	Blank
208	Blank
209	Blank
210	Blank
211	Blank
212	Blank
213	Blank
214	Blank
215	Blank
216	Blank
217	Blank
218	Blank
219	Blank
220	Blank
221	Blank
222	Blank
223	Blank
224	Blank
225	Blank
226	Blank
227	Blank
228	Blank
229	Blank
230	Blank
231	Blank
232	Blank
233	Blank
234	Blank
235	Blank
236	Blank
237	Blank
238	Blank
239	Blank
240	Blank
241	Blank
242	Blank
243	Blank
244	Blank
245	Blank
246	Blank
247	Blank
248	Blank
249	Blank
250	Blank
251	Blank
252	Blank
253	Blank
254	Blank
255	Blank
256	Blank
257	Blank
258	Blank
259	Blank
260	Blank
261	Blank
262	Blank
263	Blank
264	Blank
265	Blank
266	Blank
267	Blank
268	Blank
269	Blank
270	Blank
271	Blank
272	Blank
273	Blank
274	Blank
275	Blank
276	Blank
277	Blank
278	Blank
279	Blank
280	Blank
281	Blank
282	Blank
283	Blank
284	Blank
285	Blank
286	Blank
287	Blank
288	Blank
289	Blank
290	Blank
291	Blank
292	Blank
293	Blank
294	Blank
295	Blank
296	Blank
297	Blank
298	Blank
299	Blank
300	Blank
301	Blank
302	Blank
303	Blank
304	Blank
305	Blank
306	Blank
307	Blank
308	Blank
309	Blank
310	Blank
311	Blank
312	Blank
313	Blank
314	Blank
315	Blank
316	Blank
317	Blank
318	Blank
319	Blank
320	Blank
321	Blank
322	Blank
323	Blank
324	Blank
325	Blank
326	Blank
327	Blank
328	Blank
329	Blank
330	Blank
331	Blank
332	Blank
333	Blank
334	Blank
335	Blank
336	Blank
337	Blank
338	Blank
339	Blank
340	Blank
341	Blank
342	Blank
343	Blank
344	Blank
345	Blank
346	Blank
347	Blank
348	Blank
349	Blank
350	Blank
351	Blank
352	Blank
353	Blank
354	Blank
355	Blank
356	Blank
357	Blank
358	Blank
359	Blank
360	Blank
361	Blank
362	Blank
363	Blank
364	Blank
365	Blank
366	Blank
367	Blank
368	Blank
369	Blank
370	Blank
371	Blank
372	Blank
373	Blank
374	Blank
375	Blank
376	Blank
377	Blank
378	Blank
379	Blank
380	Blank
381	Blank
382	Blank
383	Blank
384	Blank
385	Blank
386	Blank
387	Blank
388	Blank
389	Blank
390	Blank
391	Blank
392	Blank
393	Blank
394	Blank
395	Blank
396	Blank
397	Blank
398	Blank
399	Blank
400	Blank
401	Blank
402	Blank
403	Blank
404	Blank
405	Blank
406	Blank
407	Blank
408	Blank
409	Blank
410	Blank
411	Blank
412	Blank
413	Blank
414	Blank
415	Blank
416	Blank
417	Blank
418	Blank
419	Blank
420	Blank
421	Blank
422	Blank
423	Blank
424	Blank
425	Blank
426	Blank
427	Blank
428	Blank
429	Blank
430	Blank
431	Blank
432	Blank
433	Blank
434	Blank
435	Blank
436	Blank
437	Blank
438	Blank
439	Blank
440	Blank
441	Blank
442	Blank
443	Blank
444	Blank
445	Blank
446	Blank
447	Blank
448	Blank
449	Blank
450	Blank
451	Blank
452	Blank
453	Blank
454	Blank
455	Blank
456	Blank
457	Blank
458	Blank
459	Blank
460	Blank
461	Blank
462	Blank
463	Blank
464	Blank
465	Blank
466	Blank
467	Blank
468	Blank
469	Blank
470	Blank
471	Blank
472	Blank
473	Blank
474	Blank
475	Blank
476	Blank
477	Blank
478	Blank
479	Blank
480	Blank
481	Blank
482	Blank
483	Blank
484	Blank
485	Blank
486	Blank
487	Blank
488	Blank
489	Blank
490	Blank
491	Blank
492	Blank
493	Blank
494	Blank
495	Blank
496	Blank
497	Blank
498	Blank
499	Blank
500	Blank
501	Blank
502	Blank
503	Blank
504	Blank
505	Blank
506	Blank
507	Blank
508	Blank
509	Blank
510	Blank
511	Blank
512	Blank
513	Blank
514	Blank
515	Blank
516	Blank
517	Blank
518	Blank
519	Blank
520	Blank
521	Blank
522	Blank
523	Blank
524	Blank
525	Blank
526	Blank
527	Blank
528	Blank
529	Blank
530	Blank
531	Blank
532	Blank
533	Blank
534	Blank
535	Blank
536	Blank
537	Blank
538	Blank
539	Blank
540	Blank
541	Blank
542	Blank
543	Blank
544	Blank
545	Blank
546	Blank
547	Blank
548	Blank
549	Blank
550	Blank
551	Blank
552	Blank
553	Blank
554	Blank
555	Blank
556	Blank
557	Blank
558	Blank
559	Blank
560	Blank
561	Blank
562	Blank
563	Blank
564	Blank
565	Blank
566	Blank
567	Blank
568	Blank
569	Blank
570	Blank
571	Blank
572	Blank
573	Blank
574	Blank
575	Blank
576	Blank
577	Blank
578	Blank
579	Blank
580	Blank
581	Blank
582	Blank
583	Blank
584	Blank
585	Blank
586	Blank
587	Blank
588	Blank
589	Blank
590	Blank
591	Blank
592	Blank
593	Blank
594	Blank
595	Blank
596	Blank
597	Blank
598	Blank
599	Blank
600	Blank
601	Blank

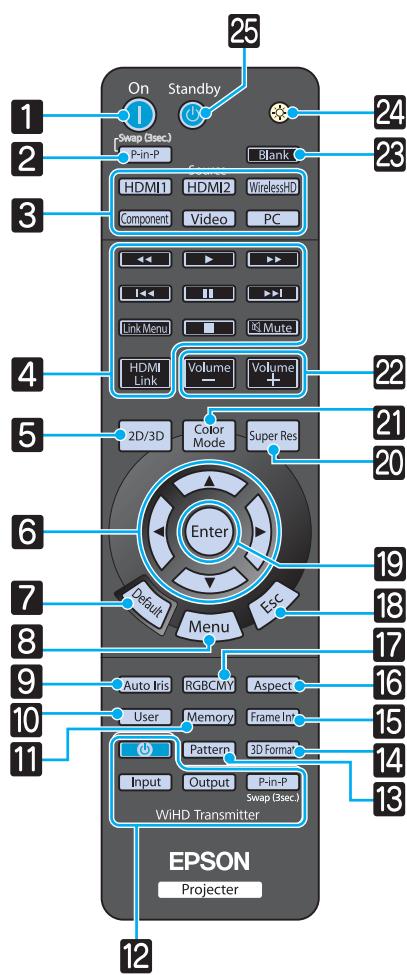


Button	Function
25	Standby Turns the projector off. p.26

Rear

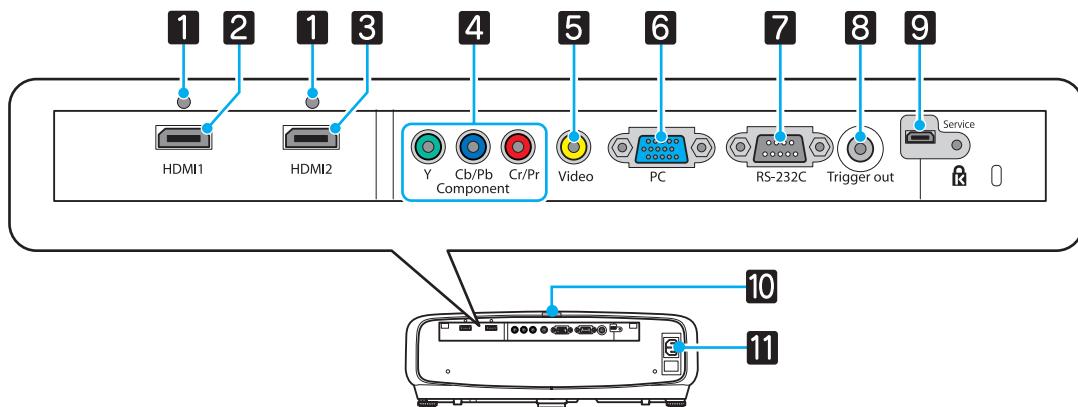

Name		Function
1	Cable holder	Thick HDMI cables with a large outer diameter and so on, may disconnect easily due to the weight of the cable. To prevent the cable from disconnecting, fix it in place using the HDMI cable clamp supplied (EH-TW9200W/EH-TW9200/EH-TW8200W/EH-TW8200 only).  p.22
2	HDMI1 port	Connects HDMI compatible video equipment and computers.  p.19
3	HDMI2 port	
4	Component port	Connects to the component (YCbCr or YPbPr) output port on video equipment.  p.19
5	Video port	Connects to the composite video output port on video equipment.  p.19
6	PC port	Connects to the RGB output port on a computer.  p.20
7	RS-232C port	When controlling the projector, connect the projector to a computer with an RS-232C cable. This port is for control use and should not normally be used.  p.100
8	Trigger out port	Connects with external devices such as motorized screens.  p.20
9	Service port	Service port. This is not normally used.
10	Remote receiver	Receives signals from the remote control.  p.24
11	Power inlet	Connect the power cord.  p.25

Base

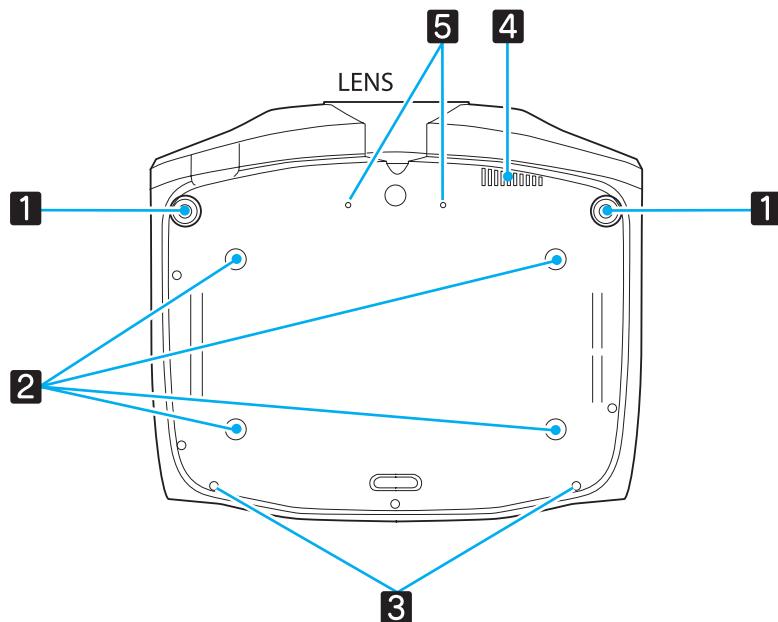


Name	Function
1 Front adjustable foot	When setup on a surface such as a table, extend the foot to adjust the horizontal tilt. p.28
2 Ceiling mount fixing points (four points)	Attaches the optional ceiling mount here when suspending the projector from a ceiling. p.96
3 Cable cover fixing screw	Attaches the optional cable cover.
4 Air exhaust vent	Exhaust vent for air used to cool the WirelessHD receiver. When suspending from a ceiling, make sure it is setup so that dust does not collect in this section.
5 Screw for anamorphic lens	Attaches the anamorphic lens.



Appearance


Units: mm

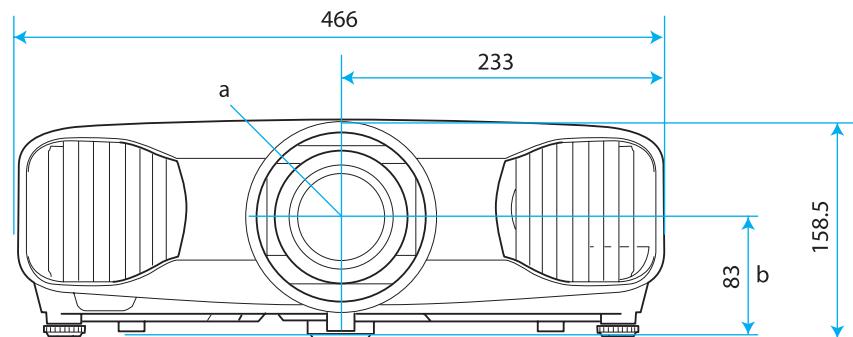

a Center of lens

b Distance from center of lens to suspension bracket fixing point

c Lens direction

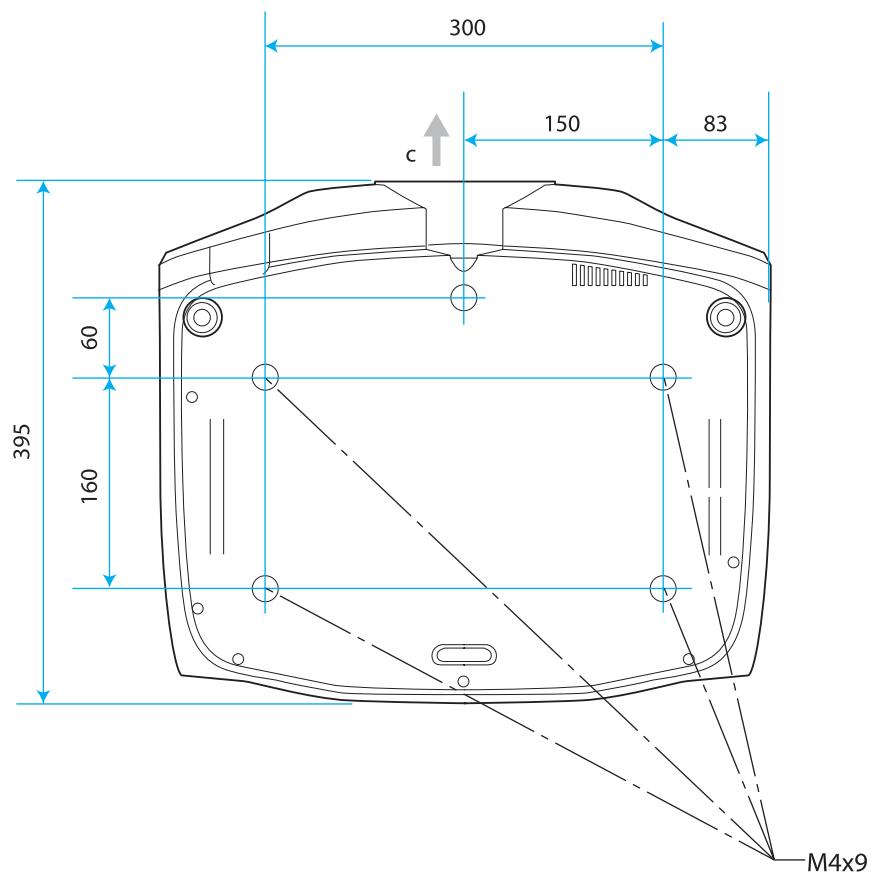



Installing

Various Projection Methods

⚠ Warning



- A special method of installation is required when suspending the projector from a ceiling (ceiling mount). If it is not installed correctly, it could fall causing an accident and injury.
- If you use adhesives, lubricants, or oil on the ceiling mount fixing points to prevent screws from loosening, or if you use things such as lubricants or oils on the projector, the projector case may crack causing it to fall from its ceiling mount. This could cause serious injury to anyone under the projector and also damage the projector.
- Do not setup the projector on its side. This may cause malfunctions to occur.
- Try not to setup the projector in locations subject to high humidity and dust, or in locations subject to smoke from fires or tobacco smoke.

Attention

Clean the air filter once every three months. Clean it more often if the environment is particularly dusty.

☛ [p.89](#)

Placing on a table and so on and projecting Suspending from the ceiling and projecting

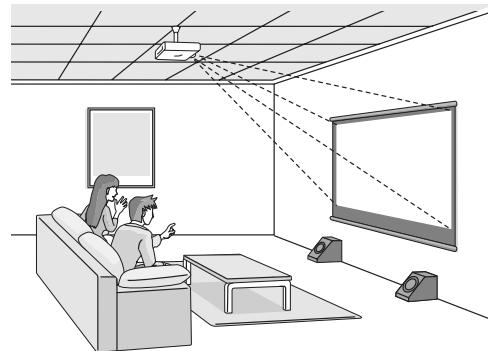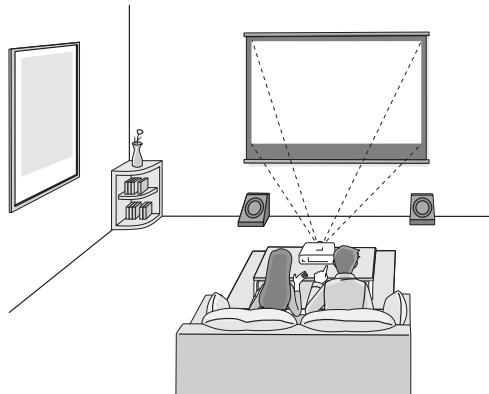


When projecting from a ceiling, change **Projection** to a ceiling setting. ☛ **Settings - Projection** [p.70](#)

Using lens shift


With lens shift, you can adjust the projection position up, down, left, and right.

This allows you to make easy adjustments without distorting the image, even if you cannot setup the projector directly in front of the screen.

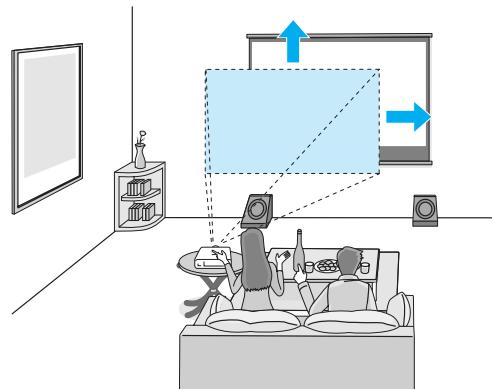

Adjusting the Projection Size

The size of the projection increases as the projector is moved away from the screen. Use the table below to setup the projector at the optimum position from the screen. The values given here are for your reference only.

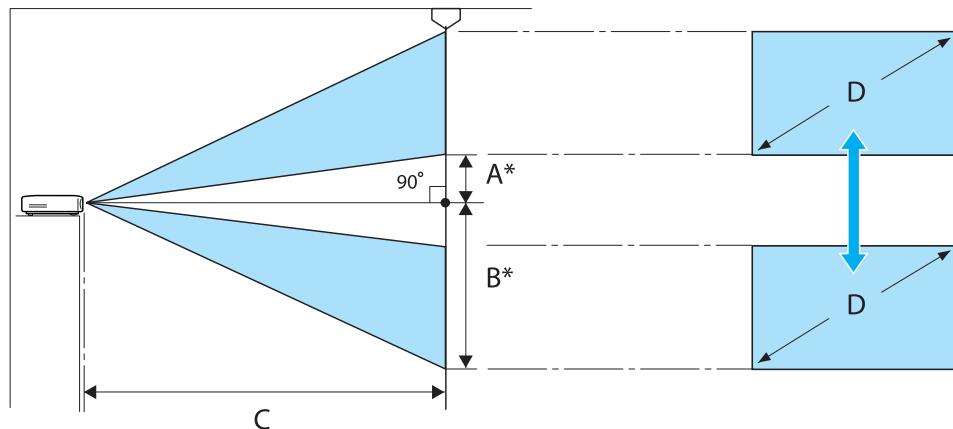

* Distance from the center of the lens to the edge of the projected image.

(A: When lens shift is raised to its highest level)

(B: When lens shift is lowered to its lowest level)

Unit: cm

16:9 Screen Size		Projection Distance (C)		Lens Shift Maximum Values*	
D	W x H	Minimum (Wide)	Maximum (Tele)	Distance (A)	Distance (B)
40"	89 x 50	117	252	23	73
60"	130 x 75	177	380	34	109
80"	180 x 100	238	508	46	145
100"	220 x 120	298	636	57	181
120"	270 x 150	359	764	68	218
150"	330 x 190	450	956	85	272
180"	440 x 250	540	1148	103	327

4:3 Screen Size		Projection Distance (C)		Lens Shift Maximum Values*	
D	W x H	Minimum (Wide)	Maximum (Tele)	Distance (A)	Distance (B)
40"	81 x 61	144	309	28	89
60"	120 x 90	218	466	42	133
80"	160 x 120	292	623	56	178
100"	200 x 150	366	779	70	222
120"	240 x 180	440	936	84	267
150"	300 x 230	551	1171	105	333
200"	410 x 300	736	1562	139	444

* Vertical and horizontal lens shift cannot both be set to their maximum values.  p.28



Connecting a Device

Attention


 
- Make cable connections before connecting to a power outlet.
- Check the shape of the cable's connector and the shape of the port, and then connect. If you force a connector of a different shape into the port, it could cause damage and a malfunction to occur.

EH-TW9200W/EH-TW8200W comes with an interface cover allowing you to clearly see the connector section on the rear. Remove the interface cover before connecting any cables.  [p.21](#)

Connecting Video Equipment


To project images from DVD players or VHS video and so on, connect to the projector using one of the following methods.

When using an HDMI cable

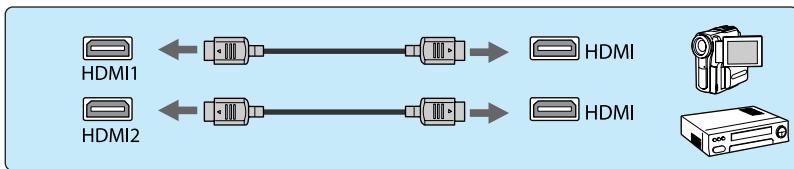


Fix the HDMI cable in place using the HDMI cable clamp. (EH-TW9200W/EH-TW9200/EH-TW8200W/EH-TW8200 only)  [p.22](#)

When using a video cable

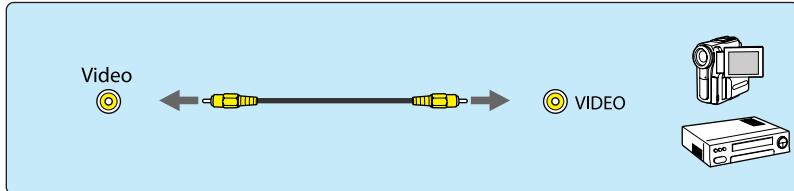

When using a component video cable

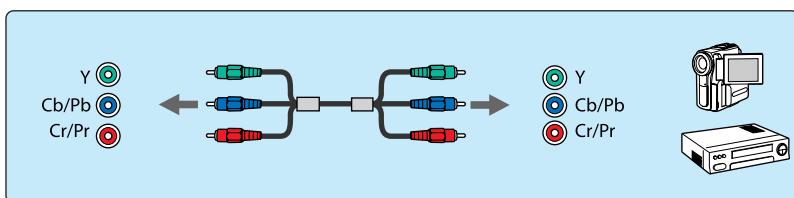


- The cable differs depending on the output signal from the connected video equipment.
- Some types of video equipment are capable of outputting different types of signals. Check the user's guide supplied with the video equipment to confirm which signals can be output.
- Since this projector has no built-in speaker, connect your AV system to enjoy the audio from connected equipment.



Connecting a Computer

To project images from a computer, connect the computer using one of the following methods.

When using a computer cable

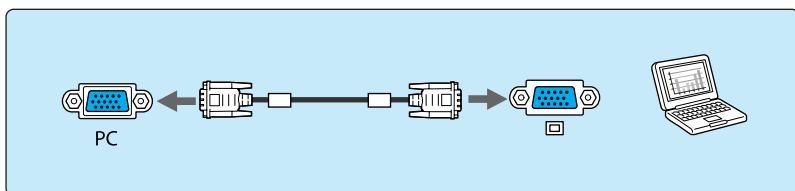

When using an HDMI cable

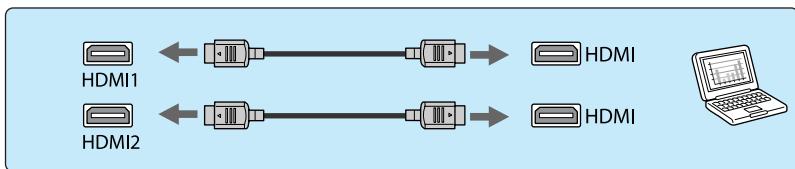 



Fix the HDMI cable in place using the HDMI cable clamp. (EH-TW9200W/EH-TW9200/EH-TW8200W/EH-TW8200 only)  [p.22](#)

Connecting External Devices

Connecting to the Trigger out port

To connect external devices such as motorized screens, connect a mini-jack stereo cable (3.5 mm) to the Trigger Out port.

 When set to on, a signal (12 V DC) is output from this port to communicate the projector's status (on or off) to connected devices such as electric screens.

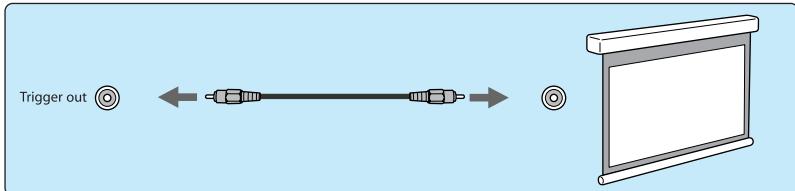

 When using the Trigger out port, set the Trigger Out function.  **Extended - Operation - Trigger Out** [p.73](#)

Connecting WirelessHD devices (EH-TW9200W/EH-TW8200W only)

The projector receives transmissions from the WirelessHD Transmitter, and projects the images.  [p.52](#)


Change the projected image by pressing the  button on the remote control or the  button on the control panel.

-  When receiving WirelessHD images, make sure **WirelessHD** is set to **On**.  **Settings - WirelessHD** [p.70](#)
- You can change which device is displayed by selecting a device from **Device Connections** in **HDMI Link**.  **HDMI Link-Device Connections** [p.62](#)

■ Connecting smartphones or tablets (EH-TW9200W/EH-TW8200W only)


You can connect MHL compatible smartphones or tablets to the WirelessHD Transmitter.

Use an MHL compatible cable to connect the micro USB port of smartphones and tablets to the HDMI5 port on the WirelessHD Transmitter.

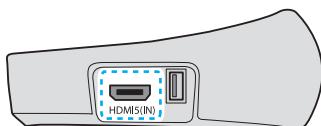

You can operate smartphones or tablets from the projector remote control.

You can also view video and listen to music while charging a smartphone or tablet.

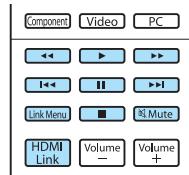

Attention



- Be sure to use an MHL compatible cable for making connections. During charging, the smartphone or tablet could generate heat, cause a liquid leak, explode or generate other conditions that could result in a fire.
- When a connection is made using an MHL-HDMI conversion adapter, it may not be possible to charge or control the device from the remote control.

 Some devices use more power during video playback than what is supplied and will therefore not enable charging during video playback or other operations.

Removing the Interface Cover

The interface cover is attached to the connector section on the rear of EH-TW9200W/EH-TW8200W. Remove this cover when using a cable to connect a device.


There are gaps at the bottom of the interface cover that allows you to pull the cover forward and lift it from the grooves at the top.

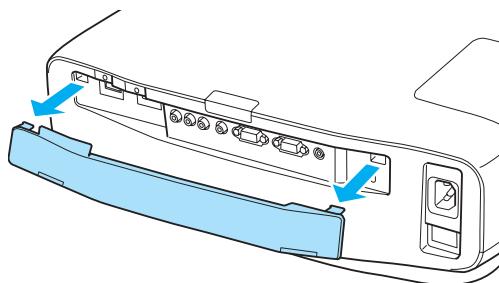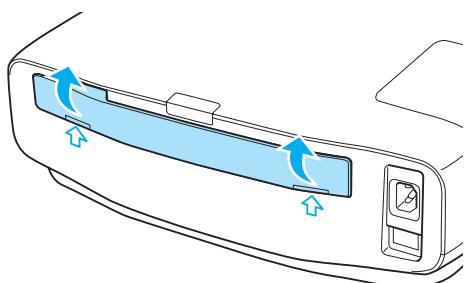

- When reattaching, first insert the protruding sections into the grooves at the top.
- Make sure you store the interface cover safely, as you need this when transporting the projector.

Connecting an HDMI Cable Clamp (EH-TW9200W/EH-TW9200/EH-TW8200W/EH-TW8200 only)

If the HDMI cable is thick and hangs down, make sure you secure it to the cable holder with an HDMI clamp so that the cable's weight does not disconnect it from the port.

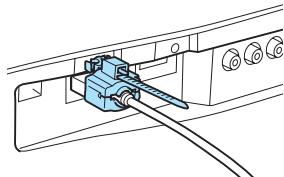



Preparing the Remote Control


Installing the Remote Control Batteries

Attention

- Check the positions of the (+) and (-) marks inside the battery holder to ensure the batteries are inserted the correct way.
- You cannot use other batteries except for the AA size manganese or alkaline.


1 Remove the battery cover.

While pushing the battery compartment cover catch, lift the cover up.

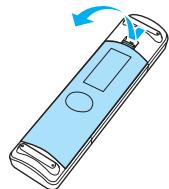


2 Replace the old batteries with new batteries.

Check the polarity of the batteries (+) and (-) before installing.

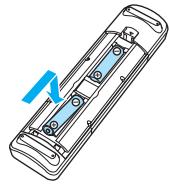

3 Reattach the battery cover.

Press the cover until it clicks into place.

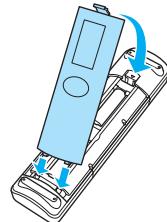


If delays in the responsiveness of the remote control occur or if it does not operate, it probably means that the batteries are becoming flat. When this happens, replace them with new batteries. Have two AA size manganese or alkaline batteries ready.


Remote Control Operating Range

The operation range for the WirelessHD Transmitter differs.  [p.60](#)

Operating range (left to right)

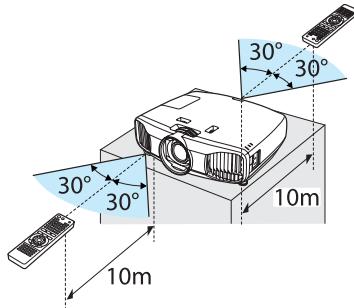

Operating range (top to bottom)

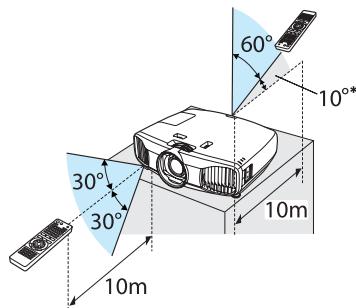



* Remote control signals are not available in this range.



Starting and Ending Projection

Turning on the Projector and Projecting

- 1 Connect the equipment to the projector.
- 2 Connect the power cord.
Connect using the power cord supplied.
- 3 Turn on the connected equipment.

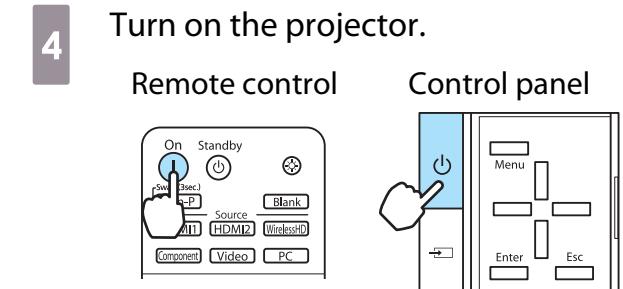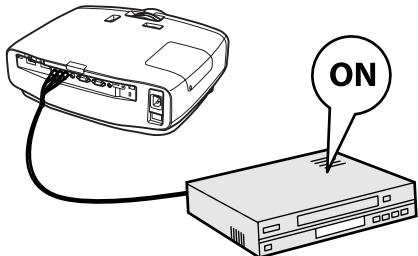

The lens shutter opens, and projection starts.



When Direct Power On is set to On, you can start projecting by simply connecting the power cord to the projector without having to press any buttons.  **Extended - Operation - Direct Power On** [p.73](#)



Warning

Do not look into the lens during projection.




- This projector provides a Child Lock function to prevent children from accidentally turning the power on and a Control Panel Lock function to prevent accidental operations and so on.  **Settings - Lock Setting - Child Lock/Control Panel Lock** [p.70](#)
- When using at an altitude of 1500m or more, set **High Altitude Mode** to **On**.  **Extended - Operation - High Altitude Mode** [p.73](#)
- This projector provides an Auto Setup function to automatically select the optimum settings when the input signal for the connected computer image changes.  **Signal - Auto Setup** [p.68](#)
- This projector comes with a Trigger out port to communicate the current status of the projector's power (on/off) to external devices. When using this function, set Trigger Out.  **Extended - Operation - Trigger Out** [p.73](#)

If the Target Image is not Projected

If the image is not projected, you can change the source using one of the following methods.

Remote control


Press the button for the target port.

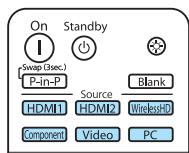

Control panel

Press the  button and select the target port.

Press the  button to confirm the selection.

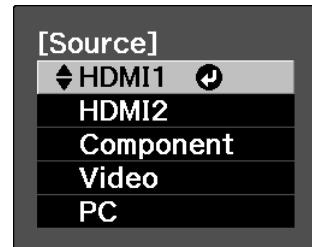

- For video equipment, start playback first and then change the source.
- If the color looks unnatural when changing to a **Video** or **Component** source, check that the port you have connected to is the same as the **Input Signal**.  **Extended - Input Signal - Video Signal/Component** p.73

Turning Off


1 Turn off the connected equipment.




When **Power Off Link** is set to **On** in the **HDMI Link** menu, turning off HDMI CEC compatible equipment may also turn off the projector.  **Settings - HDMI Link - Power Off Link** p.70

2 Press the button on the remote control or the projector's control panel.

Remote control

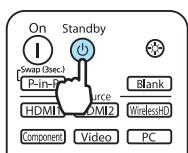

Control panel

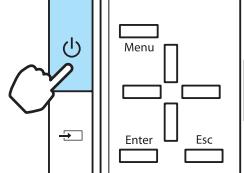

A confirmation message is displayed.

3 Press the button again.

Power Off?

Yes : Press  button
No : Press any other button

Projection ends, and the lens shutter closes automatically.



When **Standby Confirmation** is set to **Off**, you can turn off the projector by pressing the  button on the remote control once.  **Extended - Display - Standby Confirmation** p.73

4 Wait until cool-down is complete.

The operation indicator on the projector's control panel stops flashing.

5 Disconnect the power cord.



If the power cord is connected, some electricity is consumed even if no operations are made.





Adjusting the Projected Screen

Displaying the Test Pattern

When adjusting the zoom/focus or the projection position just after setting up the projector, you can display a test pattern instead of connecting video equipment.

Press the **Pattern** button on the remote control to display the test pattern.

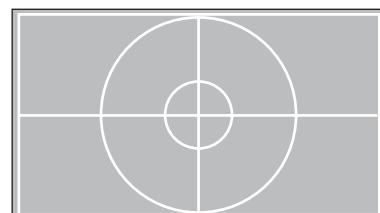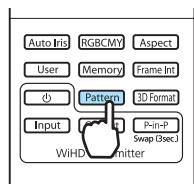

You can adjust the display position and so on by using this test pattern.


For EH-TW9200W/EH-TW9200, you can also select patterns that display R (red), G (green), and B (blue) individually, as well as the pattern for adjusting the display position. You can use it as a pattern to perform color adjustment when an image signal is being input.

Press the **Esc** button to end the test pattern display.

For EH-TW9200W/EH-TW9200, you can also end by selecting **Exit**.



Adjusting the Focus

Turn the focus ring to adjust the focus.

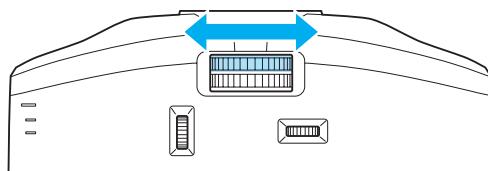


Adjusting the Projection Size (Zoom Adjustment)

Turn the zoom ring to adjust the size of the projected screen.

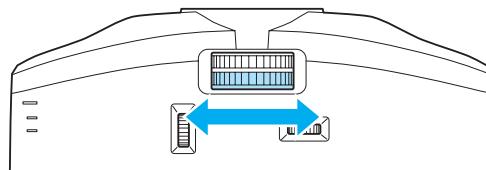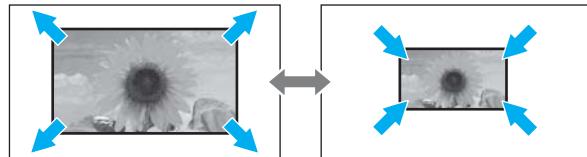

Adjusting the Projector's Tilt


If the projection screen is tilted (the left and right sides of the projector are at different heights) when the projector is setup on a table, adjust the front foot so that both sides are level with each other.

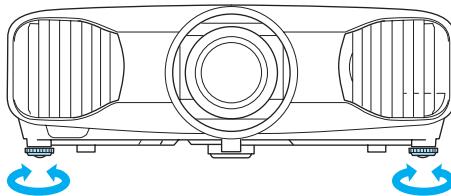

Adjusting the Position of the Projected Image (Lens Shift)

If the projector cannot be setup in front of the screen, you can adjust the position of the image by using lens shift.

Make adjustments using the lens shift dial.

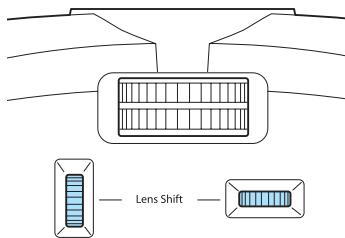


You can adjust the position up, down, left, and right within the range of the dotted line shown in the illustration on the right.

The vertical (V) position (up and down) can be adjusted by up to 96% of the height of the screen, while the horizontal (H) position (right and left) can be adjusted by up to 47% of the width of the screen.

To reset the image position to the center, return the dial to the central position.

To locate the center of the lens shift range, turn the lens shift dial until you hear it click.

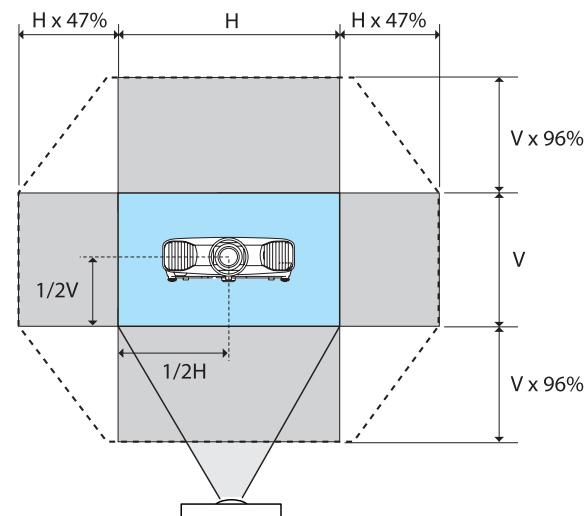

Caution

When transporting the projector, return the horizontal lens position to the central position and the vertical lens position to the bottom position. If you transport the projector when the lens is shifted up, down, left, or right, the lens shift mechanism could be damaged. Also, attach the protective pad that was attached when you purchased it.

 If keystone distortion occurs when projecting at an angle by using lens shift, you may not be able to correct the distortion completely. When using lens shift, setup the projector so that it is parallel to the screen, and then only use lens shift to adjust the position.

Correcting Keystone Distortion


You can use the  buttons on the control panel to correct keystone distortion.

Open the control panel cover at the side to operate the control panel.  [p.9](#)

Press the  or  buttons to display the adjustment gauges.

When the gauges are displayed, press the  and  buttons to perform vertical correction.

When the top or bottom is too wide

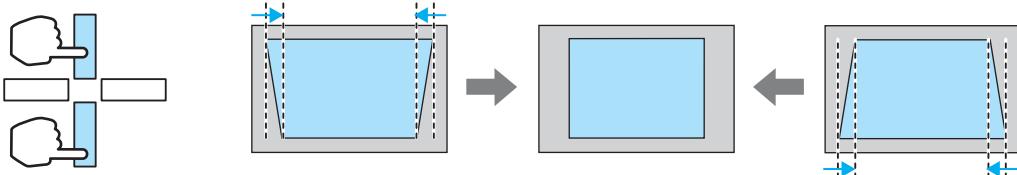


 • The projected screen becomes smaller when correcting keystone distortion. Increase the projection distance to fit the projected screen to the screen size.
 • You can make keystone settings from the Configuration menu.  [Settings - Keystone](#) [p.70](#)
 • You can make effective corrections within a projection angle of 30° top to bottom.
 • For position adjustment, you can maintain the quality of the projected image by performing correction using lens shift. Use keystone when you cannot make adjustments using lens shift.

Hiding the Image Temporarily

You can use this to temporarily hide the image on the screen.

Press the  button to show or hide the image.

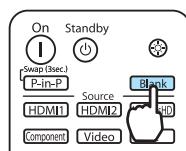

 For movies, because the movie continues to play even when it is hidden, you cannot return to the point at which you hid the image using the  button.




Adjusting the Image

Selecting the Projection Quality (Color Mode)

You can obtain the optimum image quality to suit your surroundings when projecting. The brightness of the image varies depending on the mode selected.


- 1 Press the  button.

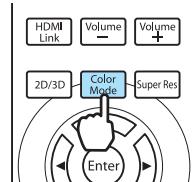

You can make settings from the Configuration menu.  **Image - Color Mode** [p.66](#)

- 2 Select **Color Mode**.

Press the  buttons from the displayed menu to select **Color Mode**, and then press the  button to confirm the selection.

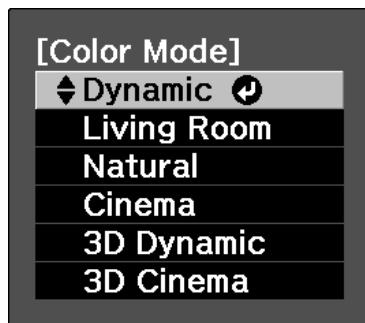

When projecting 2D images

You can select **Dynamic**, **Living Room**, **Natural**, **THX**, and **Cinema**.

3D Dynamic, **3D Cinema**, and **3D THX** are grayed out and cannot be selected.

When projecting 3D images

You can select **3D Dynamic**, **3D Cinema**, and **3D THX**.

Dynamic, **Living Room**, **Natural**, **THX**, and **Cinema** are grayed out and cannot be selected.

Choices when projecting 2D images

Mode	Application
Dynamic	Ideal for use in a bright room.
Living Room	Ideal for use in a bright room. Images are clear and sharp.
Natural	Ideal for use in a dark room. We recommend performing color adjustment in this mode.  p.6
THX*	A color mode authorized by THX Ltd.
Cinema	Ideal for watching movies and concerts in a dark room.

* **THX** may not be displayed depending on the model you are using.

Choices when projecting 3D images

Mode	Application
3D Dynamic	For use when projecting 3D images. Images are bright and sharper than 3D Cinema.
3D Cinema	For use when projecting 3D images. Produces crisper colors than 3D Dynamic.
3D THX*	For use when projecting 3D images. A color mode authorized by THX Ltd.


* 3D THX may not be displayed depending on the model you are using.

Switching the Screen Between Full and Zoom (Aspect)

You can change the input signal's type, aspect ratio, and resolution to match the **Aspect** of the projection screen.


The available **Aspect** varies depending on the image signal currently being projected.

- 1 Press the **Aspect** button.

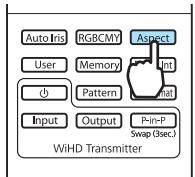

 You can make settings from the Configuration menu. **Signal - Aspect** p.68








- 2 Use the  buttons to select the setting name, and then press the  button to confirm the selection.



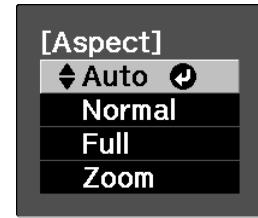


 **Aspect** may not be available depending on the type of signal.

By normally selecting Auto, the optimum aspect is used to display the input signal. Change the setting if you want to use a different aspect.

     The table below shows the image projected on a 16:9 screen.

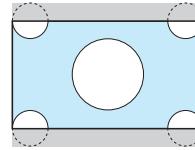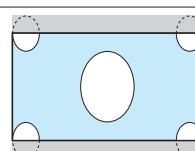Input Image	Setting Name (Aspect)		
	Normal	Full	Zoom
4:3 Images			
16:9 Images			
Images Recorded Using Squeeze			

  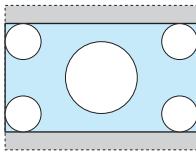Input Image	Setting Name (Aspect)		
	Normal	Full	Zoom
Letterbox Images*			
Notes	Matches the vertical size of the projection panel. The aspect ratio differs depending on the input image.	Uses the entire projection panel.	Retains the aspect ratio of the input signal, and matches the horizontal size of the projection panel. The top and bottom of the image may be truncated.

*The letterbox image used in this explanation is a 4:3 aspect ratio image displayed in 16:9 with black margins at the top and bottom for subtitle placement. The margins at the top and bottom of the screen image are used for subtitles.

For EH-TW9200W/EH-TW9200, you can also set **Anamorphic Wide** and **Horiz. Squeeze**.



- If **Anamorphic Wide** is selected when **Overscan** is set, the image may be truncated. Set **Overscan** to **Off** and then project. [Signal - Advanced - Overscan p.68](#)
- When projecting 3D images in **Anamorphic Wide**, only 1080p/24 Hz/frame packing signals are supported.

Set **Anamorphic Wide** and attach a commercially available anamorphic lens to enjoy DVDs, Blu-rays, and so on of images recorded at Cinema Scope size.

Horiz. Squeeze stretches the horizontal aspect of the input signal. This allows you to project across the full width of the screen when using a commercially available anamorphic lens.



Note that using the aspect ratio function of the projector to reduce, enlarge, or split the projected image for commercial purposes or for public viewing may infringe upon the rights of the copyright holder of that image based on copyright law.




Absolute Color Adjustments

Adjusting Hue, Saturation, and Brightness

You can adjust the hue, saturation, and brightness for each of the R (red), G (green), B (blue), C (cyan), M (magenta), and Y (yellow) colors.


Hue	Adjusts the overall color of the image to be blue, green, or red.
Saturation	Adjusts the overall vividness of the image.
Brightness	Adjusts the overall color brightness of the image.

- 1 Press the **RGBCMY** button.

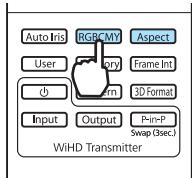


 You can make settings from the Configuration menu. **Image - Advanced - RGBCMY** p.66

- 2 Use the   buttons to select the color you want to adjust, and then press the **Enter** button to confirm the selection.

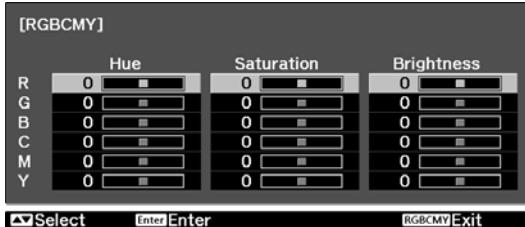

- 3 Use the   buttons to select **Hue**, **Saturation**, or **Brightness**.

- 4 Use the   buttons to make adjustments.

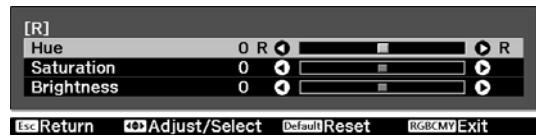

Press the **Esc** button to adjust another color.

Press the **Default** button to return the adjustments to their default values.

- 5 Press the **RGBCMY** button to exit the menu.

Adjusting the Gamma

You can adjust slight coloration differences that may occur due to the device being used when the image is displayed.

You can use one of the following three methods selected from the Configuration menu.

Setting Method	Menu Settings
Select and adjust the correction value	Image - Advanced - Gamma
Adjust while viewing the image*	Image - Advanced - Gamma - Customized - Adjust it from the image
Adjust using the gamma adjustment graph*	Image - Advanced - Gamma - Customized - Adjust it from the graph


* EH-TW9200W/EH-TW9200/EH-TW8200W/EH-TW8200 only

1 Select and adjust the correction value

Select the adjustment value, and then press the  button to confirm the selection.

The smaller the value, the lighter the dark portions of the image become, but bright areas may appear discolored. The upper part of the gamma adjustment graph becomes rounded.

When a large value is entered, bright parts of the image become dark. The lower part of the gamma adjustment graph becomes rounded.

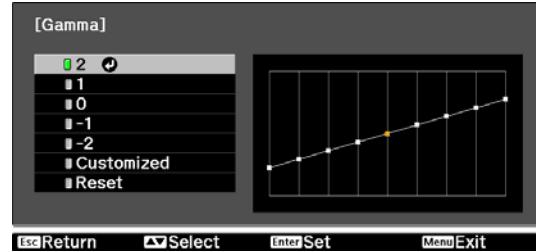

-  • The horizontal axis of the gamma adjustment graph shows the input signal level, and the vertical axis shows the output signal level.
- Press the  button to return the adjustments to their default values.

2 Adjust while viewing the image (EH-TW9200W/EH-TW9200/EH-TW8200W/EH-TW8200 only)


Make adjustments while viewing the image being projected.

- 1 Move the gamma icon displayed on the image being projected to the area for which you want to adjust the brightness, and then press the  button.



The gamma adjustment graph is displayed.


- 2 Use the  buttons to adjust the brightness, and then press the  button to confirm the selection.

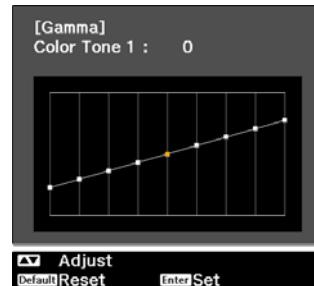


Adjust using the gamma adjustment graph (EH-TW9200W/EH-TW9200/EH-TW8200W/EH-TW8200 only)

Make adjustments while viewing the gamma adjustment graph for the image being projected.

- 1 Use the  buttons to select the part you want to adjust from the graph.

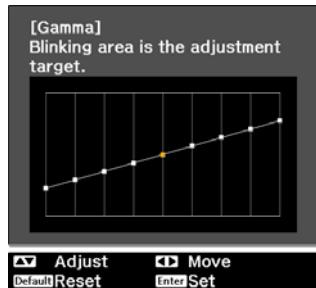

- 2 Use the  buttons to adjust the brightness, and then press the  button to confirm the selection.

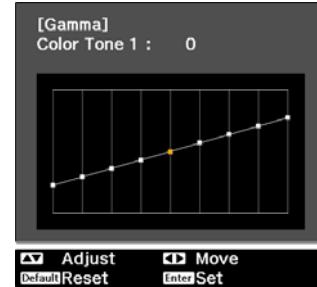

Adjusting the RGB (Offset/Gain)


For the image's brightness, you can adjust the dark areas (Offset) and the bright areas (Gain) for R (red), G (green), and B (blue). The image becomes brighter when moved to the right (positive) and darker when moved to the left (negative).

Offset	When the image is made brighter, shading for the darker sections is more vividly expressed. When the image is made darker, the image appears more full-bodied but shading for the darker sections is harder to distinguish.
Gain	When the image is made brighter, the bright sections become whiter and shading is lost. When the image is made darker, shading for the bright sections is more vividly expressed.

The menu is displayed in the following order.

Image - Advanced - RGB

Use the  buttons to select the item, and then use the  buttons to make the adjustments.

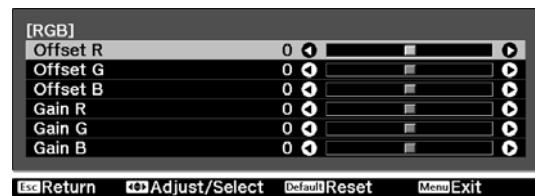

Press the  button to return the adjustments to their default values.

Color Temp.

You can adjust the overall tint of the image. Make adjustments if the image is a little too blue or too red and so on.

The menu is displayed in the following order.

Image - Color Temp.

Use the  buttons to make adjustments.

Blue tints grow stronger as the value is increased, and red tints grow stronger as the value is reduced.





- The **Color Temp.** setting varies with the **Color Mode** setting.
- Press the  button to return the adjustments to their default values.

Skin Tone

You can adjust the skin tone. Make adjustments if the skin tone is too red or too green and so on.

The menu is displayed in the following order.

Image - Skin Tone

Use the  buttons to make adjustments.

The image becomes greener when set to the right (positive) and redder when set to the left (negative).



- Press the  button to return the adjustments to their default values.



Detailed Image Adjustments

Adjusting the Sharpness


You can make the image clearer.

This cannot be set in the following situations.

- When a computer signal is being input
- When projecting 3D images

Thin Line Enhancement	Details such as hair and patterns on clothing are enhanced.
Thick Line Enhancement	Rough parts such as outlines for entire subjects or the background are enhanced, making the overall image clearer.
Vert. Line Enhancement	Enhances the image horizontally or vertically.
Horiz. Line Enhancement	

- 1 Press the button.

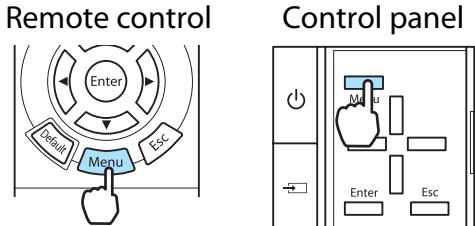

The Configuration menu is displayed.

- 2 Select **Image - Sharpness**.

The **Sharpness** adjustment screen is displayed.


- 3 Select **Advanced** at the top right of the screen, and then press the button to confirm the selection.

The **Advanced** adjustment screen is displayed.

This cannot be set when **Image Processing** is set to **Fast** in the **Signal** menu. **Signal - Advanced - Image Processing** p.68

- 4 Use the buttons to select the item, and then use the buttons to make the adjustments.

The image is enhanced when moved to the right (positive) and softer when moved to the left (negative).

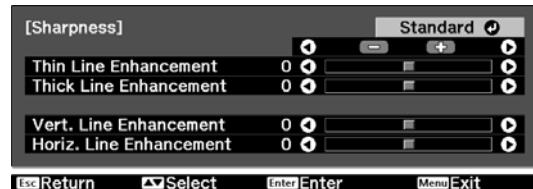

The upper bar adjusts high and low areas simultaneously.

Press the button to return the adjustments to their default values.

- 5 Press the button to exit the menu.


Setting Auto Iris

By automatically setting the luminance according to the brightness of the displayed image, it lets you enjoy deep and rich images.

You can select the luminance adjustment tracking for changes in brightness in the displayed image from **Normal** to **High Speed**.


(Depending on the image, you may hear the auto iris operating, but this is not a malfunction.)

- 1 Press the **Auto Iris** button.

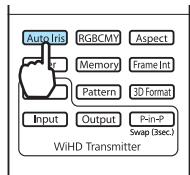

 You can make settings from the Configuration menu. **Image - Auto Iris** p.66

- 2 Use the  buttons to select the item, and then press the  button to confirm the selection.

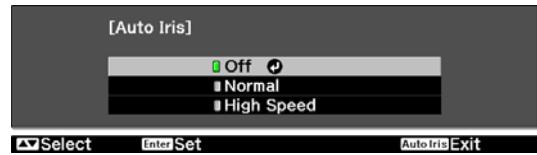


Frame Interpolation (EH-TW9200W/EH-TW9200/EH-TW8200W/EH-TW8200 only)

This setting compares the current and previous frames, and then creates a frame between them to reduce fuzziness and produce clearer images.

You can select the level of interpolation from **Low**, **Normal**, or **High**. If you notice any distortion and so on after changing the setting, set it to **Off**.

- 1 Press the **Frame Int** button.

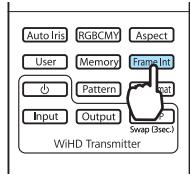

 • You can make settings from the Configuration menu. **Signal - Frame Interpolation** p.68
• This cannot be set when **Image Processing** is set to **Fast** in the **Signal** menu. **Signal - Advanced - Image Processing** p.68
• This cannot be set when a computer image signal is being input.
• When projecting 3D images, this setting is enabled only for 1080p/24 Hz signals.

- 2 Use the  buttons to select the item, and then press the  button to confirm the selection.




Super-resolution

This setting sharpens blurred images, enhancing the apparent detail of the image by increasing the resolution of the image signal.

Depending on the image, distortion at the edge of the image may be enhanced. If you notice any distortion, set it to "0".

- 1 Press the  button.

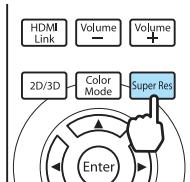

- You can make settings from the configuration menu.  **Signal - Super-resolution** p.68
- This cannot be set when a computer image signal is being input.
- This cannot be set when converting 2D to 3D images.  **Signal - 3D Setup - 2D-to-3D Conversion** p.68
- When projecting 3D images, this setting is enabled only for 1080p/24 Hz/frame packing signals.

- 2 Use the  buttons to make adjustments.

The higher the number, the stronger the effect.




- 3 Press the  button to exit the menu.

Panel Alignment

Adjusts the pixel color shift of the LCD display.

- 1 Press the  button.

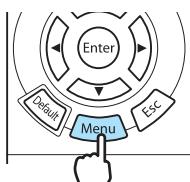


The Configuration menu is displayed.

- 2 Select **Extended - Panel Alignment**, and then press the  button to confirm the selection.

The **Panel Alignment** adjustment screen is displayed.

- 3 Set **Panel Alignment** to **On**.

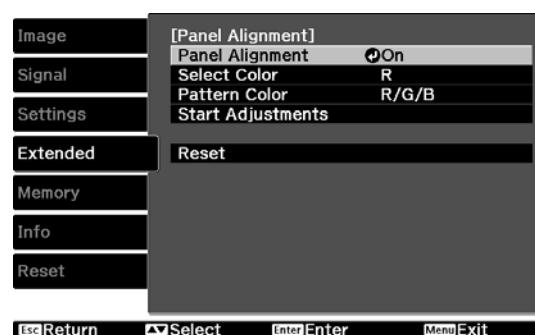

When set to **On**, the adjusted value is enabled. When set to **Off**, the corrected value returns to the default value.


- 4 In **Select Color**, select the color you want to adjust.

5 In **Pattern Color**, select the pattern (color combination) used for adjustments.


6 Select **Start Adjustments**, and then press the  button to confirm the selection.

Adjustments start. Adjustments are performed in four corners starting from the top-left corner.

7 Use  buttons to adjust, and then press the  button to move to the next adjustment point.

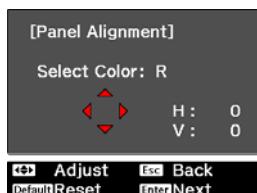

8 After adjusting four corners, select **Exit**, and then press the  button to confirm.

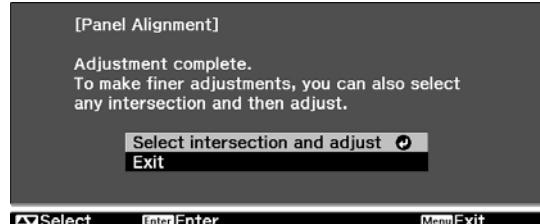

 If the four corners still need adjustments, select **Select intersection and adjust**, and then continue adjustments.


9 Press the  button to exit the menu.

Image Processing

Improves the response speed for images projected at high-speed, such as games.

This is only available when receiving a progressive signal input from the Component, Video, HDMI1, or HDMI2 ports, or from WirelessHD.

1 Press the  button.

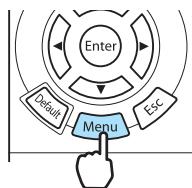

The Configuration menu is displayed.

2 Select **Signal - Advanced - Image Processing**.



- This does not support 3D images.
- If **Image Processing** is set to **Fast**, the following settings cannot be changed:
-**Noise Reduction**, **Frame Interpolation**, **2D-to-3D Conversion** are fixed at Off.
-**Sharpness** is fixed at **Standard**.

3 Use the  buttons to select the item, and then press the  button to confirm the selection.




4 Press the  button to exit the menu.

Selecting the Color Gamut (EH-TW9200W/EH-TW9200 Only)

Sets the color gamut to match the standard for the video device being used. You can easily adjust the color gamut by selecting from the color space names registered in advance.

This can be set when **Color Mode** is set to **Natural**.


- 1 Press the  button.

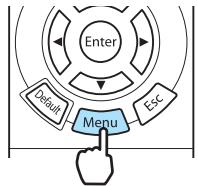

The Configuration menu is displayed.

- 2 Select **Image - Advanced - Color Gamut**.

- 3 Select the color space according to the device being used.

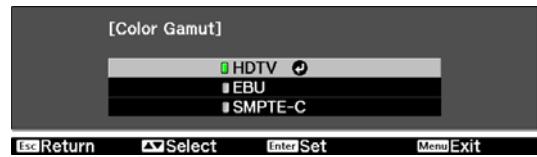

- 4 Press the  button to exit the menu.



Viewing the Image at the Saved Image Quality (Memory Function)

Saving Function

You can save the adjustment values for some images and image quality settings in the Configuration menu for later use (Save Memory).

Because these saved adjustment values can be loaded from the remote control, you can easily switch to your preferred image quality (Load Memory).


The following Configuration menu functions can be saved.

Image  p.66	Color Mode, Power Consumption, Brightness, Contrast, Color Saturation, Tint, Sharpness, Color Temp., Skin Tone, Auto Iris	
	Advanced	Sharpness, Offset, Gain, Gamma, Hue, Saturation, Brightness, EPSON Super White
Signal  p.68	Deinterlacing, Motion Detection	
	Advanced	Noise Reduction, Setup Level, Overscan, HDMI Video Range

Saving a Memory

1 Make settings that you want to save to the Configuration menu.


2 Press the  button.

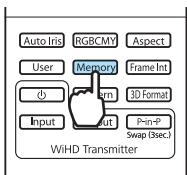


3 Use the  buttons to select **Save Memory**, and then press the  button to confirm the selection.



 The **Save Memory** screen is displayed.

4 Use the  buttons to select the memory name to be saved, and then press the  button to confirm the selection.

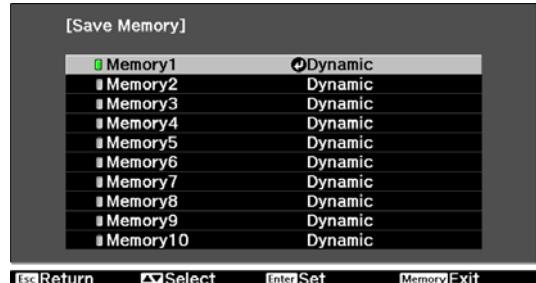

The current projector settings are saved to the memory.

When the mark to the left of the memory name turns green, saving is complete. If you select a memory name that has already been used, a message is displayed asking if you want to overwrite the data. If you select **Yes**, the previous content is erased and the current settings are saved.

Loading a Memory

1 Press the **[Memory]** button, and then select **Load Memory**.

The **Load Memory** screen is displayed.

2 Select the target memory name.



- The color mode saved to the memory is displayed on the right.
- Depending on the input signal, part of the loaded memory item may not be applied to the projected image.
- Memories saved for 2D images can only be loaded when projecting 2D images. Memories saved for 3D images can only be loaded when projecting 3D images.

Deleting a Saved Memory

1 Press the **[Memory]** button, and then select **Erase Memory**.

The **Erase Memory** screen is displayed.

2 Select the target memory name.

A confirmation message is displayed. If you select **Yes**, the content of the saved memory is erased.



If you want to erase all of the saved memories, go to **Reset - Reset Memory** on the Configuration menu.  p.75

Renaming a Memory

You can rename each memory name using up to 12 characters. Giving the memory a name that is easy to remember is useful when loading the memory.

1 Press the **[Memory]** button, and then select **Rename Memory**.

The **Rename Memory** screen is displayed.

2 Select the target memory name.

The name list screen is displayed.

3 Select a displayed name or **Customized**.

To enter a name of your own, select **Customized**, and then go to step 4. If you select **Customized**, a keyboard is displayed.

If you select from the name list, check that the memory name has been changed.

4

Enter a name.

Use the  buttons to select a character, and then press the  button to confirm the selection. Enter up to 12 characters.

When you have finished entering the name, select **Finish**.

The memory name is changed.





Enjoying 3D Images

Setting 3D Images

Set the source to HDMI1, HDMI2, or WirelessHD (EH-TW9200W/EH-TW8200W only) to view 3D images.

The projector supports following 3D formats.


- Frame Packing
- Side by Side
- Top and Bottom

When the projector detects a 3D format

The projector automatically projects a 3D image when detecting a 3D format.

When the projector cannot detect a 3D format

Some 3D TV broadcasts may not contain 3D format signals. If this happens, set the 3D format manually. Press the **3D Format** button to set the 3D format on the AV device.

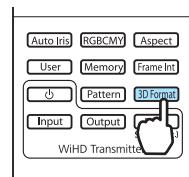

- For details on 3D format settings on the AV device, see the documentation supplied with the AV device.
- When the 3D format has not been correctly set up, an image will not be correctly projected as shown below.



If the 3D image cannot be viewed

Check the following if the 3D effect is not displayed correctly, even after setting the 3D formats.

- The synchronization timing for the 3D Glasses may have been inverted. Inverse the synchronization using **Inverse 3D Glasses**, and then try again. **Signal - 3D Setup - Inverse 3D Glasses** [p.68](#)
- The image is not displayed in 3D if **3D Display** is set to **Off**. Press the **2D/3D** button on the remote control. **Signal - 3D Setup - 3D Display** [p.68](#)

- How a 3D image is perceived varies depending on the individual.
- When a 3D image is displayed, a warning about viewing 3D images is displayed. You can turn off this warning by setting **3D Viewing Notice** to **Off**. **Signal - 3D Setup - 3D Viewing Notice** [p.68](#)
- You can also convert 2D images to 3D images. **p.50**
- During 3D projection, the following Configuration menu functions cannot be changed. Aspect (set to Normal*), Noise Reduction (set to Off), Overscan (set to Off), Advanced - Sharpness, Picture in Picture
- How the 3D image is viewed may change depending on the temperature of the surroundings and how long the lamp has been used. Refrain from using the projector if the image is not projected normally.

*For EH-TW9200W/EH-TW9200, you can select Anamorphic Wide only when 1080p/24 Hz/frame packing signals are projected.

Using 3D Glasses

Use the supplied or optional 3D Glasses (ELPGS03) to view 3D images.

Depending on the model, 3D Glasses may not be supplied.

 The 3D Glasses come with protective stickers. Remove the protective stickers before use.

Charging the 3D Glasses


The following charging methods are available, depending on the model of 3D Glasses being used.

If you have a WirelessHD Transmitter, you can use it to charge the glasses.

If you do not have a WirelessHD Transmitter, you can charge by using an optional USB Charging Adapter.

Charging using the WirelessHD Transmitter


Use the USB cable to connect the 3D Glasses to the WirelessHD Transmitter.

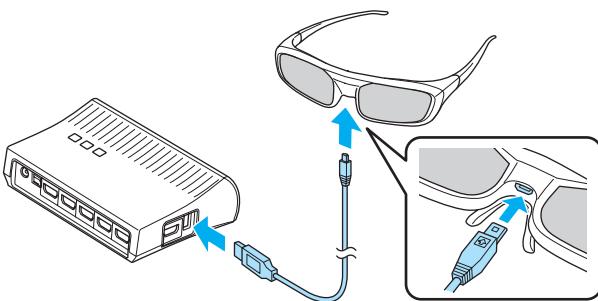

When a cable is connected to the HDMI5 port, the WirelessHD Transmitter cannot charge 3D glasses.

Charging using the USB Charging Adapter

Use the USB cable to connect the 3D Glasses to the optional USB Charging Adapter, and then connect the USB Charging Adapter to an electrical outlet.

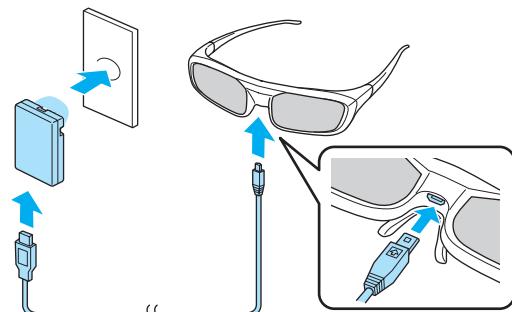

Attention

- Only connect to an electrical outlet that uses the voltage displayed on the adapter.
- Note the following points when handling the supplied microUSB cable.
 - You should not bend, twist, or pull the cable with too much force.
 - You should not modify the cable.
 - You should not perform wiring near an electric heater.
 - You should not use the cable if it is damaged.

Pairing 3D Glasses

To create 3D images, the 3D Glasses need to be paired with the projector.

Press the [Pairing] button for a while on the 3D Glasses to start pairing. See the User's Guide for the 3D Glasses for more information.




- For 3D Glasses that have not been used, pairing is performed when the 3D Glasses are turned on. You do not need to perform pairing if 3D images can already be viewed correctly.
- Once pairing has been performed, you can view 3D images the next time the devices are turned on.
- You can perform pairing within a range of three meters from the projector. While pairing is being performed, make sure you stay within a range of three meters from the projector. Otherwise, pairing may not be performed correctly.
- If synchronization cannot be performed within 30 seconds, pairing is automatically canceled. When pairing is canceled, 3D images cannot be viewed because pairing fails.

■ Wearing the 3D Glasses

1 Turn on the 3D Glasses by sliding the [Power] switch to On.

The indicator turns on for several seconds, and then turns off.

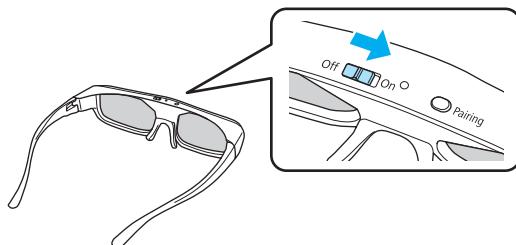

2 Put on the 3D Glasses and enjoy the show.




- When you have finished using the 3D Glasses, turn them off by sliding the [Power] switch to Off.
- If the 3D Glasses are not used for at least 30 seconds, they turn off automatically. To turn the 3D Glasses back on, slide the [Power] switch to Off, and then slide it back to On.
- You need more pairs of optional 3D Glasses if more than one person will be viewing the 3D image. p.96

Range for Viewing 3D Images

This projector allows you to view 3D images within the range shown in the figure below.

You can view 3D images within a range of 10 meters from the projector.

The distance for pairing is three meters.

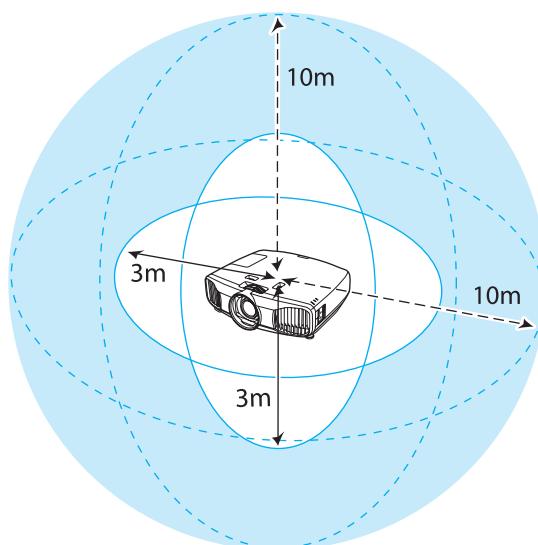



- 3D images may not be displayed correctly if there is any interference from other Bluetooth communication devices. Do not use these devices at the same time.
- The communication method for 3D Glasses uses the same frequency (2.4 GHz) as wireless LAN (IEEE802.11b/g) or microwave ovens. Therefore, if these devices are used at the same time, radio wave interference may occur, the image may be interrupted, or communication may not be possible. If you do need to use these devices at the same time, make sure there is enough distance between them and the projector.
- The 3D Glasses for this projector use the active shutter system based on the standards provided by the Full HD 3D Glasses Initiative™.

Warnings Regarding Viewing 3D Images

Note the following important points when viewing 3D images.

Warning

Disassembling or remodeling

- Do not disassemble or remodel the 3D Glasses.
This could cause a fire to occur or the images to appear abnormal when viewing, causing you to feel unwell.

Storage locations

- Do not leave the 3D Glasses or the supplied parts within reach of children.
They could be accidentally swallowed. If anything is accidentally swallowed, contact a doctor immediately.

Wireless (Bluetooth) communication

- Electromagnetic interference may cause medical equipment to malfunction. Before using the device, make sure there is no medical equipment in the vicinity.
- Electromagnetic interference may cause automatically controlled equipment to malfunction which could cause an accident. Do not use the device near automatically controlled equipment such as automatic doors or fire alarms.

Heating

- Do not place the 3D Glasses in a fire, on a heat source, or leave them unattended in a location subject to high temperatures. Because this device has a built-in rechargeable lithium battery, it could cause burns or a fire if it ignites or explodes.

Charging

- When charging, connect the supplied cable to the USB port designated by Epson. Do not charge using other devices as it may cause the battery to leak, overheat, or explode.
- Only use the supplied charging cable to charge the 3D Glasses. Otherwise, it could overheat, ignite, or explode.

Caution

3D Glasses

- Do not drop or press too forcefully on the 3D Glasses.
If the glass sections and so on are broken, an injury could occur. Store the glasses in the soft glasses case.
- Be careful of the edges of the frame when wearing the 3D Glasses.
If it pokes your eye and so on, an injury could occur.
- Do not place your finger in any of the moving sections (such as the hinges) of the 3D Glasses.
Otherwise an injury could occur.

Caution

Wearing 3D Glasses

- Make sure you wear the 3D Glasses correctly.
Do not wear the 3D Glasses upside down.
If the image is not displayed correctly into the right and left eyes, it could cause you to feel unwell.
- Do not wear the glasses unless you are viewing a 3D image.
- How a 3D image is perceived varies depending on the individual. Stop using the 3D function if you feel strange or cannot see in 3D.
Continuing to view the 3D images could cause you to feel unwell.
- Stop wearing the 3D Glasses immediately if they seem abnormal or a malfunction occurs.
Continuing to wear the 3D Glasses could cause an injury or cause you to feel unwell.
- Stop wearing the 3D Glasses if your ears, nose, or temples become red, painful, or itchy.
Continuing to wear the 3D Glasses could cause you to feel unwell.
- Stop wearing the 3D Glasses if your skin feels unusual when wearing the glasses.
In some very rare cases the paint or materials used in the 3D Glasses could cause an allergic reaction.

Caution

Viewing Time

- When viewing 3D images, always take periodic breaks during extended viewing.
Long periods of viewing 3D images may cause eye fatigue.
The amount of time and frequency of such breaks varies from person to person. If your eyes still feel tired or uncomfortable even after taking a break from viewing, stop viewing immediately.

Caution

Watching 3D Images

- If your eyes feel fatigued or uncomfortable when viewing 3D images, stop viewing immediately.
Continuing to view the 3D images could cause you to feel unwell.
- When viewing 3D images be sure to always wear 3D Glasses. Do not attempt to view 3D images without 3D Glasses.
Doing so could cause you to feel unwell.
- Do not place any breakable or fragile objects around you when using 3D Glasses.
3D images may cause you to move your body involuntarily, resulting in damage to nearby items or personal injury.
- Only wear 3D Glasses when viewing 3D images. Do not move around while wearing 3D Glasses.
Your vision may appear darker than normal, causing you to fall or injure yourself.
- Try to stay as level with the viewing screen as possible when viewing 3D images.
Viewing 3D images at an angle reduces the 3D effect and may cause you to feel unwell due to unintended color changes.
- If using 3D Glasses in a room with fluorescent or LED lighting, you may see flashing or flickering throughout the room. If this should occur, reduce the lighting until the flickering goes away or turn off the lights completely when viewing 3D images. In some very rare cases, this flickering could trigger seizures or fainting for some individuals. If you begin to feel uncomfortable or unwell at any time when viewing 3D images, stop immediately.
- Stay at least three times the height of the screen away from the screen when viewing 3D images.
The recommended viewing distance for an 80-inch screen is at least 3 meters, and at least 3.6 meters for a 100-inch screen.
Sitting or standing any closer than the recommended viewing distance may result in eye fatigue.

Caution

Health Risks

- You should not use 3D Glasses if you are sensitive to light, have a heart condition, or are unwell. Doing so could aggravate your pre-existing conditions.

Caution


Recommended Age of Use

- The minimum recommended age to view 3D images is six years old.
- Children under the age of six are still developing and viewing 3D images may cause complications. Consult your doctor if you have any concerns.
- Children viewing 3D images through 3D Glasses should always be accompanied by an adult. It is often difficult to tell when a child is feeling tired or uncomfortable, which could result in them feeling suddenly unwell. Always check with your child to ensure that they are not experiencing any eye fatigue during viewing.

Converting 2D Images to 3D and Viewing

You can convert 2D images from HDMI1, HDMI2, or WirelessHD (EH-TW9200W/EH-TW8200W only).

- 1 Press the  button.

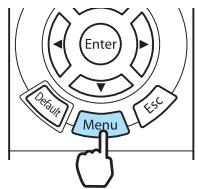


The Configuration menu is displayed.

- 2 Select **Signal - 3D Setup**, and then press the  button to confirm the selection.


The **3D Setup** screen is displayed.

- 3 Select **2D-to-3D Conversion**, and then press the  button to confirm the selection.

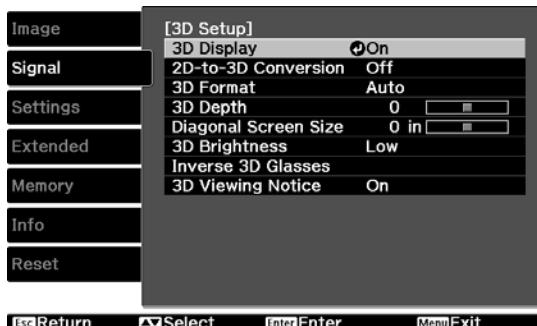


- 4

- Select the strength of the 3D effect, and then press the  button to confirm the selection.

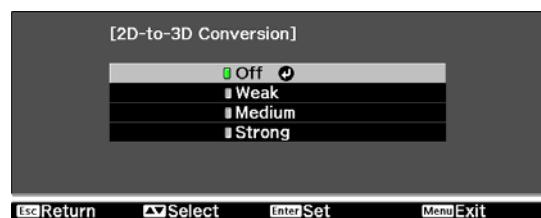

- 5

- Press the  button.

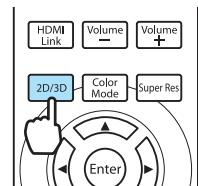




- When using **2D-to-3D Conversion**, set **3D Format** to **Auto** or **2D**. **Signal - 3D Setup - 3D Format** [p.68](#)
- If **Image Processing** is set to **Fast**, you cannot adjust **2D-to-3D Conversion**. **Signal-Advanced - Image Processing** [p.68](#)



Connecting with WirelessHD (EH-TW9200W/ EH-TW8200W Only)

Installing the WirelessHD Transmitter

You can use the supplied WirelessHD Transmitter to wirelessly receive image data.

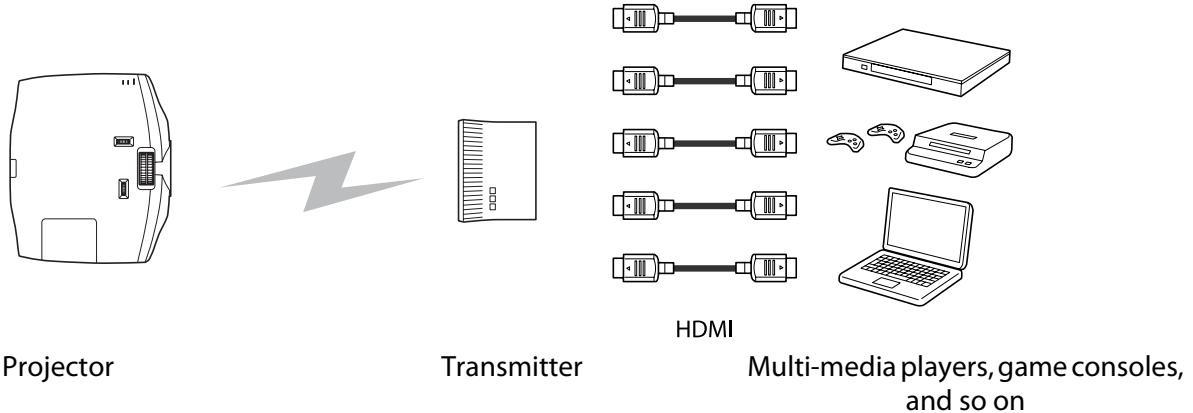


You can use the WirelessHD Transmitter in the following ways.


- You do not need to connect a cable to the projector. This is useful if you cannot set it up near the AV device.
- You can connect up to five AV devices at the same time, and switch images using the remote control.
- As well as the projector, you can connect another output device, such as a television, to the Output port, and then switch the output using the remote control.
- This allows other output devices connected to the Output port to project images from the connected AV device, even if the projector is off.

WirelessHD Transmitter part names

Front

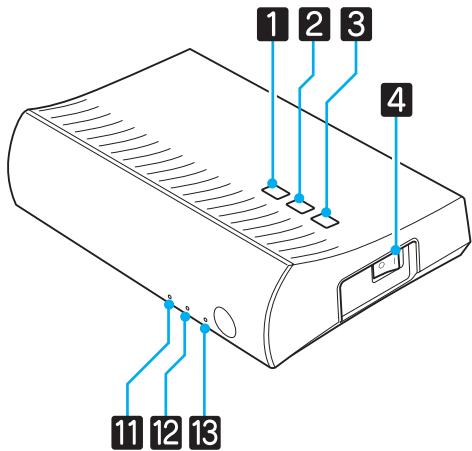

Rear

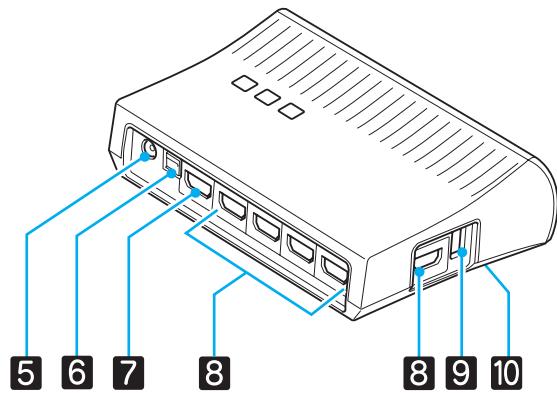

Name	Function
1	Turns the transmitter on or off. This performs the same function as the button for WiHD Transmitter control on the lower section of the remote control.

Name		Function
2	Input button	Changes to the image from each input port. This performs the same function as the Input button for WiHD Transmitter control on the lower section of the remote control.
3	Output button	Switches the output image to the Wireless or Output port. This performs the same function as the Output button for WiHD Transmitter control on the lower section of the remote control.
4	Main power switch	Turns the main power for the transmitter on or off.
5	AC adapter port	Connects the AC adapter.
6	Optical Audio-Out port	Connects to audio devices equipped with an optical digital audio input port.
7	HDMI Output port	Connects to other output devices, such as televisions. You can switch the output using the Output button.
8	HDMI Input port	Connects to the AV device you want to playback. You can switch the input image using the Input button. The HDMI5 port of the unit meets the MHL standards. You can play content from smartphones or tablets connected with an MHL cable.
9	3D Glasses charging port	Connects a USB cable to charge the 3D Glasses.
10	Setup button	This is the button on the back of the WirelessHD Transmitter. It is used for setting the WirelessHD Transmitter. This is not normally used.
11	指示器 (orange/green)	Lit when the WirelessHD Transmitter is on. Lit orange when standing by, and green when operating (receiving or transmitting images).
12	WiHD indicator (orange)	Indicates the communication status for the WirelessHD. <ul style="list-style-type: none"> • Lit when wirelessly transmitting images to the projector. • Off when outputting to the Output port.
13	Link indicator (orange)	Indicates the connection status with the projector. <ul style="list-style-type: none"> • On when projecting images from the projector. • Flashes when searching for a projector. • Flashes slowly when standing by in power saving status.




- The receiver is located within the intake vent of the projector and therefore cannot receive any signals directly from the rear. Set up so that the front of the projector is facing the WirelessHD Transmitter. Also, make sure that the air intake vent on the left-hand side of the projector is not covered.
- Place the WirelessHD Transmitter on a level surface facing towards the projector.
- You can view the signal strength from the **WirelessHD** settings menu.  **Settings - WirelessHD - Reception** [p.70](#)

Setting the WirelessHD Transmitter


- 1 Set up the WirelessHD Transmitter connected to the projector so that they are facing each other.  [p.56](#)

- 2** Connect the WirelessHD Transmitter to an electrical outlet using the supplied AC adapter.

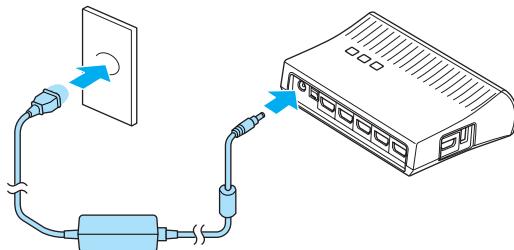

- 3** Using an HDMI cable, connect the AV device you want to use to the Input port on the WirelessHD Transmitter.

You can connect up to five multi-media players.

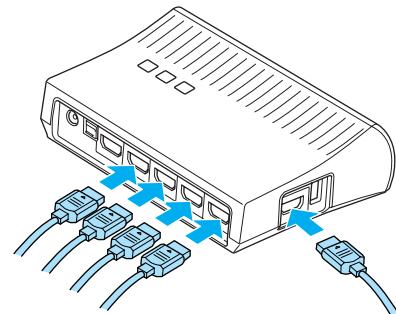

- You can connect another output device, such as a television, to the Output port on the WirelessHD Transmitter. You can switch between output images using the remote control. [p.58](#)
- The HDMI5 port of the WirelessHD Transmitter supports the MHL input signal. You can play content from smartphones or tablets connected with an MHL cable.


Projecting Images

- 1** Start playback on the AV device, and then turn on the projector and the WirelessHD Transmitter.

The indicator on the WirelessHD Transmitter turns on.


- 2** Check the status of the WiHD indicator on the WirelessHD Transmitter.

If the WiHD indicator is on, go to the next step.

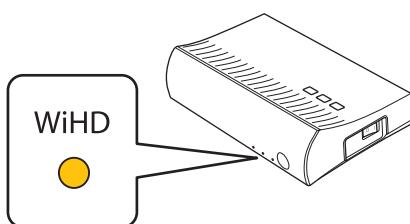


If the indicator is off, press the button on the remote control or the WirelessHD Transmitter.


Make sure you point the remote control at the WirelessHD Transmitter when using the button on the remote control.

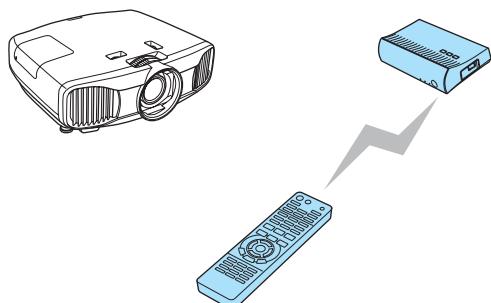

Remote control

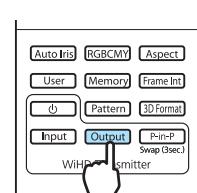


WirelessHD Transmitter

 

3

Check the status of the Link indicator on the WirelessHD Transmitter.

If the WirelessHD Transmitter is connected to the projector, the Link indicator flashes and then remains on.

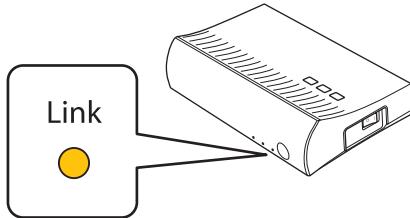


If the indicator continues to flash slowly, the WirelessHD Transmitter cannot connect to the projector and has entered standby status. Make sure the projector has been setup correctly, such as turning on the power and so on.

4

If projection does not start, press the **WirelessHD** button on the remote control to change the source.

Make sure you point the remote control at the projector when using the **WirelessHD** button on the remote control.

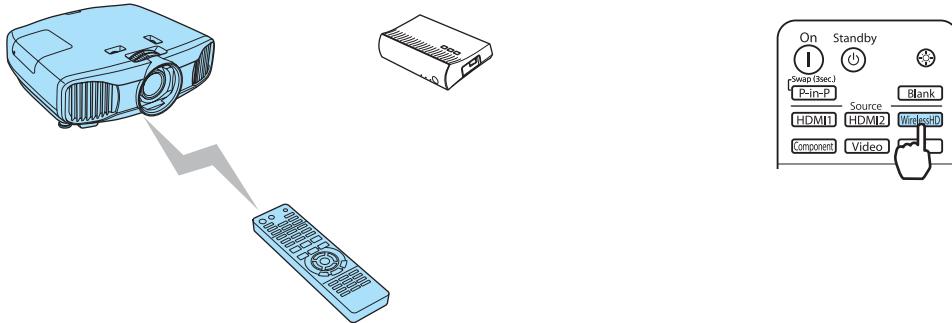

Projection starts.

5

When connecting two or more AV devices to the WirelessHD Transmitter, press the **Input** button to switch images.  [p.59](#)



- When receiving WirelessHD images, make sure **WirelessHD** is set to **On** from the Configuration menu.  [Settings - WirelessHD p.70](#)
- Make sure you turn off the WirelessHD Transmitter if it is not going to be used for an extended period.

WirelessHD Settings Menu


1 Press the  button.

The Configuration menu is displayed.

2 Select **Settings - WirelessHD**.

The **WirelessHD** settings screen is displayed.

3 Make settings for each of the displayed functions.

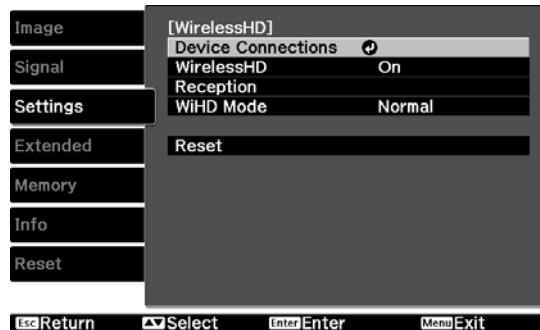


Available functions on the **WirelessHD** settings menu

Function	Explanation
Device Connections	Displays a list of available WirelessHD devices that can be connected. The device names and MAC addresses (device numbers) are displayed in the list. The MAC address is displayed on the label on the base.
WirelessHD	Enables or disables the WirelessHD function.
Reception	Displays the reception.
WiHD Mode	Use Normal for most situations. Full mode uses the maximum video bandwidth at all times. Dynamic mode extends wireless ranges while optimally adjusting video bandwidth. Set to Dynamic if the image is interrupted due to weak signals and other causes.
Reset	Resets WirelessHD settings to their default settings.


WirelessHD Transmission Range

The following shows the communication transmission range for the WirelessHD. Make sure you set up the WirelessHD Transmitter so that it faces the projector.


Horizontal direction (when **WiHD Mode** is set to **Normal**)

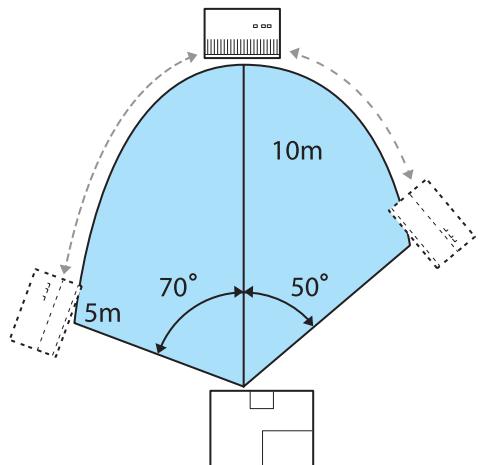


Horizontal direction (when **WiHD Mode** is set to **Dynamic**)

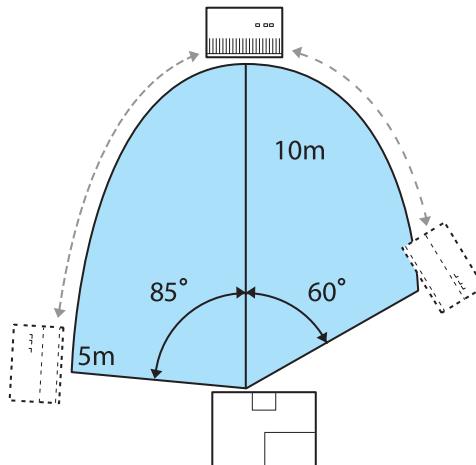

Vertical direction (placed on a table and so on)

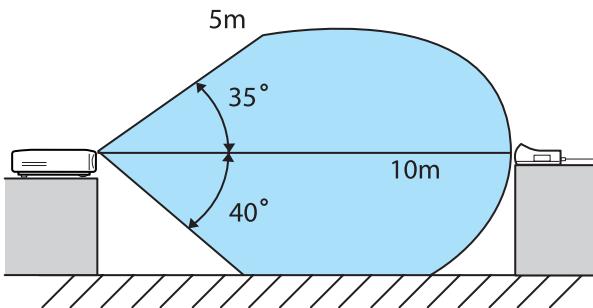

Vertical direction (suspended from a ceiling)

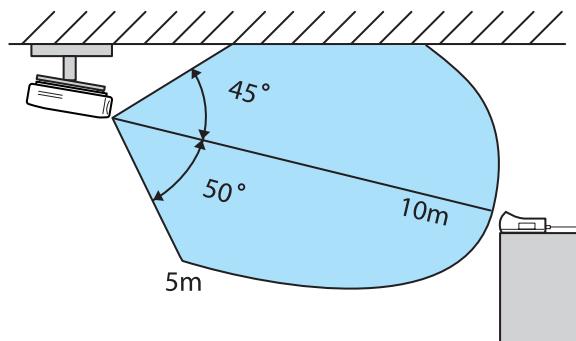

- The wireless transmission range varies depending on the placement and material of the surrounding furniture and walls. The values given here are for your reference only.
- The projector cannot communicate through walls.
- Place the WirelessHD Transmitter on a wooden shelf or other location that does not block the signal from being transmitted from the front of the device. Note that placing the transmitter on a metal shelf may cause signal instability.
- The antennas are built-into the front of the projector and the WirelessHD Transmitter. Make sure the antennas face each other (face the front) when setting up the devices.
- Place the projector and the WirelessHD Transmitter close to each other, and make sure there are no other projectors operating in the vicinity.
- Depending on the reception strength, the image's color information may be automatically discarded to avoid any interruptions and maintain a constant connection. To avoid any deterioration in image quality, adjust the position of the WirelessHD Transmitter so that the **Reception** is as strong as possible.

Useful Functions of the WirelessHD Transmitter

With the WirelessHD Transmitter, you can connect and switch between five multi-media players (input devices to be played back) and one output device (an output device displaying an image, such as a television).

Image output




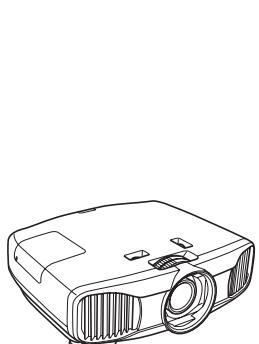


Image input

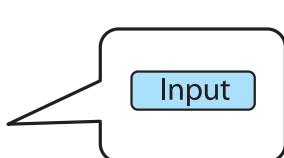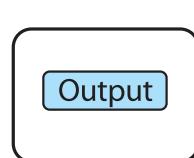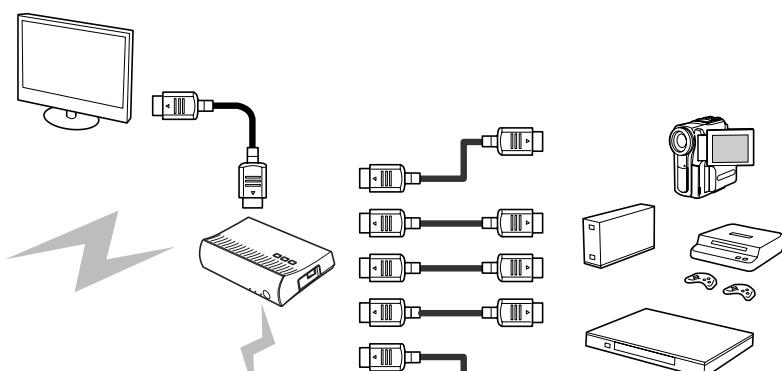

Make sure you point the remote control at the WirelessHD Transmitter when performing operations using the **Input** button (switch input) and the **Output** button (switch output) on the remote control.

Switching the target image


You can switch the output image between devices, such as televisions, connected to the Output port on the WirelessHD Transmitter and the projector.

1 Turn on the projector or the television.

2 Turn on the WirelessHD Transmitter.

The \odot indicator on the WirelessHD Transmitter turns on.


3 Point the remote control at the WirelessHD Transmitter, and then press the **Output** button.

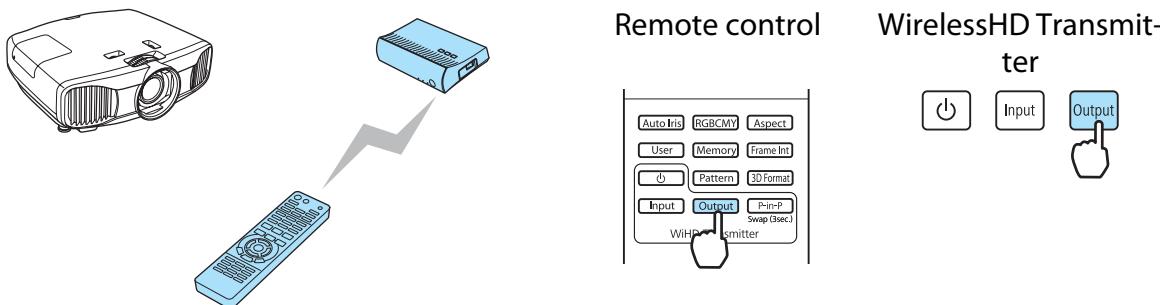

Depending on the output target, the WiHD indicator on the WirelessHD Transmitter indicates the following status.

On: The image is being output to the projector.

Off: The image is being output to another output device.

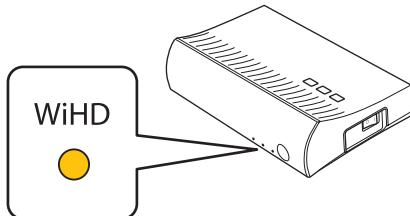

The output target projected last time is projected the next time the projector is turned on.



You can switch to the other output device even when the projector is off.


Switching the image source

You can switch the image source for the AV device connected to the WirelessHD Transmitter. When switching, each input source is displayed on one screen as a preview. This allows you to switch easily between image sources even when two or more devices are connected using HDMI.


The projector uses Insta Prevue Technology from Silicon Image, Inc.

Switching the source

- 1** Point the remote control at the WirelessHD Transmitter, and then press the **Input** button.

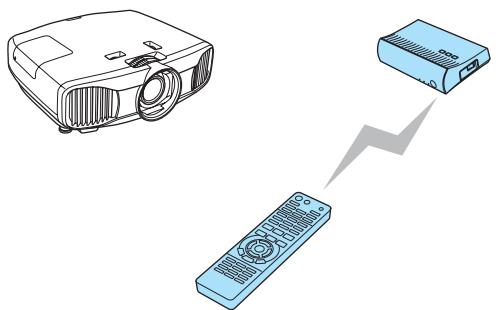


Remote control WirelessHD Transmitter

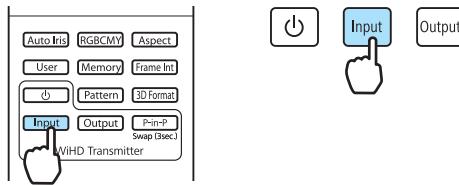

Displays the sub-screen for the connected device.



- 2** The target screen changes each time you press the **Input** button.


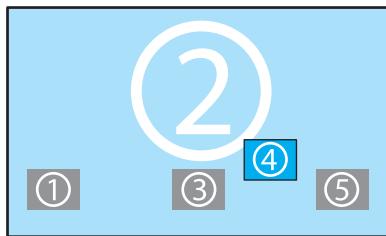


- 3** After selecting the target screen, please wait for a moment.

The projected image is switched.

Displaying as a sub-screen

- 1** Point the remote control at the WirelessHD Transmitter, and then press the **P-in-P** button.

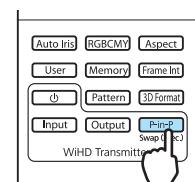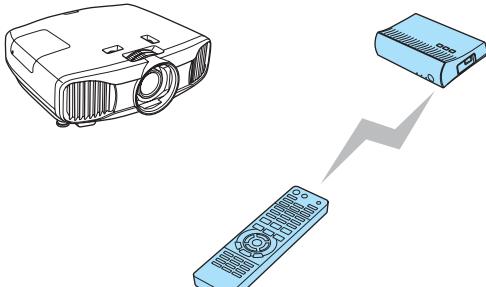

Displays the sub-screen for the connected device.

- 2** When switching between the sub-screen and the main screen, press and hold down the **P-in-P** button (for approximately 3 seconds) until the screen changes.

- 3** To close the sub-screen, press the **P-in-P** button again.

The projected image is switched.




- When the sub-screen is displayed, press the **Input** button to switch the image for the sub-screen.
- When the sub-screen is displayed, press the **Output** button to change the position and size (large or small) of the sub-screen. Each time the **Output** button is pressed, the display position moves from bottom right, top right, top left, and bottom left allowing you to change the size.


■ Remote control operating range

The following shows the operating range between the remote control and the WirelessHD Transmitter.

Operating range (left to right)

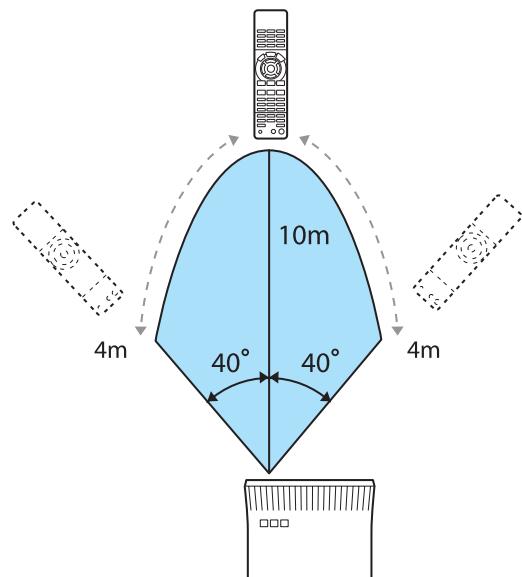

Operating range (top to bottom)

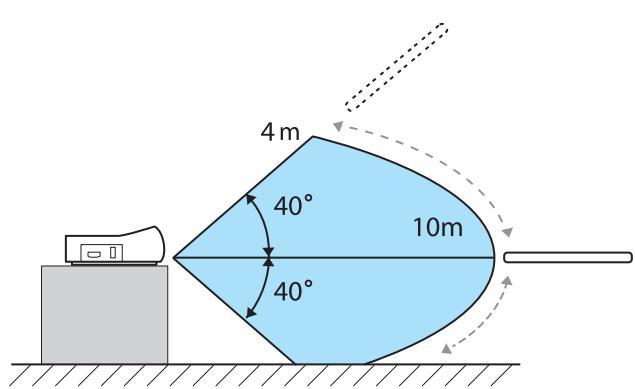



Using the HDMI Link Function


HDMI Link Function

When an AV device that meets the HDMI CEC standards is connected to the projector's HDMI port, you can perform linked operations such as linked power on and volume adjustment for the AV system from one remote control. Also, when projecting images in WirelessHD, you can use the HDMI link function (EH-TW9200W/EH-TW8200W only).




- As long as the AV device meets the HDMI CEC standards, you can use the HDMI link function even if the AV system in-between does not meet the HDMI CEC standards.
- Up to 3 multi-media players that meet the HDMI CEC standards can be connected at the same time.


Connection Example

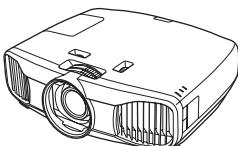

Projector

 


Amplifier

 

Multi-media players and so on

HDMI Link Settings

By pressing the  button on the remote control, and setting **HDMI Link** to **On**, you can operate the following functions.

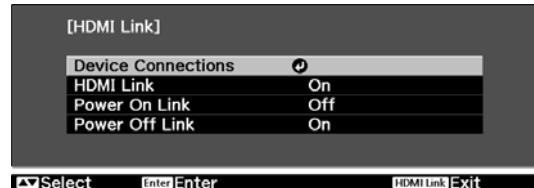

Function	Explanation
Power On Link	Powers on the projector when content is played back on the connected device. Or, powers on the connected device when the projector is turned on.
Power Off Link	Powers off the connected device when the projector is turned off. <ul style="list-style-type: none"> • This only works when the connected device's CEC power link function is enabled. • Note that depending on the status of the connected device (for example, if it is recording), the device may not power off.
Input Change Link	Changes the input source of the projector to HDMI when content is played back on the connected device.
Connected Devices Operations	You can perform operations such as Play, Stop, Fast Forward, Rewind, Next Chapter, Previous Chapter, and Pause from the remote control for the projector.



- To use the HDMI Link function, you must configure the connected device. See the documentation supplied with the connected device for more information.
- Even when using the WirelessHD Transmitter with **Power On Link** set to **Device -> PJ or Bidirectional**, if **WirelessHD** is set to **On**, this projector also turns on when the AV device connected to the WirelessHD Transmitter is turned on (EH-TW9200W/EH-TW8200W only).  **Settings-HDMI Link-Power On Link** [p.70](#)

Device Connections

You can check the connected devices that are available for HDMI Link, and select on the device you want to project the image from. Devices that can be controlled by HDMI link automatically become the selected device.


- 1 Press the  button, and then select **Device Connections**.

The **Device Connections** list is displayed.

Devices that have a green icon to their left are linked.

If the device name cannot be determined this field is left blank.

- 2 Select the device you want to operate using the HDMI Link function.

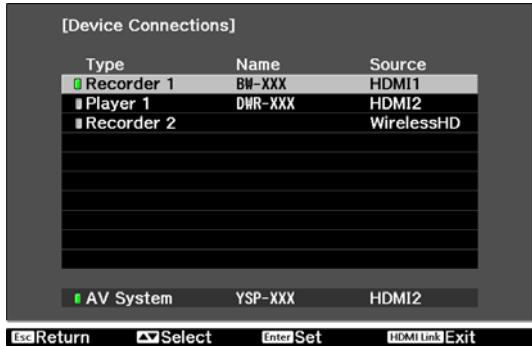

- If the cable does not meet the HDMI standards, operations are not possible.
- Some connected devices or functions of those devices may not operate properly even if they meet the HDMI CEC standards. See the documentation and so on supplied with the connected device for more information.




Projecting Two Different Images Using Picture in Picture

Types of Screen that can be Displayed Simultaneously

Two different image sources can be projected, one in the main screen (large screen) and the other in the sub screen (small screen). You can view the sub screen while viewing the main screen.

HDMI1, HDMI2 and WirelessHD are examples of input sources that can be displayed in Picture in Picture.

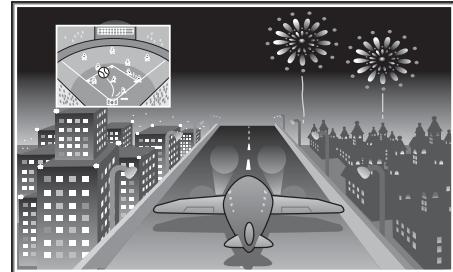

Combinations of input sources for Picture in Picture projection

	HDMI1	HDMI2	WirelessHD*
HDMI1	-	✓	✓
HDMI2	✓	-	✓
WirelessHD*	✓	✓	-

* EH-TW9200W/EH-TW8200W only

The projector uses Insta Prevue Technology from Silicon Image, Inc.

Projecting on a Picture in Picture

Starting Picture in Picture

Press the **P-in-P** button on the remote control while the projector is projecting.

The currently input image is displayed on a Picture in Picture.

The image so far projected then becomes the main screen.

(For EH-TW9200/EH-TW8200/EH-TW7200)


HDMI1 or HDMI2 source other than the source shown in the main screen is displayed in the sub screen.

(For EH-TW9200W/EH-TW8200W)

The image specified in **Picture in Picture - Subscreen Source** is displayed in the sub screen.

If the source being input is not supported, nothing is displayed.

Press the **P-in-P** button again to end the Picture in Picture display.

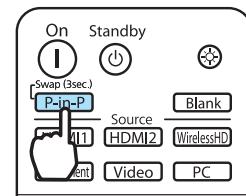

You cannot use Picture in Picture display to project 3D images.

Changing the Picture in Picture settings


Use the **Picture in Picture** menu to change the size or position of the sub screen.

- 1 Press the  button during Picture in Picture projection.

The **Picture in Picture** menu is displayed.

 The **Picture in Picture** menu is displayed directly by pressing the  button during Picture in Picture projection.

- 2 Make settings for each of the displayed functions.

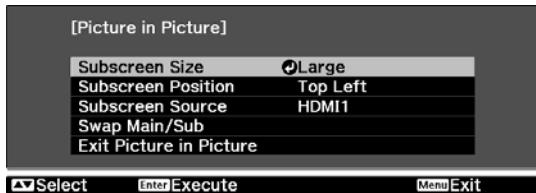

Available functions on the **Picture in Picture** menu

Function	Explanation
Subscreen Size	Selects the sub screen size using Small and Large .
Subscreen Position	Changes the sub screen position using Top Right , Bottom Right , Top Left , and Bottom Left .
Subscreen Source*	Selects which source is displayed in the sub screen.
Swap Main/Sub	Changes the main and sub screens.
Exit Picture in Picture	Exits the Picture in Picture display.

* Only EH-TW9200W/EH-TW8200W is displayed.




Configuration Menu Functions

Configuration Menu Operations


On the Configuration menu, you can make adjustments and settings for Signal, Image, Input Signal, and so on.

1 Press the button.

Remote control

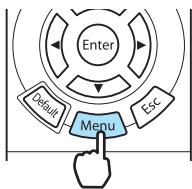


Control panel

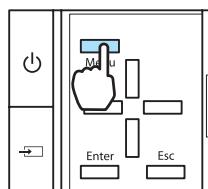

The Configuration menu is displayed.


2 Use the buttons to select the top menu on the left, and then press the button to confirm the selection.

When you select the top menu on the left, the sub menu on the right changes.

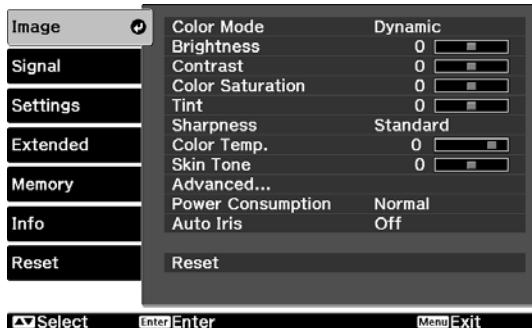

The line at the bottom is a guide for operations.

3 Use the buttons to select the sub menu on the right, and then press the button to confirm the selection.

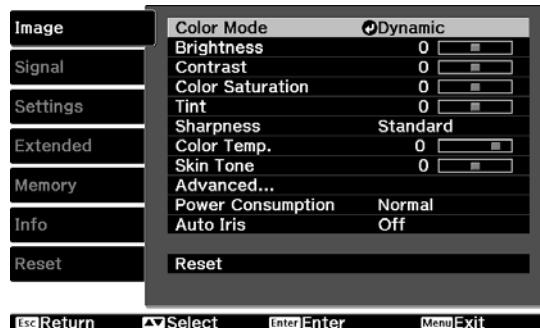

The adjustment screen for the selected function is displayed.

4 Use the buttons to adjust the settings.

Ex.) Adjustment bar



Ex.) Choices



Press the button on an item displaying this icon to change to the selection screen for that item.

Press the button to return to the previous level.

5 Press the button to exit the menu.

 For items adjusted using an adjustment bar, such as the brightness level, you can press the  button while the adjustment screen is displayed to return the adjustment value to its default value.

Configuration Menu Table

If there is no image signal being input, you cannot adjust items related to the image or signal in the Configuration menu. Note that the items displayed for the image, the signal, and other information vary depending on the image signal being projected.

Image menu

Function	Menu/Settings		Explanation
Color Mode	Dynamic, Living Room, Natural, THX ^{*1} , Cinema, 3D Dynamic, 3D Cinema, 3D THX		Select a color mode based on your surroundings and the image you are projecting. 
Brightness			Adjusts the brightness when the image appears too dark.
Contrast			Adjusts the contrast between light and shade in the images. By increasing the contrast, the images become vivid.
Color Saturation ^{*2}			Adjusts the color saturation for the images.
Tint ^{*2}			Adjusts the tint for the images.
Sharpness	Standard		Adjusts the image sharpness. Adjusts the overall image.
	Advanced ^{*2}	Thin Line Enhancement, Thick Line Enhancement, Vert. Line Enhancement, Horiz. Line Enhancement	 Adjusts the image sharpness. Use this to adjust specific areas. 
Color Temp.	-3 - 6 (10 increments) ^{*3}		Adjusts the tint for the images. The image is tinted blue for high values, and tinted red for low values.
Skin Tone			Adjusts the skin tone. The image becomes greener when set to a positive value and redder when set to a negative value.

Function	Menu/Settings			Explanation	
Advanced	Gamma	2, 1, 0, -1, -2		Performs gamma adjustments. You can select a raw value or adjust the gamma while looking at the image or graph.  p.34	
		Customized ^{*4}	Adjust it from the image, Adjust it from the graph		
		Reset			
	RGB	Offset R/G/B		Adjusts the offset and gain for each R, G, and B color.  p.35	
		Gain R/G/B			
	RGBCMY	R/G/B/C/M/Y	Hue, Saturation, Brightness	 Adjusts the hue, saturation, and brightness for each R, G, B, C, M, and Y color.  p.33	
	EPSON Super White ^{*5}		On, Off	(This can only be set when the Color Mode is set to Natural , THX , Cinema , 3D Cinema , or 3D THX and when receiving signal input from the HDMI1 or HDMI2 ports, or from WirelessHD.) Set this to On if you are experiencing bright over exposure of whites in your image. When set to On , HDMI Video Range settings are disabled.	
	Color Gamut ^{*6}	HDTV, EBU, SMPTE-C			
Power Consumption	Normal, ECO ^{*7}			You can set the lamp brightness to one of two settings. Select ECO if the images being projected are too bright. When ECO is selected, power consumption during projection decreases, and fan rotation noise is reduced.	
Auto Iris	Off, Normal, High Speed			You can change the luminance adjustment tracking for changes in brightness in the displayed image. Set to Off for no luminance adjustment.  p.38	
Reset	Yes, No			You can reset all adjustment values for Image to their default settings.	

^{*1} This may not be displayed depending on the model you are using.

^{*2} This is not displayed when a computer image signal is being input.

^{*3} When **Color Mode** is set to **Natural**, **THX**, or **3D THX**, the settings change to **5000K - 10000K**.

^{*4} Only EH-TW9200W/EH-TW9200/EH-TW8200W/EH-TW8200 is displayed.

^{*5} Settings are saved for each type of input source or Color Mode.

^{*6} Only EH-TW9200W/EH-TW9200 is displayed.

^{*7} When **Color Mode** is set to **THX**, the settings change to **Extra Bright** and **Normal**.

 Signal menu

Function	Menu/Settings		Explanation
3D Setup* ¹	3D Display	On, Off	Enables or disables the 3D Display function.  p.45
	2D-to-3D Conversion	Off, Weak, Medium, Strong	Sets the strength of the 3D effect when converting 2D to 3D images.  p.50
	3D Format	Auto, Side by Side, Top and Bottom, 2D	Sets the 3D format for the input signal. When set to Auto , the format is recognized automatically.
	3D Depth	-10 - 10	Sets the depth for the 3D image.
	Diagonal Screen Size	60 - 300	Sets the projection size for the 3D image. By matching this to the actual size, you can achieve the optimum 3D effect.
	3D Brightness	Low, Medium, High	Sets the brightness for the 3D image.
	Inverse 3D Glasses	Yes, No	Reverses the synchronization timing for the left/right shutters on the 3D Glasses and the left/right images. Enable this function if the 3D effect is not displayed correctly.
3D Viewing Notice	On, Off		Turns the notice that appears when viewing 3D content on or off.
Aspect* ²	Auto, Normal, Full, Zoom, Anamorphic Wide* ⁸ , Horiz. Squeeze* ⁸		Selects the aspect mode.  p.31
Tracking* ² * ³	Varies depending on the input signal.		Adjusts computer images when vertical stripes appear in the images.
Sync.* ² * ³	0 - 31		Adjusts computer images when flickering, fuzziness, or interference appear in the images. <ul style="list-style-type: none"> Adjusting the Brightness, Contrast, or Sharpness may cause flickering or blurriness. Adjusting the synchronization after adjusting tracking allows for more accurate adjustments.
Position* ² * ⁴			Adjusts the display position up, down, left, and right when a part of the image is missing so that the whole image is projected.
Deinterlacing* ²	Off, Video, Film/Auto* ⁵		(This can only be set when receiving signal input from the Video port or when receiving 480i, 576i, or 1080i signal input from the Component, HDMI1, or HDMI2 ports or from WirelessHD.) Converts the signal from interlaced (i) to progressive (p) using a method appropriate for the image signal. <ul style="list-style-type: none"> Off: This is ideal for dynamic motion images. Video: This is ideal for viewing general video images. Film/Auto: Performs the optimal conversion for film, CG, or animation input signals.
Motion Detection* ² * ⁵	1 - 5		Sets the image motion speed from 1 (slow, for still images) to 5 (fast, for movies). Change this setting if you are experiencing poor still image quality or flickering movies.

Function	Menu/Settings		Explanation
Frame Interpolation ^{*5 *6}	Off, Low, Normal, High		Reduces afterimages when projecting moving images by interpolating between one frame and the next.  p.38
Super-resolution ^{*5}	0 - 5		Reduces blurring that occurs at the edge of images when the resolution is increased.  p.39
Auto Setup ^{*3}	On, Off		Sets whether or not to automatically adjust the image whenever the input signal is changed. When enabled, the tracking, display position, and synchronization are automatically configured.
Advanced	Noise Reduction ^{*2 *5}	Off, 1, 2, 3	(This can only be set when Image Processing is set to Fine .) Smoothes out rough images. There are three modes available. Select your favorite setting. It is recommended that this is set to Off when viewing image sources in which noise is very low, such as for DVDs.
	Setup Level ^{*2 *5}	0%, 7.5%	(This can be set when receiving an NTSC or component video signal from the Video port.) Change this setting when using devices with a different black level (Setup Level) such as products designed for the Korean market. Check the specifications for your connected device before changing this setting.
(Advanced)	Overscan ^{*2 *7}	Auto, Off, 2%, 4%, 6%, 8%	Changes the output image ratio (the range of the projected image). <ul style="list-style-type: none"> • Off, 2 to 8%: Sets the range of the image. Off projects all ranges. Depending on the image signal you may notice noise at the top and bottom of the image. • Auto: This can only be set when receiving signal input from the HDMI1 or HDMI2 ports, or from WirelessHD. This may be automatically set to Off or 8% depending on the input signal.
	HDMI Video Range ^{*1 *2}	Auto, Normal, Expanded	(This can only be set when EPSON Super White is set to Off .) When set to Auto , the video level for the DVD input signal to the HDMI1 or HDMI2 ports, or to the WirelessHD is automatically detected and set. If you experience under or overexposure when set to Auto , set the video level of the projector to match that of the DVD player's video level. Your DVD player may be set to Normal or Expand. The Auto option is not displayed when connected to a connected device's DVI port.
	Image Processing ^{*5}	Fine, Fast	Performs processing to improve the image.  p.40

Function	Menu/Settings	Explanation
Reset	Yes, No	Resets all Signal settings except for Diagonal Screen Size , 3D Viewing Notice , Aspect , and Image Processing settings to their default settings.

*1 This is only displayed when a HDMI1, HDMI2, or WirelessHD image signal is being input. (WirelessHD is for EH-TW9200W/EH-TW8200W only.)

*2 Settings are saved for each type of input source or signal.

*3 This is only displayed when a PC image signal is being input.

*4 This cannot be set when an HDMI1, HDMI2, or WirelessHD image signal is being input.

*5 This is not displayed when a PC image signal is being input.

*6 Only EH-TW9200W/EH-TW9200/EH-TW8200W/EH-TW8200 is displayed.

*7 This is only displayed when a Component, HDMI1, HDMI2, or WirelessHD image signal is being input. (WirelessHD is for EH-TW9200W/EH-TW8200W only.)

*8 Only EH-TW9200W/EH-TW9200 is displayed.

■ Settings menu

Function	Menu/Settings		Explanation
Keystone	-60 - 60		Performs vertical keystone correction.  p.29
HDMI Link	Device Connections	-	Displays a list of devices connected from the HDMI1 or HDMI2 ports, or from WirelessHD*.
	HDMI Link	On, Off	Enables or disables the HDMI Link function.
	Power On Link	Off, Bidirectional, Device -> PJ, PJ -> Device	Sets the link function when the power is turned on. Set to power on the projector when content is played on a connected device (Bidirectional or Device -> PJ) or to power on a connected device when the projector is turned on (Bidirectional or PJ -> Device).
	Power Off Link	On, Off	Sets whether or not to power off connected devices when the projector is turned off.

Function	Menu/Settings		Explanation
WirelessHD*	Device Connections	-	Displays a list of available WirelessHD devices that can be connected.
	WirelessHD	On, Off	Enables or disables the WirelessHD function.
	Reception	55% 	Displays the reception.
	WiHD Mode	Full, Dynamic	Sets the connection mode of WirelessHD devices.
	Reset	Yes, No	Resets WirelessHD settings to their default settings. Note that even if you reset the projector, the WirelessHD Transmitter settings are not reset. See the documentation supplied with your WirelessHD Transmitter for details on how to reset the WirelessHD Transmitter.
Lock Setting	Child Lock	On, Off	This locks the  button on the projector's control panel to prevent children from turning on the projector by accident. You can turn on the power when locked by holding down the  button for approximately three seconds. You can still turn off the device using the  button, or perform operations with the remote control as usual. If changed, this setting is enabled after you power off the projector and the cool-down process is complete. Note that even if Child Lock is set to On , the projector still turns on when the power cord is connected if Direct Power On is set to On .
	Control Panel Lock	On, Off	When set to On , all buttons on the control panel except for the  button are disabled.  is displayed on the screen if any buttons are pressed. To unlock, press and hold the Enter button on the control panel for at least 7 seconds. If changed, this setting is enabled once you close the Configuration menu.

Function	Menu/Settings	Explanation
Projection	Front, Front/Ceiling, Rear, Rear/Ceiling	<p>Change this setting depending on how the projector is installed.</p> <ul style="list-style-type: none"> • Front: Select if you are projecting in front of the screen. • Front/Ceiling: Select if you are projecting in front of the screen suspended from the ceiling. • Rear: Select if you are projecting to a rear screen from the back. • Rear/Ceiling: Select if you are projecting to a rear screen from the back when the projector is suspended from the ceiling.
User Button	2D-to-3D Conversion, 3D Depth, 3D Brightness, Inverse 3D Glasses, Power Consumption, About	Select a Configuration menu item to assign to the User button on the remote control. By pressing the User button, the assigned menu item selection/adjustment screen is displayed, allowing you to make one-touch settings/adjustments.
Picture in Picture	-	Starts the Picture in Picture display.  p.63
Reset	Yes, No	Resets all Settings settings except for Power On Link , Power Off Link , Projection , and User Button settings to their default settings.

* Only EH-TW9200W/EH-TW8200W is displayed.

 Extended menu

Function	Menu/Settings		Explanation
Operation	Direct Power On	On, Off	<p>You can set up the projector so that projection starts as soon as the power cord is plugged in without any button operations.</p> <p>Note that when this is set to On, projection starts if power is restored after a blackout or other power outage and the power cord is still plugged into the projector.</p>
	Sleep Mode	Off, 5min., 10min., 30min.	<p>If the set time is exceeded and no signal is input, the projector is automatically turned off and enters standby mode. When set to Off, the projector never enters sleep mode. When in standby mode, press the  button on the remote control or the  button on the control panel to start projection.</p>
	Illumination	On, Off	<p>Set this to Off if the light from the indicators on the control panel bothers you when watching a movie in a dark room.</p>
	Trigger Out	On, Off* ¹	<p>Set the Trigger Out function to communicate the projector's power on status and so on to external devices.</p>
		Off, Power, Anamorphic Wide* ²	<p>When set to Off, no voltage is output from the Trigger out port.</p> <p>When set to On or Power, voltage is output from the Trigger out port when the projector is on.</p> <p>For Anamorphic Wide, when the projector is on and Aspect is set to Anamorphic Wide or Horiz. Squeeze, voltage is output from the Trigger out port.</p> <p>If you change this setting, the new setting will take effect the next time you turn the projector on.</p>
	High Altitude Mode	On, Off	<p>Set this to On if you are using the projector above an altitude of 1500 meters.</p>

Function	Menu/Settings		Explanation
Display	Menu Position*3	-	Sets the position where the menu should be displayed.
	Menu Color	Color 1, Color 2	Selects the color for the top menu. <ul style="list-style-type: none"> • Color 1: Black • Color 2: Blue
	Messages	On, Off	Sets whether or not to display the following messages (On or Off). <ul style="list-style-type: none"> • Item names for image signals, color modes, aspect ratios, and loading memory. • If the internal temperature is rising when no image signal is being input or an unsupported signal is detected.
	Display Background	Black, Blue, Logo	Selects the screen status when no image signal is being input.
	Startup Screen	On, Off	Sets whether or not to show a startup screen when projection begins (On or Off). If changed, this setting is enabled after you power off the projector and the cool-down process is complete.
	Standby Confirmation	On, Off	Sets whether or not to display a standby confirmation message (On or Off).  p.26
Input Signal	Video Signal	Auto, NTSC, NTSC4.43, PAL, M-PAL, N-PAL, PAL60, SECAM	Sets the signal type depending on the video device connected to the Video port. When set to Auto , the video signal is set automatically. If you notice noise in the image even when set to Auto , or if you are not seeing any image at all, select the correct signal type from the available options.
	Component	Auto, YCbCr, YPbPr	Sets the output signal for the video device connected to the Component port. When set to Auto , the output signal is set automatically. If you notice unnatural colors when set to Auto , set the appropriate output signal from the available options.
Panel Alignment	Panel Alignment	On, Off	Enables or disables Panel Alignment .
	Select Color	R, B	Select the color to correct.
	Pattern Color	R/G/B, R/G, G/B	Select the pattern used for correction.
	Start Adjustments	-	Starts Panel Alignment .  p.39
	Reset	Yes, No	Resets the correction value.
Language	-		Selects the display language.
Reset	Yes, No		Resets all Extended settings except for High Altitude Mode , Component , and Language settings to their default settings.

*1 Only EH-TW8200W/EH-TW8200/EH-TW7200 is displayed.

*2 Only EH-TW9200W/EH-TW9200 is displayed.

*3 Only EH-TW9200W/EH-TW9200/EH-TW8200W/EH-TW8200 is displayed.

 Memory menu

Function	Explanation
Load Memory	Loads settings saved using the Save Memory function.  p.43 This cannot be selected if you have not saved any settings with the Save Memory function.
Save Memory	Saves certain Image and Signal settings to memory.  p.42
Erase Memory	Erases settings saved to memory that you no longer need.  p.43
Rename Memory	Renames a saved memory.  p.43

 Info menu

Function	Explanation
Lamp Hours	Displays the cumulative lamp operating time*.
Source	Displays the source name for the connected equipment currently being projected.
Input Signal	Displays the content of Input Signal set in the Signal menu according to the source.
Resolution	Displays the resolution.
Scan Mode	Displays the scan mode.
Refresh Rate	Displays the refresh rate.
3D Format	Displays the 3D format of the signal input during 3D projection (Frame Packing, Side by Side, or Top and Bottom).
Sync Info	Displays the image signal information. This information may be needed if service is required.
Deep Color	Displays deep color.
Video Signal	Displays the settings for Video Signal in the Extended menu.
Status	This is information about errors that have occurred on the projector. This information may be needed if service is required.
Serial Number	Displays the projector's serial number.
Version	Displays the firmware version of the projector.

* The cumulative use time is displayed as "0H" for the first 10 hours. 10 hours and above is displayed as "10H", "11H", and so on.

 Reset menu

Function	Explanation
Reset All	Resets all items in the Configuration menu to their default settings. The following items are not reset to their defaults: Input Signal - Component , Panel Alignment , Lamp Hours , Language , Save Memory .
Reset Memory	Erases all settings saved using the Save Memory function.
Reset Lamp Hours	Resets the cumulative lamp hours use time to 0 H . Reset when you replace the lamp.

 Picture in Picture menu

Displayed by pressing the  button during Picture in Picture projection.

Function	Menu/Settings		Explanation
Picture in Picture	Subscreen Size	Small, Large	Changes the size of the sub screen.  p.64
	Subscreen Position	Top Right/Bottom Right/Top Left/Bottom Left	Changes the position of the sub screen.
	Subscreen Source*	HDMI1, HDMI2, WirelessHD	Selects which source is displayed as the sub screen.  p.64
	Swap Main/Sub		Changes the main and sub screens.  p.64
	Exit Picture in Picture		Exits the Picture in Picture display.  p.64


*Only EH-TW9200W/EH-TW8200W is displayed.



Problem Solving

Reading the Indicators

You can check the status of the projector from the flashing and lit , (operation indicators), and on the control panel.

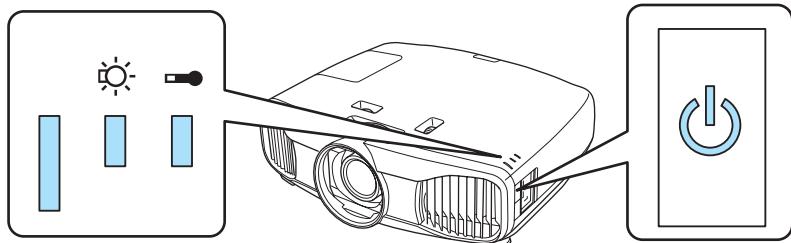

Refer to the following table to check the projector's status and how to remedy problems shown by the indicators.

Indicator status during an error/warning

: Lit : Flashing : Status maintained : Off

Indicators	Status	Remedy
 (blue) (orange)	Replace Lamp	<p>It is time to replace your lamp. Replace the lamp with a new lamp as soon as possible. p.93</p> <p>The lamp may explode if you continue to use it in this status.</p>
 (blue) (orange)	High Temp Warning	<p>You can continue projecting. If the temperature rises too high again, projection stops automatically.</p> <ul style="list-style-type: none"> • If the projector is installed next to a wall, make sure there is at least 20 cm between the wall and the projector's exhaust vent. • If the air filter is clogged, clean it. p.89

Indicators	Status	Remedy
    (blue)/(orange)	Internal Error	<p>The projector has malfunctioned. Remove the power plug from the electrical outlet, and contact your local dealer or the nearest Epson repair center.  Epson Projector Contact List</p>
    (blue)/(orange)	Fan Error Sensor Error	
    (blue)/(orange)	Cinema Filter Error Auto Iris Error	
    (blue)/(orange)	Power Err. (Ballast)	
    (blue)/(orange)	Lamp Error Lamp Failure Lamp Cover Open	<p>There is a problem with the lamp, or it failed to turn on.</p> <ul style="list-style-type: none"> Disconnect the power cord, and then check if the lamp is cracked.  p.93 If it is not cracked, reinstall the lamp and turn on the power. If reinstalling the lamp does not fix the problem, or if the lamp is cracked, remove the power plug from the electrical outlet, and contact your local dealer or the nearest Epson repair center.  Epson Projector Contact List Check that the lamp cover has been properly closed. If the air filter is clogged, clean it.  p.89 When using at an altitude of 1500 m or more, set High Altitude Mode to On.  Extended - Operation - High Altitude Mode p.73
    (blue)/(orange)	High Temp Error (Overheating)	<p>The internal temperature is too high.</p> <ul style="list-style-type: none"> The lamp turns off automatically and projection stops. Wait for about five minutes. When the fan has stopped, disconnect the power cord. If the projector is installed next to a wall, make sure there is at least 20 cm between the wall and the projector's exhaust vent. If the air filter is clogged, clean it.  p.89 If turning the power back on does not clear the problem, stop using the projector and remove the power plug from the electrical outlet. Contact your local dealer or the nearest Epson repair center.  Epson Projector Contact List

Indicator status during normal operation

 : Lit  : Flashing  : Off

Indicators	Status	Remedy
 	Standby condition	When you press the  button on the remote control, or the  button on the control panel, projection starts after a short wait.
  (blue)	Warm-up in progress	Warm-up time is about 30 seconds. The power-off operation is disabled while the projector is warming-up.
	Cool-down in progress	All operations are disabled while the projector is cooling-down. The projector enters standby condition when cool-down is complete. If for any reason the power cord is disconnected during cool-down, wait until the lamp has cooled down sufficiently (about 10 minutes), reconnect the power cord, and then press the  button on the remote control, or the  button on the control panel.
  (blue)	Projection in progress	The projector is operating normally.



- Under normal operating conditions, the  and  indicators are off.
- When the **Illumination** function is set to **Off**, all indicators are off under normal projection conditions.

 **Extended - Operation - Illumination** [p.73](#)

When the Indicators Provide No Help

Check the problem

Check the following table to see if your problem is mentioned, and go to the appropriate page for information on handling the problem.

	Problem	Page
Problems relating to images	No images appear. Projection does not start, the projection area is completely black, or the projection area is completely blue.	p.80
	Moving images being projected from a computer are not projected.	p.81
	"Not supported" is displayed.	p.82
	"No Signal" is displayed.	p.82
	Images are fuzzy or out of focus.	p.82
	Interference or distortion appears in the images.	p.83
	The image is truncated (large) or small, or only a part of the image is projected.	p.83
	Image colors are not right. The whole image appears purplish or greenish, images are black & white, or colors appear dull.*	p.84
	Images appear dark.	p.84
	Projection stops automatically.	p.84
Problems when projection starts	The projector does not turn on.	p.85
Problems with the remote control	The remote control does not respond.	p.85
Problems with the control panel	Cannot make settings on the control panel	p.85
Problems with 3D	Cannot project correctly in 3D.	p.86
	The 3D image is enlarged and truncated	p.86
Problems with HDMI	HDMI Link does not function.	p.86
	The device name is not displayed under device connections.	p.87
Problems with WirelessHD	Cannot project WirelessHD images.	p.87
	Interference, distortion, or interruption appear in WirelessHD	p.88

* Because color reproduction differs between monitors and computer LCD screens, the image projected by the projector and the color tones displayed on the monitor may not match, however this is not a fault.

Problems relating to images

No images appear

Check	Remedy
Is the projector turned on?	Press the  button on the remote control or the  button on the control panel.

Check	Remedy
Is the power cord connected?	Connect the power cord.
Are the indicators switched off?	Disconnect and then reconnect the projector's power cord. Check that pressing the power button after connection supplies the projector with power.
Is an image signal being input?	Check that the connected device is turned on. When Messages is set to On from the Configuration menu, image signal messages are displayed.  Extended - Display - Messages p.73
Has the power to the AV amplifier been disconnected?	If an AV amplifier is connected, check the AV amplifier's power supply.
Is an image signal being sent from the device?	Check that an image signal is being sent from the connected device.
Is the image signal format setting correct?	When Video is input If nothing is projected even when Video Signal is set to Auto from the Configuration menu, set the signal that matches the connected device.  Extended - Input Signal - Video Signal p.73 When Component is input If nothing is projected even when Component is set to Auto from the Configuration menu, set the signal that matches the connected device.  Extended - Input Signal - Component p.73
Are the Configuration menu settings correct?	Reset all of the settings.  Reset - Reset All p.75
(Only when projecting computer image signals) Was the connection made while the power of the projector or the computer was already turned on?	If the connection is made while the power is already turned on, the key (Function key and so on) that changes the computer's image signal to external output may not work. Turn off the connected computer, and then turn it back on.

Moving images are not displayed

Check	Remedy
(Only when projecting computer image signals) Is the computer's image signal set to external output and to output to the LCD monitor at the same time?	Depending on the computer's specifications, moving images may not be displayed when the computer is set to external output and to the LCD monitor output at the same time. Change it so that the image signal is set to external output only. For the computer's specifications, see the documentation supplied with the computer.

"**Not supported**" is displayed.

Check	Remedy
Is the image signal format setting correct?	When Video is input If nothing is projected even when Video Signal is set to Auto from the Configuration menu, set the signal that matches the connected device. (☞ Extended - Input Signal - Video Signal p.73)
	When Component is input If nothing is projected even when Component is set to Auto from the Configuration menu, set the signal that matches the connected device. (☞ Extended - Input Signal - Component p.73)
(Only when projecting computer image signals) Do the image signal's frequency and resolution correspond to the mode?	Check the image signal being input in Resolution from the Configuration menu, and check that it corresponds to the projector's resolution. (☞ p.97)

"**No Signal**" is displayed.

Check	Remedy
Are the cables connected correctly?	Check that all the cables required for projection are securely connected. (☞ p.19)
Is the correct image input port selected?	Change the image with the source buttons on the remote control, or the  button on the control panel. (☞ p.26)
Is the connected device turned on?	Turn on the device.
(Only when projecting computer image signals) Are the image signals being output to the projector?	Change it so that the image signal is set to external output, and not just the computer's LCD monitor. For some models, when the image signals are output externally, they no longer appear on the LCD monitor. For the computer's specifications, see the documentation supplied with the computer.
	If the connection is made while the power of the projector or the computer is already turned on, the Fn key (Function key) that changes the computer's image signal to external output may not work. Turn off the computer and the projector, and then turn them back on.

Images are fuzzy or out of focus

Check	Remedy
Has the focus been adjusted?	Adjust the focus. (☞ p.27)
Is the projector at the correct distance?	Check the recommended projection range. (☞ p.18)

Check	Remedy
Has condensation formed on the lens?	If the projector is suddenly taken from a cold environment to a warm environment, or if sudden ambient temperature changes occur, condensation may form on the surface of the lens, and this may cause the images to appear fuzzy. Set the projector up in the room about one hour before it is used. If the projector is wet from condensation, turn off the projector, disconnect the power cord, and leave it for a while.

Interference or distortion appear in images

Check	Remedy
Is the image signal format setting correct?	When Video is input If nothing is projected even when Video Signal is set to Auto from the Configuration menu, set the signal that matches the connected device. (☞ Extended - Input Signal - Video Signal p.73)
	When Component is input If nothing is projected even when Component is set to Auto from the Configuration menu, set the signal that matches the connected device. (☞ Extended - Input Signal - Component p.73)
Are the cables connected correctly?	Check that all the cables required for projection are securely connected. (☞ p.19)
Is an extension cable being used?	If an extension cable is used, electrical interference may affect the signals.
(Only when projecting computer image signals) Are the Sync. and Tracking settings adjusted correctly?	The projector uses automatic adjustment functions to project at the optimum status. However, depending on the signal, some may not be adjusted correctly even after performing self corrections. If this happens, adjust the Tracking and Sync. settings from the Configuration menu. (☞ Signal - Tracking/Sync. p.68)
(Only when projecting computer image signals) Is the correct resolution selected?	Set the computer so that the signals being output are compatible with the projector. (☞ p.97)

Part of the image is truncated (large) or small

Check	Remedy
Is the correct Aspect selected?	Press the Aspect button, and then select the Aspect that matches the input signal. (☞ Signal - Aspect p.68)
(Only when projecting computer image signals) Is the correct resolution selected?	Set the computer so that the signals being output are compatible with the projector. (☞ p.97)

Image colors are not right

Check	Remedy
Is the image signal format setting correct?	When Video is input If nothing is projected even when Video Signal is set to Auto from the Configuration menu, set the signal that matches the connected device.  Extended - Input Signal - Video Signal p.73
	When Component is input If nothing is projected even when Component is set to Auto from the Configuration menu, set the signal that matches the connected device.  Extended - Input Signal - Component p.73
Are the cables connected correctly?	Check that all the cables required for projection are securely connected.  p.19 For the Video and Component ports, make sure the connector is the same color as the cable port.  p.19
Is the contrast adjusted correctly?	Adjust the Contrast setting from the Configuration menu.  Image - Contrast p.66
Is the color adjusted correctly?	Adjust the Advanced setting from the Configuration menu.  Image - Advanced p.66
(Only when projecting images from a video device)	Adjust the Color Saturation and Tint settings from the Configuration menu.  p.66
Are the color saturation and tint adjusted correctly?	

Images appear dark

Check	Remedy
Is the image brightness set correctly?	Adjust the Brightness setting from the Configuration menu.  Image - Brightness p.66
Is the contrast adjusted correctly?	Adjust the Contrast setting from the Configuration menu.  Image - Contrast p.66
Is it time to replace the lamp?	When the lamp is nearly ready for replacement, the images become darker and the color quality becomes poorer. When this happens, replace the lamp with a new lamp.  p.93

Projection stops automatically

Check	Remedy
Is Sleep Mode enabled?	If the set time is exceeded and no signal is input, the lamp turns off automatically, and the projector enters standby status. The projector returns from standby status when you press the  button on the remote control or the  button on the control panel. If you do not want to use Sleep Mode , change the setting to Off .  Extended - Operation - Sleep Mode p.73

■ Problems when projection starts

The projector does not turn on

Check	Remedy
Is the power turned on?	Press the  button on the remote control or the  button on the control panel.
Is Child Lock set to On ?	When Child Lock is set to On from the Configuration menu, hold down the  button on the control panel for approximately three seconds, or perform operations from the remote control.  Settings - Lock Setting - Child Lock p.70
Do the indicators turn on and off when the power cord is touched?	Turn off the projector, and then disconnect and reconnect the projector's power cord. If the problem continues, stop using the projector, remove the power plug from the electrical outlet, and contact your local dealer or the nearest projector information center.  Epson Projector Contact List

■ Problems with the remote control

The remote control does not respond

Check	Remedy
Is the remote control light-emitting area pointing towards the remote receiver on the projector during operation?	Point the remote control towards the remote receiver. Also, check the operating range.  p.24
Is the remote control too far from the projector?	Check the operating range.  p.24
Is direct sunlight or strong light from fluorescent lamps shining onto the remote receiver?	Set the projector up in a location where strong light does not shine onto the remote receiver.
Are the batteries dead or have the batteries been inserted correctly?	Make sure the batteries are inserted correctly or replace the batteries with new ones if necessary.  p.23
Is the remote control pointed at the WirelessHD Transmitter when operating the WiHD Transmitter control button? (EH-TW9200W/EH-TW8200W only)	Make sure you point the remote control at the WirelessHD Transmitter when using the WiHD Transmitter control button on the remote control.  p.57

■ Problems with the control panel

Cannot make settings on the control panel

Check	Remedy
Is Control Panel Lock set to On ?	If Control Panel Lock is set to On from the Configuration menu, all of the control panel buttons except for  button are disabled. Perform operations from the remote control.  Settings - Lock Setting - Control Panel Lock p.70

Problems with 3D

Cannot project correctly in 3D

Check	Remedy
Are the 3D Glasses turned on?	Turn on the 3D Glasses.
Is a 3D image being projected?	If the projector is projecting a 2D image, or if an error occurs on the projector that prevents the 3D image from being projected, you cannot view 3D images even if you are wearing the 3D Glasses.
Is the input image in 3D?	Check that the input image is 3D compatible. Since most TV broadcasts do not contain a 3D format signal, 3D reception must be set manually.
Is 3D Display set to Off ?	If 3D Display is set to Off from the Configuration menu, the projector does not automatically change to 3D even when a 3D image is input. Press the 2D/3D button.  Signal - 3D Setup - 3D Display p.68
Is the correct 3D format set?	The projector automatically selects the appropriate 3D format, but if the 3D image is not displayed correctly, use 3D Format from the Configuration menu to select another format.  Signal - 3D Setup - 3D Format p.68
Are you viewing within the reception range?	Check the range within which the 3D Glasses can communicate with the projector, and view within that range.  p.47
Has pairing been performed correctly?	See the User's Guide for the 3D Glasses to perform pairing.
Are there any devices that cause radio wave interference in the vicinity?	When using other devices at the same time with the frequency band (2.4 GHz) such as Bluetooth communication devices, wireless LAN (IEEE802.11b/g), or microwave ovens, radio wave interference may occur, the image may be interrupted, or communication may not be possible. Do not use the projector near these devices.

The 3D image is enlarged and truncated

Check	Remedy
Is the correct 3D video format set?	Video may be truncated if an incorrect 3D format is set. Set the correct 3D format.  p.45

Problems with HDMI

HDMI link does not function

Check	Remedy
Are you using a cable that meets the HDMI standards?	Operations are not possible with cables that do not meet the HDMI standards.

Check	Remedy
Does the connected device meet the HDMI CEC standards?	If the connected device does not meet the HDMI CEC standards, it cannot be operated even if it is connected to the HDMI port. See the documentation and so on supplied with the connected device for more information. Also, press the  button, and then check if the device is available under Device Connections .  p.61
Are the cables connected correctly?	Check that all the cables required to use HDMI Link are securely connected.  p.61
Is the power for the amplifier or DVD recorder and so on turned on?	Put each device in standby status. See the documentation and so on supplied with the connected device for more information.
Was a new device connected, or was the connection changed?	If the CEC function for a connected device needs to be set again, for example when a new device is connected or the connection is changed, you may need to restart the device.
Are many multi-media players connected?	Up to 3 multi-media players that meet the HDMI CEC standards can be connected at the same time.

The device name is not displayed under Device Connections

Check	Remedy
Does the connected device meet the HDMI CEC standards?	If the connected device does not meet the HDMI CEC standards, it is not displayed. See the documentation and so on supplied with the connected device for more information.

Problems with WirelessHD (EH-TW9200W/EH-TW8200W only)

Cannot project WirelessHD images

Check	Remedy
Does the cable connecting the supplied WirelessHD Transmitter meet the HDMI standards?	If the cable does not meet the HDMI standards, operations are not possible.
Is WirelessHD set to Off ?	When WirelessHD is set to Off from the Configuration menu, projection is not possible for WirelessHD input signals. Set WirelessHD to On , and then press the  button.  Settings - WirelessHD p.70
Are signals being received within the WirelessHD transmission range?	Check the range within which the WirelessHD's transceiver can communicate, and view within that range.  p.56
Is the supplied WirelessHD Transmitter turned on?	Check the power lamp on the WirelessHD Transmitter. If there is no power being supplied, make sure the connector for the AC adapter is securely connected, and then turn on the power switch.
Is the WirelessHD indicator for the supplied WirelessHD Transmitter off?	The WirelessHD cannot communicate with the projector. Check the range within which the WirelessHD's transceiver can communicate, and setup within that range.
Is the Link indicator for the supplied WirelessHD Transmitter off?	No signal is output from the AV device connected to the WirelessHD Transmitter. Check that the cables from the AV device and the WirelessHD Transmitter are securely connected.

Check	Remedy
Has dust collected in the WirelessHD's vent?	The vent on the base of the projector is the WirelessHD's vent. Communication may not be possible if dust has collected in the vent. Install the projector so that dust does not collect in the vent.
Are the projector and the WirelessHD Transmitter facing the correct way?	Setup the projector and the WirelessHD Transmitter so that they are facing each other.

Interference, distortion, or interruption appear in WirelessHD

Check	Remedy
Are signals being received within the WirelessHD transmission range?	Check the range within which the WirelessHD's transceiver can communicate, and view within that range.  p.56
Are there any obstructions between the WirelessHD Transmitter and the projector?	Because WirelessHD communicates using a tight beamed electromagnetic wave, if there are any people or objects and so on obstructing the communication path, this could have an adverse affect on the image. Make sure that there are no obstacles between the WirelessHD Transmitter and the projector within the WirelessHD transmission range.  p.56
Is the reception too low?	If the transmissions are not strong enough, communication may be unstable. Check Reception as you set up the transmitter as it is sometimes possible to improve the strength of the transmission by moving the WirelessHD Transmitter or changing its direction.  Settings - WirelessHD - Reception p.70 Transmission strength may differ depending on the surroundings, or they may be unstable. While checking Reception , setup the transmitter in a location where the number displayed remains steady.  Settings - WirelessHD - Reception p.70



Maintenance

Cleaning the Parts

You should clean the projector if it becomes dirty or if the quality of projected images starts to deteriorate.

Warning

Do not use sprays that contain flammable gas to remove dirt and dust from the projector's lens, air filter, and so on. The projector may catch fire due to the high internal temperature of the lamp.

Cleaning the air filter

Clean the air filter if dust has accumulated on the air filter or when the following message is displayed.

"The projector is overheating. Make sure nothing is blocking the air vent, and clean or replace the air filter."


Attention

- If dust collects on the air filter, it can cause the internal temperature of the projector to rise, and this can lead to problems with operation and shorten the optical engine's service life. It is recommended that you clean the air filter at least once every three months. Clean them more often than this if using the projector in a particularly dusty environment.
- Do not rinse the air filter in water. Do not use detergents or solvents.
- Lightly brush the air filter to clean it. If it is brushed too strongly, dust will be ground into the air filter and cannot be removed.


1 Press the button on the remote control or the control panel to turn off the power, and then disconnect the power cord.

2 Remove the air filter cover.

Hook your finger into the tab on the air filter cover, and remove it from the lens side.

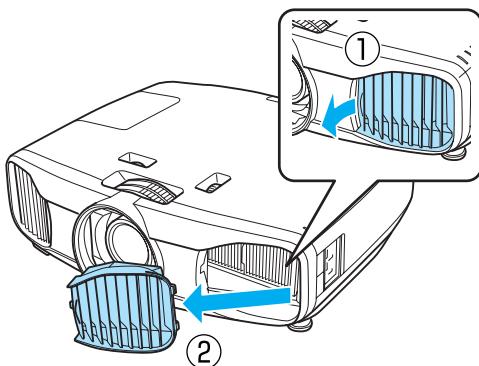


3 Remove the air filter. Grip the knob in the center of the air filter and pull it out at an angle.

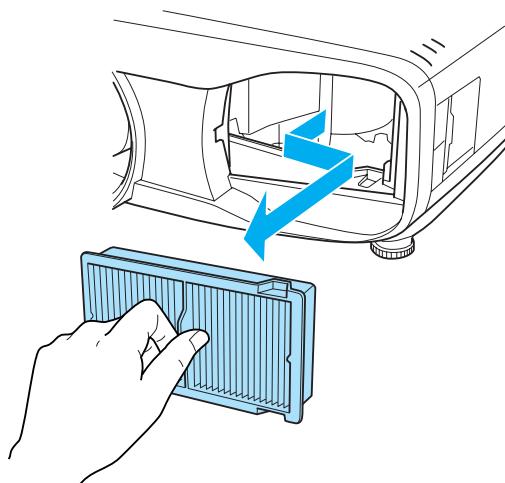

- 4** Hold the air filter with the surface facing down and tap it 4 or 5 times to remove the dust.


Turn it over and tap the other side in the same way.

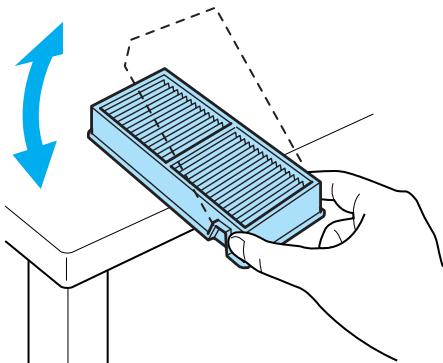

Attention

If the air filter is hit too hard, it may become unusable due to deformities and cracks.

- 5** Remove any dust remaining on the air filter by using a vacuum cleaner from the front side.

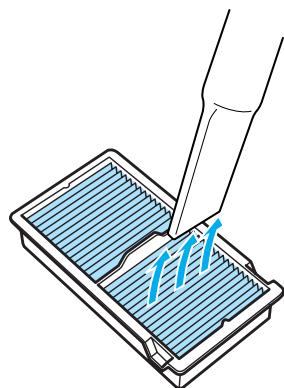

Cleaning the main unit

Clean the projector's surface by wiping it gently with a soft cloth.


If it is particularly dirty, moisten the cloth with water containing a small amount of neutral detergent, and then firmly wring the cloth dry before using it to wipe the surface.

Attention

Do not use volatile substances such as wax, alcohol, or thinner to clean the projector's surface. The quality of the case may change or the paint may peel off.


- 6** Install the air filter.

Grip the air filter by the knob in the center and insert it at an angle.

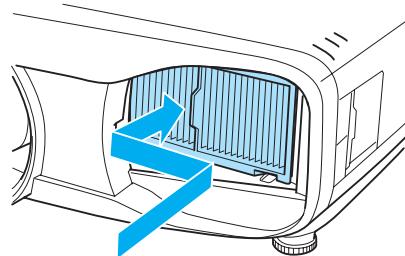

- 7** Install the air filter cover.

Secure the tab on the outside first, and then secure the tab on the lens side.

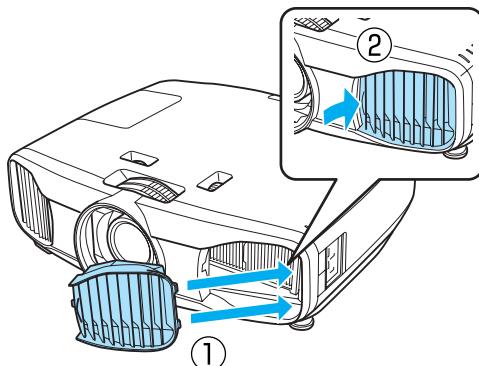


■ Cleaning the lens

Use a commercially available cloth for cleaning glasses to gently wipe off dirt from the lens.

Manually open the lens shutter, and then wipe the lens inside.

Attention

Do not rub the lens with harsh materials or handle the lens too roughly as it can easily become damaged.

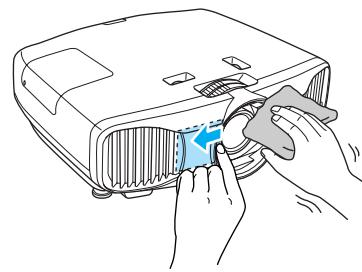


■ Cleaning the 3D Glasses

Use the cloth to gently wipe off dirt from the lenses of the 3D Glasses.

Attention

- Do not rub the lenses of the glasses with harsh materials or handle the lenses too roughly as they can easily become damaged.
- When maintenance is necessary, disconnect the USB Charging Adapter from the electrical outlet, and check that all cables have been disconnected.
- The 3D glasses contain rechargeable batteries. Observe local regulations when you dispose of them.

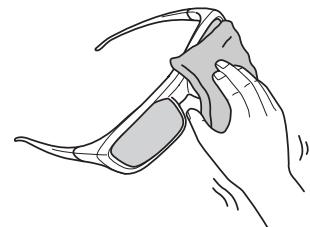

Replacement Periods for Consumables

■ Air filter replacement period

- If the message is displayed even though the air filter has been cleaned  [p.89](#)

■ Lamp replacement period

- The following message is displayed when projection starts

"It is time to replace your lamp. Please contact your Epson projector reseller or visit [www.epson.com](#) to purchase."

- The projected image gets darker or starts to deteriorate.



- The lamp replacement message is set to appear after 3900 H in order to maintain the initial brightness and quality of the projected images. The message display time changes depending on the usage situation, such as the color mode setting and so on.
If you continue to use the lamp after the replacement period has passed, the possibility that the lamp may explode increases. When the lamp replacement message appears, replace the lamp with a new one as soon as possible, even if it is still working.
- Depending on the characteristics of the lamp and the way it has been used, the lamp may become darker or stop working before the lamp warning message appears. You should always have a spare lamp unit ready in case it is needed.

Replacing Consumables

Replacing the air filter




Dispose of used air filters properly in accordance with your local regulations.
Material: Polypropylene

1 Press the  button on the remote control or the control panel to turn off the power, and then disconnect the power cord.


2 Remove the air filter cover.

Hook your finger into the tab on the air filter cover, and remove it from the lens side.

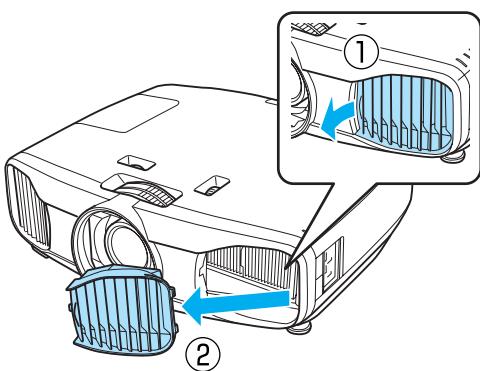


3 Remove the old air filter.

Grip the knob in the center of the air filter and pull it out an angle.

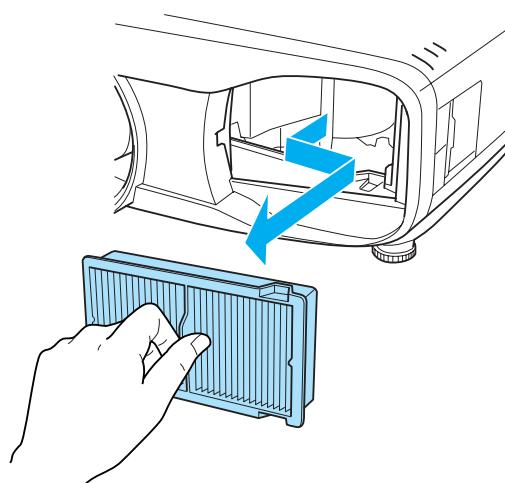


4 Install the new air filter.

Grip the air filter by the knob in the center and insert it at an angle.

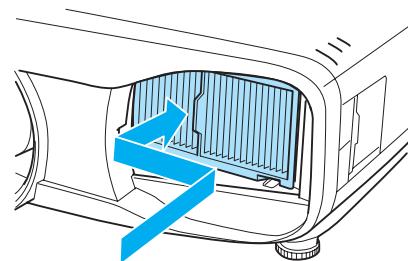

5 Install the air filter cover.

Secure the tab on the outside first, and then secure the tab on the lens side.

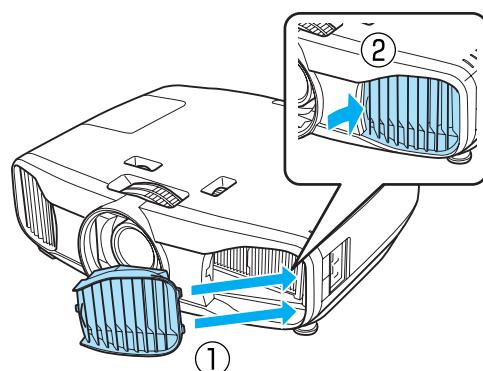

Replacing the lamp

Warning

When replacing the lamp because it has stopped illuminating, there is a possibility that the lamp may be broken. If replacing the lamp of a projector that has been suspended from the ceiling, you should always assume that the lamp is cracked, and remove the lamp cover with care. When you open the lamp cover, small shards of glass could fall out. If any shards of glass get into your eyes or mouth, contact a doctor immediately.


Caution

- Do not touch the lamp cover immediately after turning off the projector as it is still hot. Wait until the lamp has cooled down sufficiently before removing the lamp cover. Otherwise, you could get burnt.
- We recommend the use of genuine EPSON option lamps. The use of non-genuine lamps may affect projection quality and safety.

Any damage or malfunction caused by the use of non-genuine lamps may not be covered by Epson's warranty.


1 Press the  button on the remote control or the control panel to turn off the power, and then disconnect the power cord.

2 Loosen the lamp cover fixing screw.

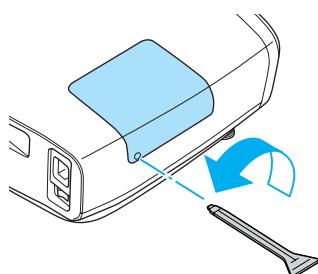


3 Remove the lamp cover.

Slide the lamp cover straight forward and remove it.

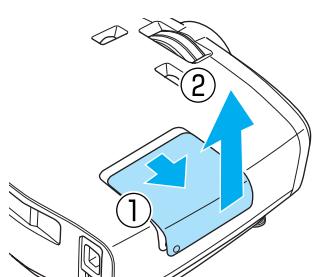


4 Loosen the two lamp fixing screws.

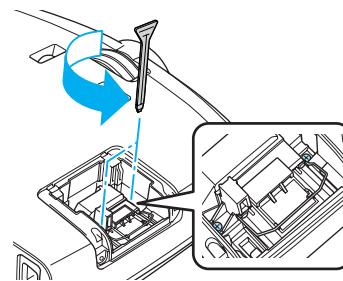


5 Remove the old lamp.

Grip the knob firmly and pull it straight out.

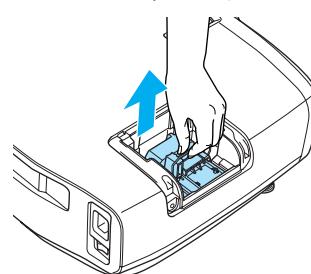


6 Install the new lamp.

Make sure the lamp is facing the correct direction and press it in.

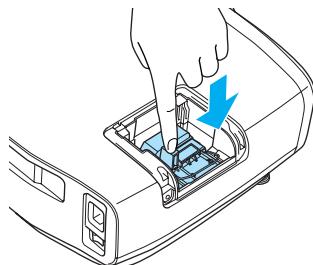

7 Tighten the two lamp fixing screws.

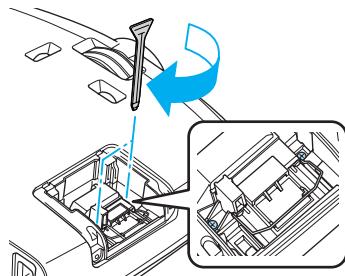

Warning

Do not disassemble or remodel the lamp. If a modified or disassembled lamp is installed in the projector and used, it could cause a fire, electric shock, or an accident.

Caution

- Make sure you install the lamp and lamp cover securely. If they are not installed correctly, the power does not turn on.
- The lamp contains mercury (Hg). Dispose of used lamps in accordance with your local laws and regulations on disposing of fluorescent tubing.

Resetting lamp hours

After replacing the lamp, make sure you reset the lamp hours.

The projector records how long the lamp is turned on and a message and indicator notify you when it is time to replace the lamp.


1 Turn on the power.

2 Press the button.


The Configuration menu is displayed.

8 Replace the lamp cover.

Slide the cover back into place.

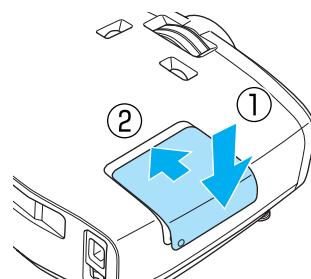


9 Tighten the lamp cover fixing screw.

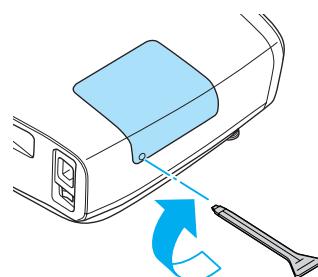

3

Select **Reset - Reset Lamp Hours**.


A reset confirmation message is displayed.

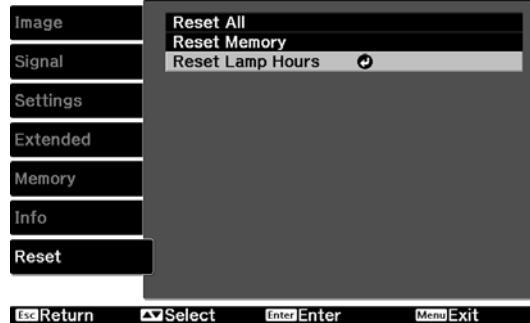

4

Use the **↔** buttons to select **Yes**, and then press the **Enter** button to execute.

The lamp hours are reset.

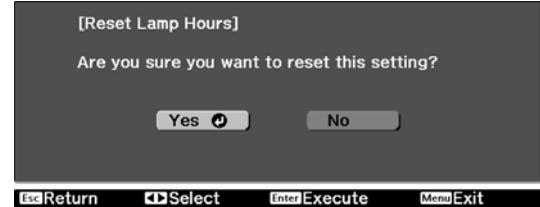



Optional Accessories and Consumables

The following optional accessories/consumables are available for purchase if required. This list of optional accessories/consumables is current as of: 2013.6. Details of accessories are subject to change without notice. Varies depending on country of purchase.

Optional Items

Name	Model No.	Explanation
Ceiling mount*	ELPMB30	Use when installing the projector on a ceiling.
	ELPMB22	
	ELPMB20	
Ceiling pipe 600 (600 mm white)*	ELPFP07	Use when installing the projector on a high ceiling.
Ceiling pipe 450 (450 mm white)*	ELPFP13	
Ceiling pipe 700 (700 mm white)*	ELPFP14	
RF system 3D Glasses	ELPGS03	Use when viewing 3D images.
Cable cover	ELPCC04B (Black), ELPCC04W (White)	Use this when installing the projector on a ceiling to cover the cables and improve the overall appearance. Do not attach the cable cover when the cable is secured with an HDMI cable clamp.
USB Charging Adapter	ELPAC01	Use when charging the 3D Glasses.

* Special expertise is required to suspend the projector from a ceiling. Contact your local dealer.

Consumables

Name	Model No.	Explanation
Lamp unit	ELPLP69	Use as a replacement for used lamps. (1 lamp)
Air filter	ELPAF39	Use as a replacement for used air filters. (1 air filter)



Supported Resolutions

Component Video

Signal	Refresh Rate (Hz)	Resolution (dots)
SDTV (480i)	60	720 x 480
SDTV (576i)	50	720 x 576
SDTV (480p)	60	720 x 480
SDTV (576p)	50	720 x 576
HDTV (720p)	50/60	1280 x 720
HDTV (1080i)	50/60	1920 x 1080
HDTV (1080p)	50/60	1920 x 1080

Composite Video

Signal	Refresh Rate (Hz)	Resolution (dots)
TV (NTSC)	60	720 x 480
TV (SECAM)	50	720 x 576
TV (PAL)	50/60	720 x 576

Computer Signals (Analog RGB)

Signal	Refresh Rate (Hz)	Resolution (dots)
VGA	60/72/75/85	640 x 480
SVGA	56/60/72/75/85	800 x 600
XGA	60/70/75/85	1024 x 768
SXGA	70/75/85	1152 x 864
	60/75/85	1280 x 960
	60/75/85	1280 x 1024
WXGA	60	1280 x 768
	60	1366 x 768
	60/75/85	1280 x 800
WXGA++	60	1600 x 900

HDMI1/HDMI2 Input Signal

Signal	Refresh Rate (Hz)	Resolution (dots)
VGA	60	640 x 480
SDTV (480i)	60	720 x 480

Signal	Refresh Rate (Hz)	Resolution (dots)
SDTV (576i)	50	720 x 576
SDTV (480p)	60	720 x 480
SDTV (576p)	50	720 x 576
HDTV (720p)	50/60	1280 x 720
HDTV (1080i)	50/60	1920 x 1080
HDTV (1080p)	24/50/60	1920 x 1080

3D Input Signal

Signal	Refresh Rate (Hz)	Resolution (dots)	3D Format		
			Frame Packing	Side by Side	Top and Bottom
HDTV750p (720p)	50/60	1280 x 720	✓	✓	✓
HDTV1125i (1080i)	50/60	1920 x 1080	-	✓	-
HDTV1125p (1080p)	50/60	1920 x 1080	-	✓	-
HDTV1125p (1080p)	24	1920 x 1080	✓	✓	✓

WirelessHD Input Signal

Signal	Refresh Rate (Hz)	Resolution (dots)
VGA	60	640 x 480
SDTV (480i)	60	720 x 480
SDTV (576i)	50	720 x 576
SDTV (480p)	60	720 x 480
SDTV (576p)	50	720 x 576
HDTV (720p)*	50/60	1280 x 720
HDTV (1080i)	50/60	1920 x 1080
HDTV (1080p)*	24/50/60	1920 x 1080

* When projecting in WirelessHD, the following signals do not support Deep Color.

2D: 1080p 60/50 Hz

3D: 1080P 24 Hz frame packing/720P 50/60 Hz frame packing/1080p 60/50 Hz side by side

3D Input Signal MHL (via a WirelessHD Transmitter*)

Signal	Refresh Rate (Hz)	Resolution (dots)	3D Format		
			Frame Packing	Side by Side	Top and Bottom
HDTV750p (720p)	50/60	1280 x 720	-	✓	✓
HDTV1125i (1080i)	50/60	1920 x 1080	-	✓	-

Signal	Refresh Rate (Hz)	Resolution (dots)	3D Format		
			Frame Packing	Side by Side	Top and Bottom
HDTV1125p (1080p)	50/60	1920 x 1080	-	-	-
HDTV1125p (1080p)	24	1920 x 1080	-	✓	✓

*HDMI5 port only



Specifications

Product name		EH-TW9200W/EH-TW8200W	EH-TW9200/EH-TW8200/EH-TW7200	
Appearance (not including adjustable foot)		466 (W) x 140 (H) x 395 (D) mm		
Panel Size		0.74" wide		
Display method		Polysilicon TFT active matrix		
Resolution		1920 (W) x 1080 (H) x 3		
Scanning Frequency	Digital	Pixel Clock: 13.5 - 148.5 MHz		
		Horizontal: 15.6 - 67.5 kHz		
		Vertical: 24, 50 - 60 Hz		
	Analog	Pixel Clock: 13.5 - 157.5 MHz		
		Horizontal: 15.6 - 91.2 kHz		
		Vertical: 50 - 85 Hz		
Focus adjustment		Manual		
Zoom adjustment		Manual (approx. 1 to 2.1)		
Lamp (light source)		UHE lamp 230 W, Model No.: ELPLP69		
Power supply		100 - 240 V AC ±10%, 50/60 Hz, 3.7 - 1.6 A		
Power consumption	100 to 120 V area	Operating: 350 W		
		Standby power consumption: 0.24 W		
		Standby power consumption: 7.1 W*		
	220 to 240 V area	Operating: 334 W		
		Standby power consumption: 0.34 W		
		Standby power consumption: 8.1 W*		
Operating altitude		Altitude 0 to 2286 m		
Operating temperature		+5 to 35°C (No condensation)		
Storage temperature		-10 to +60°C (No condensation)		
Mass		Approx. 8.6 kg	Approx. 8.4 kg	
Connectors		Component port x 1, 3RCA pin jack		
		PC port x 1, Mini D-Sub15-pin (female) blue		
		HDMI port x 2, HDMI For HDCP, For CEC signals, Deep Color		
		Video port x 1, RCA pin jack		
		RS-232C port x 1, D-sub 9-pin (male)		
		Trigger out port x 1, 3.5 mm mini jack		
		Mini USB TypeB port x 1		

*When using the WirelessHD Transmitter with EH-TW9200W/EH-TW8200W, and the following conditions are satisfied

Settings - WirelessHD - WirelessHD - On

Settings - HDMI Link - Power On Link is set to **Bidirectional** or **Device -> PJ**  p.70


This product is also designed for IT power distribution system with phase-to-phase voltage 230V.

Обладнання відповідає вимогам Технічного регламенту обмеження використання деяких небезпечних речовин в електричному та електронному обладнанні.



Angle of tilt

If you use the projector tilted at an angle of more than 4°, it could be damaged or cause an accident.

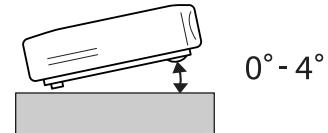

ESC/VP21 Commands

Use of ESC/VP21 enables control of the projector from an external device. For more details, see the following Web site.


<http://www.epson.com>

RS-232C Cable layouts

- Connector shape: D-sub 9-pin (male)
- Projector input port name: RS-232C
- Signal name:

Signal Name	Function
GND	Signal wire ground
TD	Transmit data
RD	Receive data


<At the projector>

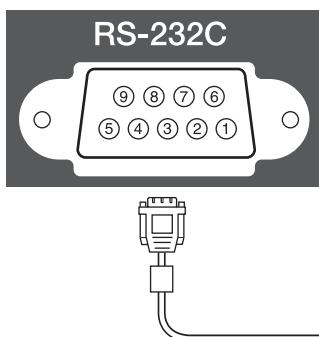


<At the projector>

GND 5
RD 2
TD 3

(PC serial cable)

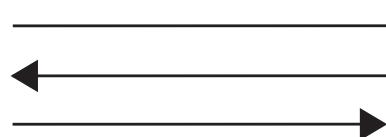

<At the computer>

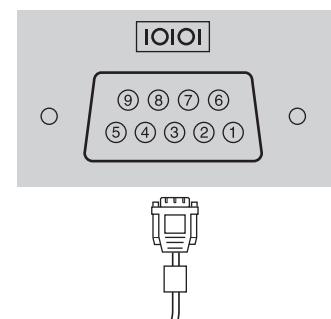

<At the computer>

5 GND
3 TD
2 RD

- Communications protocol
 - Default baud rate setting: 9600 bps
 - Data length: 8 bit
 - Parity: None
 - Stop-bit: 1 bit
 - Flow control: None

DECLARATION of CONFORMITY

According to 47CFR, Part 2 and 15

Class B Personal Computers and Peripherals; and/or

CPU Boards and Power Supplies used with Class B Personal Computers

We: Epson America, Inc.
Located at: 3840 Kilroy Airport Way
MS: 3-13
Long Beach, CA 90806
Tel: 562-981-3840

Declare under sole responsibility that the product identified herein, complies with 47CFR Part 2 and 15 of the FCC rules as a Class B digital device. Each product marketed, is identical to the representative unit tested and found to be compliant with the standards. Records maintained continue to reflect the equipment being produced can be expected to be within the variation accepted, due to quantity production and testing on a statistical basis as required by 47CFR 2.909. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Trade Name: EPSON
Type of Product: LCD Projector
Model: H585C/H586C/H587C/H588C/H589C

FCC Compliance Statement

For United States Users

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING

The connection of a non-shielded equipment interface cable to this equipment will invalidate the FCC Certification or Declaration of this device and may cause interference levels which exceed the limits established by the FCC for this equipment. It is the responsibility of the user to obtain and use a shielded equipment interface cable with this device. If this equipment has more than one interface connector, do not leave cables connected to unused interfaces. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.



Glossary

This section briefly explains the difficult terms that are not explained in context in the text of this guide. For details, refer to other commercially available publications.

HDCP	HDCP is an abbreviation for High-bandwidth Digital Content Protection. It is used to prevent illegal copying and protect copyrights by encrypting digital signals sent over DVI and HDMI ports. Because the HDMI port on this projector supports HDCP, it can project digital images protected by HDCP technology. However, the projector may not be able to project images protected with updated or revised versions of HDCP encryption.
HDMI™	An abbreviation for High Definition Multimedia Interface. This is the standard by which HD images and multichannel audio signals are digitally transmitted. HDMI™ is a standard aimed at digital consumer electronics and computers. By not compressing the digital signal, the image can be transferred at the highest quality possible. It also provides an encryption function for the digital signal.
HDTV	An abbreviation for High-Definition Television. This refers to high-definition systems which satisfy the following conditions. <ul style="list-style-type: none"> • Vertical resolution of 720p or 1080i or greater (p = Progressive, i = Interlace) • Screen aspect of 16:9 Dolby Digital audio reception and playback (or output)
MHL	An abbreviation for Mobile High-definition Link, which is a standard high-definition interface that enables high-speed transfer of video signals on mobile devices. It is a standard targeting smartphones and tablets that transfers uncompressed digital signals without loss of quality and also enables simultaneous charging of such devices.
NTSC	An abbreviation for the National Television Standards Committee. A terrestrial analog color broadcasting method. This method is used in Japan, North America, and Latin America.
PAL	An abbreviation for Phase Alteration by Line. A terrestrial analog color broadcasting method. This method is used in various Western European countries (with the exception of France), Asian countries such as China, and Africa.
SDTV	An abbreviation for Standard Definition Television. This refers to standard television systems which do not satisfy the conditions for HDTV High-Definition Television.
SECAM	An abbreviation for SEquential Couleur A Memoire. A terrestrial analog color broadcasting method. This method is used in France, Eastern Europe, the former Soviet Union, the Middle East, Africa, and so on.
SVGA	A screen size standard with a resolution of 800 (horizontal) x 600 (vertical) dots.
SXGA	A screen size standard with a resolution of 1,280 (horizontal) x 1,024 (vertical) dots.
VGA	A screen size standard with a resolution of 640 (horizontal) x 480 (vertical) dots.
XGA	A screen size standard with a resolution of 1,024 (horizontal) x 768 (vertical) dots.
YCbCr	In component image signals for SDTV, Y is the brightness, while Cb and Cr indicate the color difference.
YPbPr	In component image signals for HDTV, Y is the brightness, while Pb and Pr indicate the color difference.
Aspect Ratio	The ratio between an image's length and its height. Screens with a horizontal:vertical ratio of 16:9, such as HDTV screens, are known as wide screens. SDTV and general computer displays have an aspect ratio of 4:3.

Interlace	Transmits information needed to create one screen by sending every other line, starting from the top of the image and working down to the bottom. Images are more likely to flicker because one frame is displayed every other line.
Pairing	Register devices in advance when connecting with Bluetooth devices to ensure mutual communication.



General Notes

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. No patent liability is assumed with respect to the use of the information contained herein. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

The contents of this guide may be changed or updated without further notice.

Illustrations in this guide and the actual projector may differ.

Restriction of Use

When this product is used for applications requiring high reliability/safety such as transportation devices related to aviation, rail, marine, automotive etc.; disaster prevention devices; various safety devices etc; or functional/precision devices etc, you should use this product only after giving consideration to including fail-safes and redundancies into your design to maintain safety and total system reliability. Because this product was not intended for use in applications requiring extremely high reliability/safety such as aerospace equipment, main communication equipment, nuclear power control equipment, or medical equipment related to direct medical care etc, please make your own judgment on this product's suitability after a full evaluation.

General Notice

EPSON and ELPLP are the trademarks or registered trademarks of Seiko Epson Corporation.

HDMI and High-Definition Multimedia Interface are the trademarks or registered trademarks of HDMI Licensing LLC.  HIGH DEFINITION MULTIMEDIA INTERFACE

WirelessHD, WiHD, and the WiHD logo are trademarks or registered trademarks of WirelessHD LLC.

THX and the THX 3D logo are trademarks of THX Ltd. which may be registered in some jurisdictions. All rights reserved.

The Full HD 3D Glasses™ logo and Full HD 3D Glasses™ are trademarks of the Full HD 3D Glasses Initiative™.

InstaPrevue and the InstaPrevue logo are the trademarks or registered trademarks of Silicon Image, Inc.

Bluetooth® and the Bluetooth logo are the trademarks of Bluetooth SIG, Inc.

Bluetopia® is provided for your use by Stonestreet One, LLC® under a software license agreement. Stonestreet One, LLC® is and shall remain the sole owner of all right, title and interest whatsoever in and to Bluetopia® and your use is subject to such ownership and to the license agreement. Stonestreet One, LLC® reserves all rights related to Bluetopia® not expressly granted under the license agreement and no other rights or licenses are granted either directly or by implication, estoppel or otherwise, or under any patents, copyrights, mask works, trade secrets or other intellectual property rights of Stonestreet One, LLC®.

© 2000-2012 Stonestreet One, LLC® All Rights Reserved.

MHL and the MHL logo are a trademark, registered trademark or service mark of MHL, LLC in the United States and/or other countries.

Other product names used herein are also for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

©SEIKO EPSON CORPORATION 2013. All rights reserved.

2

2D-to-3D Conversion 68

3

3D brightness 68
 3D depth 68
 3D display 68
 3D Format 75
 3D format 68
 3D Glasses 45
 3D Glasses charging port 52
 3D images 45
 3D settings 68
 3D viewing notice 68

A

Adjusting focus 27
 Adjusting RGB 35
 Adjusting the tilt 28
 Advanced 67, 69
 Air filter 89
 Air filter cover 89, 92
 Air filter replacement period 91
 Appearance 16
 Aspect 31, 68
 Auto iris 38, 67
 Auto setup 69

B

Brightness 33, 66, 67

C

CEC standards 61
 Child lock 71
 Cleaning the 3D Glasses 91
 Cleaning the air filter 89
 Cleaning the lens 91
 Cleaning the main unit 90
 Color Gamut 67
 Color mode 30, 66
 Color saturation 66
 Color Temp. 66
 Component 74
 Component port 19
 Configuration menu 65
 Connecting 19
 Connecting a computer 20
 Connecting MHL compatible devices 21
 Connecting smartphones or tablets 21
 Connecting video equipment 19

Connecting WirelessHD devices 20
 Contrast 66
 Control panel 8, 9
 Control panel lock 71
 Cool-down 26

D

Deep color 75
 Deinterlacing 68
 Device Connections 70, 71
 Device connections 56
 Diagonal Screen Size 68
 Direct power on 73
 Display background 74
 Display settings 74
 Displaying the test pattern 27

E

EPSON Super White 67
 Erase memory 43, 75
 Error/Warning indicators 77
 Exit Picture in Picture 76
 Extended menu 73

F

Focus 82
 Focus adjustment 27
 Focus ring 8, 27
 Frame Interpolation 69
 Full 31

G

Gain 35, 67
 Gamma 34, 67

H

HDMI Link 70
 HDMI link 61
 HDMI port 61
 HDMI Video Range 69
 HDMI1 port 19, 20, 21
 HDMI2 port 19, 20
 High altitude mode 73
 Hue 33, 67

I

Illumination 73
 Image 30
 Image menu 66
 Image Processing 69
 Indicators 77

Info menu	75	Projection	72
Input signal	74, 75	Projection size	18, 28
Inverse 3D Glasses	68	R	
K		Reception	56, 71
Keystone	29, 70	Refresh rate	75
Keystone distortion	29	Remote Control	11
L		Remote control	23
Lamp cover	8, 93	Rename Device Name	71
Lamp cover fixing screw	93	Rename memory	43, 75
Lamp hours	75	Replacement periods for consumables	91
Lamp replacement period	91	Replacement time	91
Language	74	Replacing consumables	92
Link indicator	52	Replacing the air filter	92
Load memory	43, 75	Replacing the lamp	93
Lock setting	71	Reset	67, 70, 71, 72, 74
M		Reset all	75
Memory function	42	Reset lamp hours	75, 94
Memory menu	75	Reset memory	43, 75
Menu	65	Reset menu	75
Menu color	74	Resolution	75
Menu position	74	RGB	67
Messages	74	RGBCMY	33, 67
Model no. display mode	74		
Motion detection	68	S	
N		Saturation	33, 67
Noise	83	Save memory	42, 75
Noise reduction	69	Scan mode	75
O		Select Color	74
Offset	35, 67	Serial number	75
Operating range	24	Settings menu	70
Operating time	94	Setup level	69
Operation	73	Sharpness	37, 66
Overscan	69	Signal menu	68
P		Skin tone	66
Pairing	46	Sleep mode	73
Panel Alignment	74	Source	26, 75
Pattern Color	74	Specifications	100
PC port	20	Standby confirmation	74
Picture in Picture	63, 76	Start Adjustments	74
Position	68	Startup screen	74
Power	26	Status	75
Power consumption	67	Sub menu	65
Power Off Link	70	Sub-screen	59
Power On Link	70	Subscreen Position	76
Power supply	25	Subscreen Size	76
		Subscreen Source	76
		Super-resolution	69
		Supported resolutions	97
		Swap Main/Sub	76
		Sync info	75

Sync. 68

T

Tint 66
Top menu 65
Tracking 68
Transmission range 56
Trigger Out 73

U

User button 72

V

Version 75
Video port 19
Video signal 74, 75
Viewing area 47

W

WiHD indicator 52
WiHD Mode 71
WirelessHD 52, 71

Z

Zoom 31
Zoom adjustment 28
Zoom ring 8